

H. Nearest Airport. (From any page) (p 3-23)

Should it be necessary to divert to the nearest airport, the 9 nearest airports to your present position (that meet the criteria in Setup page 3) are easily available

1. PUSH **NRST** Then PUSH **ENT**.

The waypoint page for the nearest airport is displayed on the right screen to include runway length, lighting, along with the bearing and distance to the airport. NR 1 is displayed in the upper right-hand corner. Continued flight with an airport selected will cause its nearest position to change to NR 2, NR 3, etc. until it will no longer be in the top 9. To view other "nearest" airports, PULL OUT the Right Inner knob and ROTATE clockwise. Each click will display the next airport. With the Right Inner knob pushed IN, rotating the knob will display the appropriate page of the displayed airport.

If you have a desire to always have the nearest airport displayed on the right screen, after step 1 above PRESS Right **CRSR** and ROTATE the Right Outer knob to highlight "NR 1" in the upper right-hand corner. Now as you continue on your trip the airport page will change to always reflect the nearest airport.

To go Direct to a "Nearest Airport"

1. PRESS **NRST** then PRESS **ENT**.

2. PULL OUT the Right Inner knob and rotate to scroll through the nearest 9 airports. When the desired airport waypoint is displayed:

3. PRESS **D→** then **ENT**.

4. PUSH IN the Right Inner knob.

NOTE: If the scale on the moving map page allows, a small "+" sign appears to portray the location of the airport in relation to the aircraft.

NOTE: To enter an instrument approach follow steps on the previous page.