

Mounting & Wiring

**ALL WIRES AWG
18 - 22 Gauge (0.6 - 1.0 mm)**

Screw Terminal
(On Case Back)



Sender Ground (E)



Sender Signal (D)

External Alarm Output
(ER-1A relay Control)

(A) Ground

(B) +12 or 24 VDC
from ignition switch
(with 1 amp fuse).