 


Lone Goose Aeroproducts Lone Goose T-01-V 5-in-1 Flight-Timer Specifications

Functions:

- 1. 12 or 24 hour clock (selectable)
 - 2. One count-up timer
 - 3. Three count-down timers
- Clock and all timers may be set independently and run consecutively**
Count-down timer memory may be set independently and run consecutively
- **Clock/Stopwatch Timer and Triple Countdown Timer Faces**

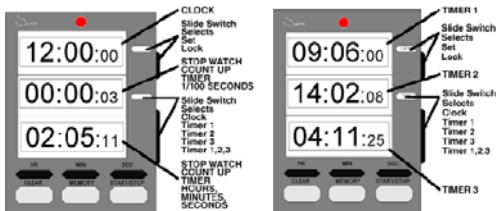


Specifications:

Overall Size:	2.6 X 3.6 inches
Screen Size:	1.5 X 1.75 inches
Numeral Size:	0.18 X 0.45 inches
Weight:	2.8 ounces (with battery)
Display Type:	LCD
Time-out Indicator Type:	High Visibility LED
Power Required:	1.5 volt, AAA battery
Clock:	Digital (12 or 24 hour)
Timers:	One digital count-up Three digital count-down
Memory:	Stores preset time for the three count-down timers

Lone Goose Flight Timer Operating Instructions (T-01-A)

1. To Set The Clock

- With the lower slide switch set in the "CLOCK" position, move the "SET/LOCK" switch to "SET".
- Press the "HR," "MIN," and "SEC" buttons to set the time.
- Move the "SET/LOCK" switch to "LOCK".
- Select 12 or 24 hour format by pressing "MEMORY" when the clock is set and the "SET/LOCK" switch is in the "LOCK" position.

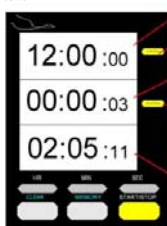

If the time is set before 12 noon, the "AM" will show in the upper left hand corner when the clock is in the 12 hour format and will not show in the 24 hour format.

2. To Operate Stopwatch

- Press "START/STOP" to begin digital stopwatch count.
- Press "START/STOP" again to stop digital stopwatch count
- Press "START/STOP" to resume digital stopwatch count
- Press "START/STOP" then "CLEAR" to clear stopwatch

3. To Operate Count-Down Timers


- Move lower slide switch from "CLOCK" position to one of the Count-Down Timer positions. The Count-Down Timer positions are:

- T1
- T2
- T3
- T123

4. To Set Count-Down Timers

- With the lower slide switch set in the "T1," "T2," or "T3" position, move the "SET/LOCK" switch to "SET".
- Press "HR" and/or "MIN" and/or "SEC" buttons for the desired count-down time cycle for that timer.
- Move the "SET/LOCK" switch to "LOCK".

5. To Set Count-Down Timer Memory

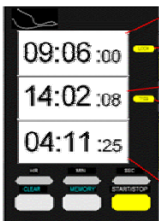

- With the lower slide switch set in the "T1," "T2," or "T3" position, move the "SET/LOCK" switch to "SET".
- Press "HR" and/or "MIN" and/or "SEC" buttons for the desired count-down time cycle for that timer.
- Press "MEMORY" to enter the time for that timer into memory. The word, "MEMORY" will be seen above the numbers in the upper left of the display.
- Move the "SET/LOCK" switch to "LOCK".

6. To Operate Count-Down Timers

- With the lower slide switch set in the "T1," "T2," or "T3" position, Press the "START/STOP" button to start the count down.
- When the end of the preset time is reached, the digital readout will flash, the audible alarm will sound, and the timer will start to count up.

- The memory of all count-down timers may be recalled together in the "T123" switch position. All count-down timers may be started at the same time in the "T123" switch position.

7. To Change Batteries

- Push UP on the battery cover at the rear of the timer case. Remove old battery and insert new battery with the negative end of the battery against the spring. The readout will flash, the audible alarm will sound when the new battery makes contact.
- Carefully** replace the battery cover. Align the cover and start the lower tab first, then push the top of the cover back and down.