

# MID-CONTINENT I N S T R U M E N T S

## INSTALLATION MANUAL AND OPERATING INSTRUCTIONS

### MD41-151X Series GPS Annunciation Control Unit For Garmin GTN 6XX/7XX Systems

MD41-1510	28vdc	Horizontal Mount
MD41-1512	14vdc	Horizontal Mount
MD41-1514	28vdc	Horizontal Mount, 5vdc lighting
MD41-1511	28vdc	Vertical Mount
MD41-1513	14vdc	Vertical Mount
MD41-1515	28vdc	Vertical Mount, 5vdc lighting



## REVISION DETAIL

<u>Rev.</u>	<u>Date</u>	<u>Detail</u>
A	02/21/11	Initial release.

# TABLE OF CONTENTS

## SECTION 1 GENERAL DESCRIPTION

- 1.1 INTRODUCTION
- 1.2 TECHNICAL SPECIFICATIONS
  - 1.2.1 MODELS
  - 1.2.2 PHYSICAL ATTRIBUTES
  - 1.2.3 PERFORMANCE

## SECTION 2 INSTALLATION CONSIDERATIONS

- 2.1 COOLING
- 2.2 EQUIPMENT LOCATION
- 2.3 ROUTING OF CABLES
- 2.4 LIMITATIONS

## SECTION 3 INSTALLATION PROCEDURE

- 3.1 GENERAL INFORMATION
- 3.2 UNPACKING AND INSPECTING
- 3.3 CABLE HARNESS
  - 3.3.1 LIGHTING CONTROLS
  - 3.3.2 SIGNALS AND POWER
  - 3.3.3 HARNESS VERIFICATION
- 3.4 MOUNTING

## SECTION 4 OPERATION

- 4.1 FRONT PANEL CONTROLS AND ANNUNCIATIONS
  - 4.1.1 CONTROLS
  - 4.1.2 ANNUNCIATIONS

## SECTION 5 CONFORMANCE

- 5.1 OPERATING INSTRUCTIONS
- 5.2 CONTINUED AIRWORTHINESS STATEMENT
- 5.3 ENVIRONMENTAL QUALIFICATION STATEMENT

## NUMBER LIST OF TABLES AND FIGURES

- 1.1 MODELS TABLE
- 1.2 PHYSICAL ATTRIBUTES TABLE
- 1.3 PERFORMANCE TABLE
- 3.3 CONNECTOR PINOUT FIGURE
- 3.3 SCHEMATIC PINOUT TABLE
- 3.4 OUTLINE DRAWING
- 3.5 WIRING DIAGRAM
- 4.1 FRONT PANEL FIGURE

## SECTION 1 GENERAL DESCRIPTION

### 1.1 INTRODUCTION

The MD41-151X series products are compact, self-contained Annunciation and Control Units (ACUs). The fully integrated control unit provides annunciation and mode selection for Global Positioning System (GPS) / Satellite-Based Augmentation System (SBAS) navigators. This series of the MD41 product family is specifically designed to work with the Garmin GTN 6XX/7XX series WAAS navigator systems and derivatives with equivalent functionality. It combines the necessary functions and annunciations required to interface with an approved system and provide regulatory compliance with GPS/SBAS minimum performance specifications.

Highlighted features include long-life LEDs used for all lighting, internally backlit selection switches, dead-front inactive annunciations, and the installation option for manual or automatic dimming. An external annunciation dimming adjustment is provided for balancing low-level light conditions.

### 1.2 TECHNICAL SPECIFICATIONS

#### 1.2.1 MODELS

<b>Unit Configurations</b>			
	<b>MD41-1510</b>	<b>MD41-1512</b>	<b>MD41-1514</b>
Orientation	Horizontal	Horizontal	Horizontal
Power Input	28VDC	14VDC	28VDC
Lighting Input	28VDC	14VDC	5VDC
	<b>MD41-1511</b>	<b>MD41-1513</b>	<b>MD41-1515</b>
Orientation	Vertical	Vertical	Vertical
Power Input	28VDC	14VDC	28VDC
Lighting Input	28VDC	14VDC	5VDC

**Table 1.1**

#### 1.2.2 PHYSICAL ATTRIBUTES

<b>Characteristics:</b>	
Weight:	0.26 pounds
Dimensions: (not including connector or mate)	3.2 inches long 3.25 inches wide 0.8 inches high
Mating Connector:	Positronic RD25F10JVL0 or equivalent (MCI P/N 7014517)
Instrument Panel Mounting:	Rear mount

**Table 1.2**

#### 1.2.3 PERFORMANCE

<b>Specifications:</b>	
Qualification:	FAA TSO-C129
Environmental Qualification:	RTCA DO-160D Environmental Category F2CAB(SM/UG)XXXXXXBABA(TT)M[A3C3]XXA* * Sections 16, 20, 21, and 22 comply with DO-160C, Section 8 (UG) complies with DO-160F
Power Requirement:	0.20 A max

**Table 1.3**

## **SECTION 2 PRE-INSTALLATION CONSIDERATIONS**

### **2.1 COOLING**

No direct cooling is required. As with any electronic equipment, overall reliability may be increased if the unit is not located near a high heat source or crowded next to other equipment. Means of providing some airflow would be considered beneficial.

### **2.2 EQUIPMENT LOCATION**

The MD41-151X series ACU must be mounted as close to the pilot's field of view as possible. Please reference the GPS/SBAS installation manual for approved locations. The unit depth, with connector attached, must also be taken into consideration when selecting an appropriate location. Allow at least 3 inches of space behind the unit for connector attachment and removal.

### **2.3 ROUTING OF CABLES**

Care must be taken not to bundle the MD41 series ACU logic and low level signal lines with any high energy sources. Examples of these sources include 400 HZ AC, Comm, DME, HF and transponder transmitter coaxial cables. Always use shielded wire when shown on the installation print.

Avoid sharp bends in cabling and routing near aircraft control cables. Also avoid proximity and contact with aircraft structures, avionics equipment, or other obstructions that could chafe wires during flight and cause undesirable effects.

### **2.4 LIMITATIONS**

The conditions and tests for TSO approval of this article are minimum performance standards. Those installing this article, on or in a specific type or class of aircraft, must determine that the aircraft installation conditions are within the TSO standards. TSO articles must have separate approval for installation in an aircraft. The article may be installed only according to 14 CFR part 43 or the applicable airworthiness requirements.

Note that this product is part of an incomplete system. It is designed to be installed with other applicable equipment to provide functionality for global positioning /satellite-based augmentation systems.

## SECTION 3 INSTALLATION PROCEDURES

### 3.1 GENERAL INFORMATION

This section contains interconnect diagrams, mounting dimensions and other information pertaining to the installation of the MD41 series ACU. After installation of cabling and before installation of the equipment, ensure that power is applied only to the pins specified in the interconnect diagram.

### 3.2 UNPACKING AND INSPECTING EQUIPMENT

When unpacking this equipment, make a visual inspection for evidence of any damage that may have incurred during shipment. The following parts should be included:

- |                                |                          |
|--------------------------------|--------------------------|
| a. GPS ACU –                   | MCI P/N MD41-151X series |
| b. J1 Connector Kit (25 pin) – | MCI P/N 7014517          |
| c. Installation Manual –       | MCI P/N 9017211          |

### 3.3 CABLE HARNESS

The MD41 cable harness should be made using 24 AWG wire or larger for all connections. Construct the cable harness with regards to the instructions below and using the Connector Pinout of Figure 3.3, Schematic Pinout of Table 3.3, and Wiring Diagram of Figure 3.5.

Refer to Section 2: Pre-Installation Considerations in regards to routing precautions.

#### 3.3.1 LIGHTING CONTROL

Button backlighting (pin 5) is powered (5vdc, 14vdc, or 28vdc) from the aircraft's panel lighting bus. This will allow manual dimming control of the button brightness using the aircraft's panel lighting control dimmer.

There are three options for annunciation brightness control. The annunciations options can be configured in the following ways:

- Full bright when active
  - connect aircraft power (same as pin 13 input) to pin 6
- Manual control using the aircraft's panel lighting control
  - connect the aircraft lighting bus power output (same as pin 5 input) to pin 6
  - (not available for aircraft with 5V lighting bus)
- Automatically dimming using the internal photocell of the unit
  - connect pin 23 ("Annun Bright/Dim Output") to pin 6

#### 3.3.2 POWER AND SIGNALS

Wire aircraft power and aircraft ground according to the associated ACU pins in the Pinout Diagram. Annunciation signals should be wired from the appropriate system inputs and outputs to the associated ACU pins in the Pinout Diagram.

#### 3.3.3 HARNESS VERIFICATION

With the MD41 ACU disconnected, turn on the avionics master switch and use an ohm-meter to verify that aircraft power and panel lighting bus power is on the appropriate pin(s) with appropriate voltage. Also verify that aircraft ground is applied to the appropriate pins.


### 3.4 MOUNTING

Refer to Section 2: Pre-Installation Considerations in regards to equipment location.

The MD41 ACU is designed for rear panel mounting only. A cutout should be made in the panel in accordance with Figure 3.4 for the unit bezel and two mounting holes. A cutout template is available from Mid-Continent Instruments (reference p/n 8014458) upon request.

Prior to completing the mounting of the unit in the aircraft, make sure to set the Annunciator Dim Adjustment if automatic dimming is configured for the annunciations. Ideally this procedure is best performed in a dark cockpit to simulate low-light/night time conditions. Connect the unit to the cable harness and turn on master power to the instrument panel and lighting bus. Use a small flat-bladed screwdriver to access the adjustment screw inside the hole on the bottom of the unit. Adjust the screw to increase or decrease the annunciator lighting brightness to a level appropriate with the rest of the panel instrument lighting.



Secure the indicator to the panel with two #4-40 x 3/8 flat head phillips screws.

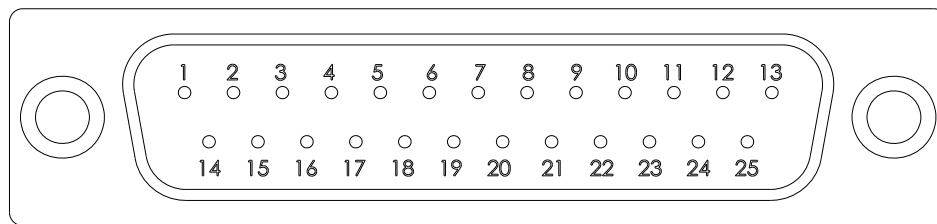


**FIGURE 3.3  
REAR VIEW OF 25-PIN D-SUB CONNECTOR (J1)**

Connector Pinout			
Pin #		Pin #	
1	Annun. GPS input	14	Reserved
2	Annun. VLOC input	15	Reserved
3	Annun. TERM input	16	Reserved
4	CDI Switch output	17	Reserved
5	Bright/Dim Button Backlight input	18	Reserved
6	Annun. Bright/Dim input	19	Reserved
7	Light Test	20	Annun. LOI input
8	Annun. WPT input	21	Reserved
9	Annun. APR input	22	Reserved
10	Annun. MSG input	23	Annun. Bright/Dim output
11	OBS input	24	Annun. SUSP input
12	OBS/SUSP Switch output	25	Ground
13	Aircraft Power (+14V/+28V)		

**TABLE 3.3  
SCHEMATIC PINOUT**

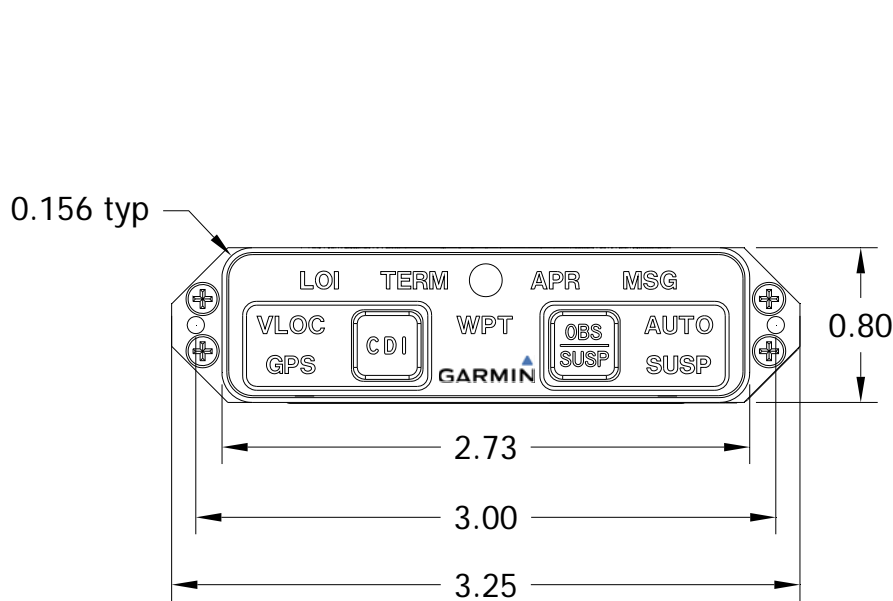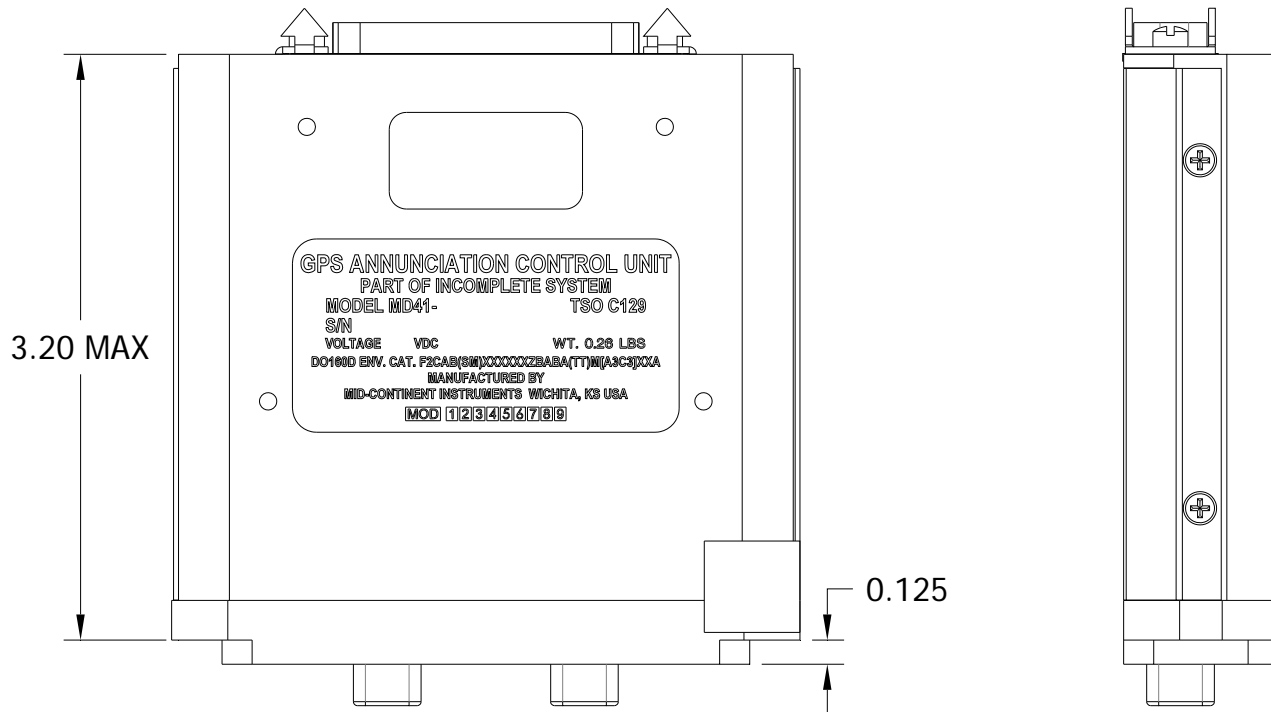

MD41-1510  
 MD41-1512  
 MD41-1514

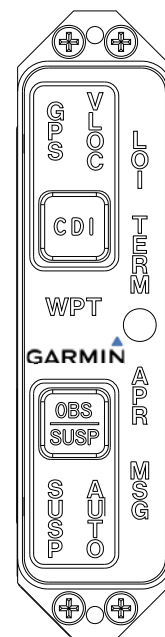


MD41-1511  
 MD41-1513  
 MD41-1515

Note: Use two 4-40 X 3/8" Flat Head Phillips Screws for Mounting

**FIGURE 3.4  
 OUTLINE DRAWING**



# MD41-151X Series ACU

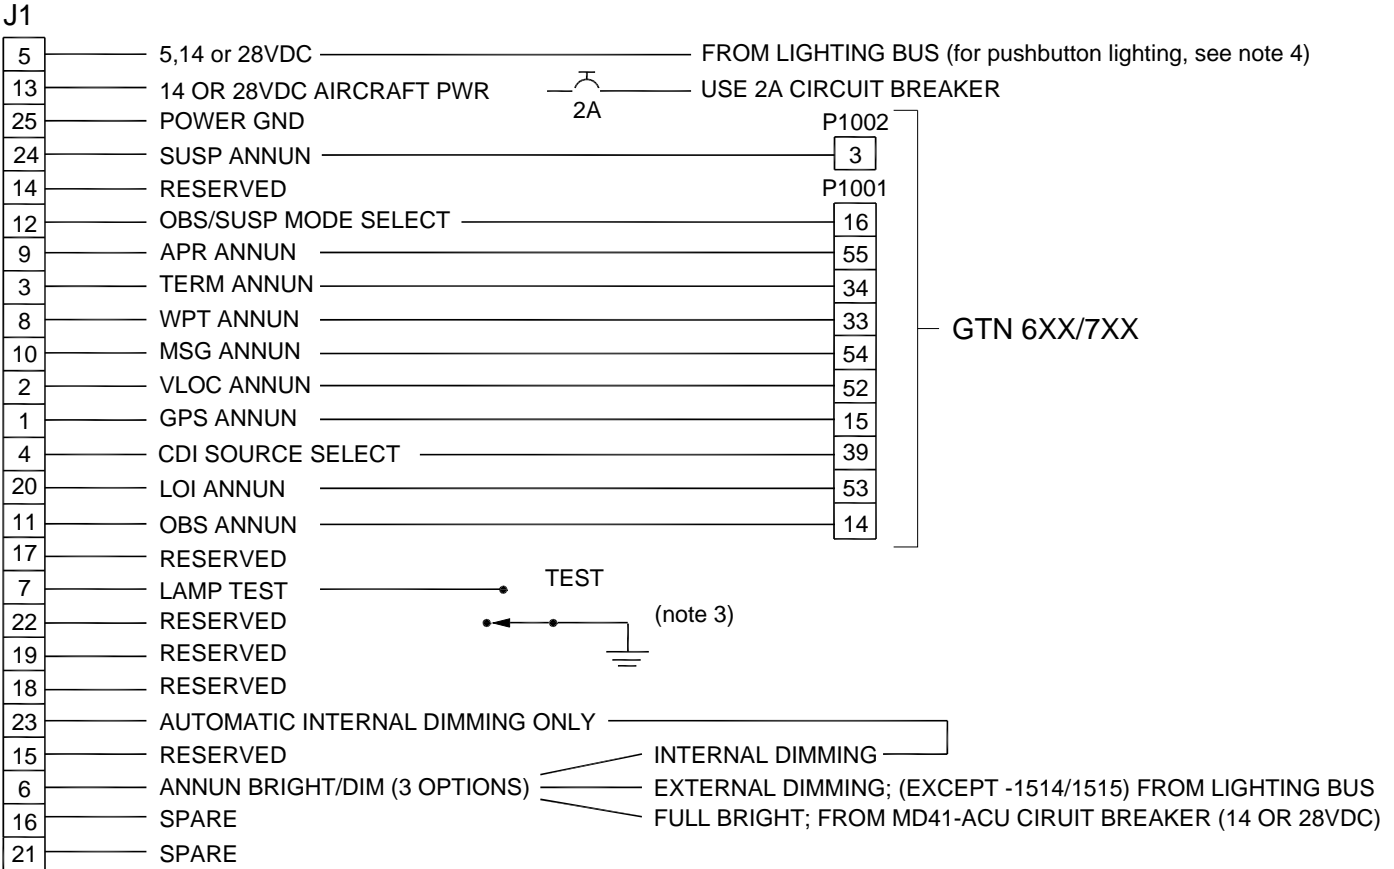

**NOTES:**

- 1) REFER TO GARMIN GTN 6XX/7XX INSTALLATION MANUAL FOR ACTUAL INSTALLATION.
- 2) ALL WIRING SHALL BE 24 AWG UNLESS OTHERWISE NOTED.
- 3) MOMENTARY SWITCH FOR TEST. (optional connection)
- 4) 5 VOLT FOR MD41-1514/1515, 14 VOLT FOR MD41-1512/1513, AND 28 VOLT FOR MD41-1510/1511.

**FIGURE 3.5  
WIRING DIAGRAM**

## SECTION 4 OPERATION

### 4.1 FRONT PANEL CONTROLS AND ANNUNCIATIONS

#### 4.1.1 CONTROLS

CDI	Momentary Switch, when pressed, will select VLOC, or GPS presentation on HSI/CDI
OBS/SUSP	Momentary switch, when pressed, will select OBS, or SUSP. In OBS MODE, this will enable OBS selection input from a remote HSI/CDI indicator. In SUSP mode, this will suspend automatic waypoint sequencing in the active flight plan.

All button/switch controls are white backlit. Refer to the operation manual of the GPS/SBAS System equipment manufacturer for additional operational and functional interface details.

#### 4.1.2 ANNUNCIATIONS

LOI	(AMBER)	Loss of Integrity: WAAS/GPS detects a position error or unable to calculate integrity of position
TERM	(GREEN)	Terminal: Indicates aircraft is navigating within 30 miles of the departure or arrival airport
APR	(GREEN)	Approach: Indicates the approach is active
MSG	(WHITE)	Message: Indicates message(s) is active
VLOC	(GREEN)	VOR/Localizer: NAV/ILS information presented on the HSI or CDI
GPS	(WHITE)	GPS information presented on the HSI or CDI
WPT	(WHITE)	Waypoint: Indicates reaching the arrival waypoint
AUTO	(WHITE)	Automatic sequencing of waypoints is active
SUSP	(WHITE)	Suspended: Automatic sequencing of waypoints has been suspended



FIGURE 4.1 FRONT PANEL

### 4.2 LIGHTING BEHAVIOR

Lighting behavior can be controlled in multiple ways. Button lighting is controlled manually using the aircraft's panel lighting bus controller. Annunciations can be configured to automatically dim using the internal photocell, configured to be on full bright, or controlled manually with external dimming (excluding -1514, -1515) using the aircraft's panel lighting bus controller when activated.

If using the internal dimming feature for the annunciations, the Annunciator Dim Adjust on the outside of the unit can be used to set the brightness at their dimmest level for best night-time viewing.

## SECTION 5 CONFORMANCE

### 5.1 CONTINUED AIRWORTHINESS STATEMENT

No periodic scheduled maintenance or calibration is necessary for continued airworthiness of the MD41 series ACU. If the unit fails to perform to specifications, the unit must be removed and serviced by Mid-Continent Instruments or their authorized designee.

### 5.2 ENVIRONMENTAL QUALIFICATION STATEMENT

**NOMENCLATURE:** GPS Annunciator Control Unit (ACU)

**MODEL NUMBER:** MD41-151X series **TSO NUMBER:** C129

**MANUFACTURERS SPECIFICATIONS:**

Minimum Performance Specifications: Test Specification (TS) 187, Test Data Sheet (TDS) 444

**QUALIFICATION STANDARD:** RTCA DO-160D (\* denotes qualification to RTCA DO-160C)

(\*\* denotes qualification to RTCA DO-160F)

CONDITIONS	SECTION	DESCRIPTION OF TEST
Temperature and Altitude	4	Category F2
Low Temperature	4.5.1	Operating Low Temp = -55C
High Temperature	4.5.2	Operating High Temp = +70C
Decompression	4.6.2	Altitude = 55K
Overpressure	4.6.3	-15,000 ft
Temperature Variation	5	Category C
Humidity	6	Category A
Operational Shock and Crash Safety	7	Category B
Vibration	8	Category S, Curve M Category U, Curve G** (SM/UG)
Explosion	9	Category X
Waterproofness	10	Category X
Fluids	11	Category X
Sand and Dust	12	Category X
Fungus	13	Category X
Salt Spray	14	Category X
Magnetic Effect	15	Category Z
Power Input*	16	Category B
Voltage Spike	17	Category A
Audio Frequency Conducted Susceptibility	18	Category B
Induced Signal Susceptibility	19	Category A
Radio Frequency Susceptibility*	20	Category T (conducted) Category T (radiated) [TT]
Emission of Radio Freq Energy*	21	M
Lightning Induced Transient Susceptibility*	22	Category A3 (pin injection) Category C3 (cable bundle) [A3C3]
Lightning Direct Effects	23	Category X
Icing	24	Category X
ESD	25	Category A