




RTX

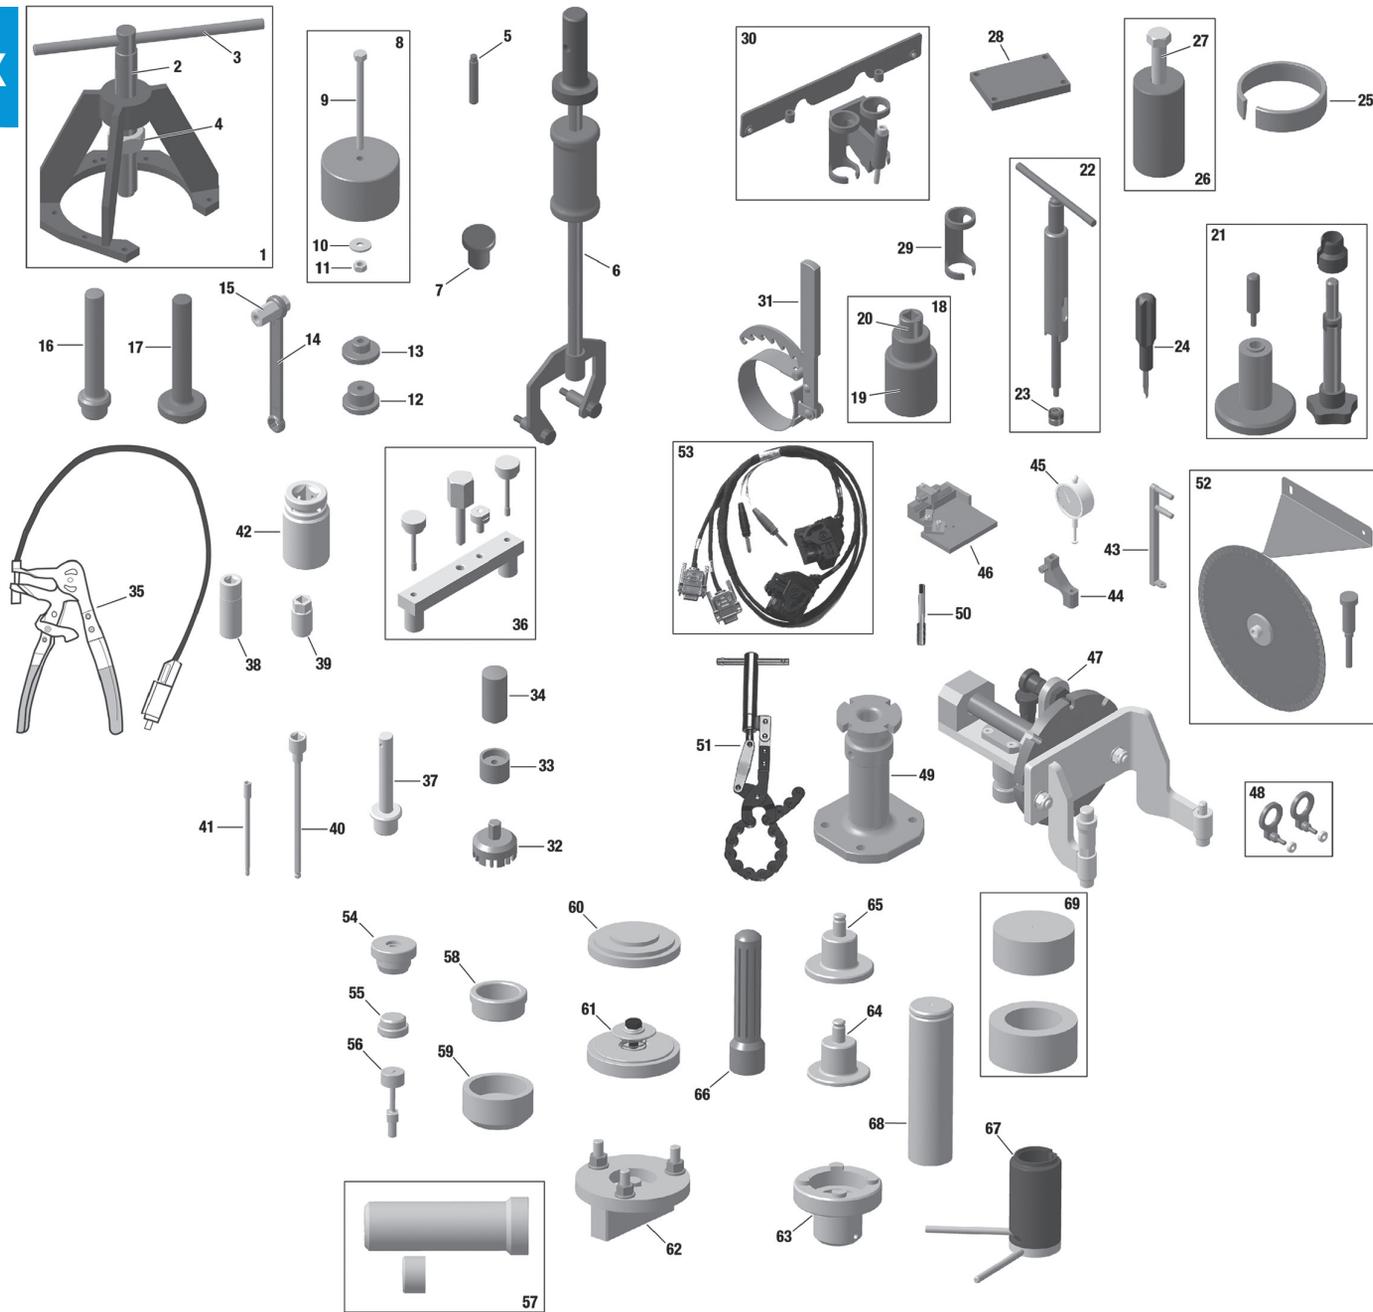

REPAIR TOOLS (NON CERTIFIED)

Item No.	Application
1-4	Roller bearing 25x25x15, oil seal 30x52x7
5	Crankshaft locking screw M8x50
6	Gearbox
7	Crankshaft (magneto side)
8-11	Ball bearing 15x32x8 - oil inlet flange, oil inlet cover
12	Needle bearing 22x28x12 - governor drive
13	Ball bearing 15x32x8 - governor drive
14	Ring wrench 10/13
15	Fixture for governor drive
16	Ball bearing 15x32x8, needle sleeve - governor drive
17	Oil seal 22x32x7 - governor drive
18-20	Drive gear, gearbox, gear set
21	Fitting of piston pin circlips
22-23	Fitting and removal of piston pin
24	Monohook clips puller
25	Piston diameter 84 mm / 33 in.
26-27	Puller magneto hub
28	To align cylinders
29-30	Installation/Removal of valve spring

Item No.	Application
31	Oil filter removal
32	Water pump impeller
33	Rotary seal ignition housing
34	Oil seal 12x30x7 water pump shaft
35	Spring type hose clip 28
36	Ignition housing
37	Oil seal 28x38x7 ignition housing
38	Pressure sensor Oil and Airbox
39	Temperature sensor Oil and Water
40	Engine mount
41	Intake manifold
42	Nut for sprag clutch housing
43	Crankcase
44-45	Dial gauge
46	Dial gauge adapter for valve seat inspect
47	Crankcase
48	Engine removal
49	Trestle support
50	Thread bent socket

Item No.	Application
51	Oil filter
52	Twist of crankshaft
53	ECU (Engine Control Unit)
54	Needle bearing, crankcase
55	Propeller shaft removal
56	Needle bearing removal
57	Hex. nut on propeller shaft
58	Damper clutch
59	Damper clutch
60	Damper clutch
61	Damper clutch
62	Propeller shaft bracket / mounting flange
63	Installation of overload clutch with damper clutch
64	Sealing ring, gearbox
65	Ball bearing, gearbox
66	Stamp
67	Retaining ring, propeller shaft
68	Ball bearing, propeller shaft
69	Overload clutch 2.5126 in 2.5126 in