

- Generally the fasteners on a ROTAX® engine are tightened with a torque wrench. Please look up the proper torque value in the appropriate maintenance manual.
- Each screw connection which has to be secured additionally (i.e. LOCTITE) is marked with a drop and symbol that corresponds to a list on each illustration. See fig. 1
- If safety wire is required it will be listed as a part number in the illustration.
- If the quantity is in brackets it indicates that the part is not absolutely necessary but optional on the respective engine type. See fig. 2
- A small letter added to the number refers to information at the end of the section. See fig. 2
- No number in the column parts per assembly indicates that this part is not planned for the respective engine.



Fig. 1

Explanations of symbols and statements in part number charts:

- N = Newly introduced part.
- s.v. = Still valid. Part was replaced by compatible component and can not be supplied any longer by the producer. Existing stock may be used.
- AR = As required. This generally refers to shims, hose, wires, and cable. Measure the amount you need before ordering. Many times there will be multiple listings of different lengths with the same part number. Use the individual part descriptions to determine the proper length needed.
- n.a. or NLA = No longer available, no replacement from Rotax. Part is no longer available due to incompatibility to current production or unavailability of part.
- CALL = Please call for price, **800-247-9653**.

NO	STATUS	PART #	DESCRIPTION	QTY		PRICE
				mod. 99	mod. 17	
1	N	937-969	ROTARY VALVE SHAFT	1a		\$1.00
2	s.v.	827-243	ROTARY VALVE SHAFT	(1)	1	\$1.00
3-5		965-153	IGNITION CABLE 1,5/7MM	AR	AR	\$1.00
3		-	IGNITION CABLE 480MM	AR	AR	
4		-	IGNITION CABLE 670MM	AR	AR	
5		-	IGNITION CABLE 440MM	AR	AR	
6	n.a.	827-465	THRUST WASHER	1b	1b	*
7		241-123	BOLT M6x14	1	1	NLA
8		243-300	HARNESS ASSEMBLY	1	1	

Fig. 2

a ROTARY VALVE FOR CONFIGURATION WITH ROTARY SEAL (582UL DCDI MOD. 99)
b USED ON SN XXXX.XX THRU XXXX.XX

THE ILLUSTRATIONS IN THIS PARTS CATALOG ARE DUPLICATED FROM THE CURRENT ROTAX® MANUALS AT THE TIME OF PRINTING AND ARE INTENDED FOR REFERENCE ONLY. THIS CATALOG IS NOT TO BE USED AS AN INSTRUCTION GUIDE FOR MAINTENANCE, ASSEMBLY, OR REPAIR TO ANY AIRCRAFT OR AIRCRAFT COMPONENT. PLEASE ENSURE YOU ARE USING THE MOST RECENT ROTAX® MANUALS BY VISITING OUR WEBSITE AT www.cps-parts.com/catalog/rtxpages/manuals.php.