


Trans-Cal Industries, Inc.

Model SSD120-(XX)N-RS232  
&  
Model SSD120-(XX)NE-RS232  
(Includes Mod. 1 Data)

All Solid-State  
Altitude Encoder/Digitizer

Owner/Installation Manual

FAA TSO-C88a Approved  
EASA ETSO-C88a Approved

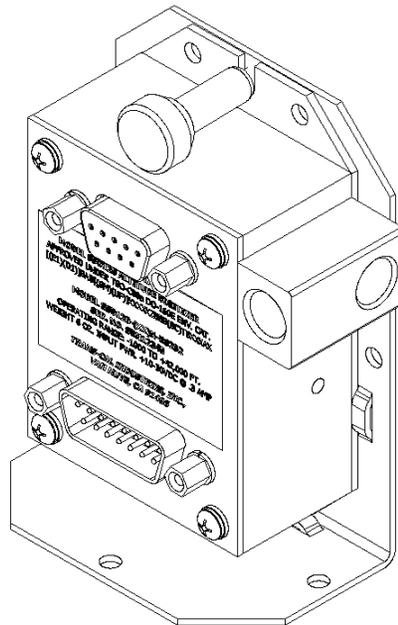

Trans-Cal Industries, Inc.  
16141 Cohasset St.  
Van Nuys, CA 91406  
(818)787-1221 \* FAX (818)787-8916

**Copyright:**

This document may not be reproduced, transmitted, or copied in any form without the prior written consent of Trans-Cal Industries, Inc. The data contained herein is subject to change without notice. Trans-Cal Industries hereby grants permission to download one copy of this manual and any subsequent revision, provided that electronic or printed copy contains this complete copyright notice. Trans-Cal Industries explicitly prohibits any unauthorized commercial distribution of this manual or any revision thereto.

© 2015 by Trans-Cal Industries, Inc.  
 16141 Cohasset Street  
 Van Nuys, CA 91406-2908

CAGE Code 57323

818/787-1221  
 FAX 818/787-8916  
 E-Mail: support@trans-cal.com  
[www.trans-cal.com](http://www.trans-cal.com)

**What's in the Box**

Qty.	Part Number	Description
1 ea.	SSD120-(XX)N(X)-RS232	Altitude Digitizer with RS232 Ports
1 ea.	882189	Owner/Installation Manual
1 ea.	DA-15S	15 Pin D-Subminiature Mating Connector
1 ea.	600016	15 Pin Connector Back Shell
1 ea.	DE-9P	9 Pin D-Subminiature Mating Connector
1 ea.	600017	9 Pin Connector Back Shell
1 ea.	600019	1/8 NPT Nylon tube fitting
1 ea.	600020	1/4" Tube Polypropylene tee fitting
1 ea.	103024	1/8-27NPT Nylon Plug

History of Revision

Revision	Date	Description
N/C	10/2007	Production release.
A	03/2008	Added §7.0 FAQ; §8.0 Known Compatibility Issues; §3.1 static port plug reference
B	07/2008	Added GNC300 data, reformat connection tables. Corrected Env. Qual. form to add F1 curve. Corrected footnote table IX. Update to rev. C outline dwg. Added ETSO reference, and adapter plate references.
C	10/2008	Expanded adapter plate image, added one-foot configuration data, corrected Figure 2.
D	12/2008	Added Mod 1 references to §10.3 and TDR950 isolation graphic to §10.5. Corrected Trimble/Garmin format disable message. Added Trig transponder info.
E	08/2009	Added Century Altitude Select data, rmvd 1' resolution references, added ECP-100 refs. & common serial connection quick refs table.
F	09/2010	Corrected pin-outs §6.3 GNC300 table. Revised copyright notice.
G	05/2015	Updated reproduction notice. Added KXP755 Data, Added §1.3.1 Limitations, Deviations & Compliance, §1.9 Serial Data offset & figure, update abbreviations. Added Silicone Sealant ref. to §3.1, and FAR 23.1325 reference. Revised NOTES & CAUTION statements §§3.0-4.7.

**Table of Contents**

Abbreviations, Acronyms and Symbols ..... 5

Section 1.0 Introduction ..... 6

    1.1 Scope ..... 6

    1.2 Equipment Description ..... 6

    1.3 General Specifications ..... 6

        1.3.1 Limitations, Deviations & Compliance ..... 7

            TSO/ETSO/RTCA Compliance Table ..... 7

        1.3.2 Operating Altitude ..... 7

        1.3.3 Accuracy ..... 7

        1.3.4 Mechanical Characteristics ..... 7

        1.3.5 Over Range ..... 7

    1.4 Parallel ICAO Altitude Data Port Specifications ..... 8

    1.5 Serial Altitude Data Port Specifications ..... 8

    1.6 Serial Port Altitude Data Resolution ..... 8

    1.7 Serial Communication Format ..... 8

    1.8 Serial Communication Protocol ..... 9

        1.8.1 UPS AT/Garmin AT/IIMorrow Nav. Devices ..... 9

        1.8.2 Trimble Garmin Navigation Devices Protocol ..... 9

        1.8.3 Northstar Navigation Devices Protocol ..... 9

        1.8.4 Magellan Navigation Devices Protocol ..... 9

        1.8.5 ARNAV Systems Protocol ..... 10

        1.8.6 UPS AT 618 Loran Devices Protocol (IIMorrow) ..... 10

    1.9 Figure 1 - Serial Data Offset ..... 11

Section 2.0 Operation ..... 12

    2.1 General ..... 12

    2.2 Operating Instructions ..... 12

Section 3.0 Installation ..... 13

    3.1 Mechanical Installation ..... 13

    3.2 Electrical Installation ..... 13

    3.3 Serial Altitude Data Port Test Equipment ..... 14

    3.4 Parallel ICAO Altitude Data Port Test Equipment ..... 14

Section 4.0 Calibration and Configuration ..... 15

    4.1 Calibration Overview ..... 15

    4.2 Required Equipment Span Adjust ..... 16

    4.3 Required Equipment Dynamic Calibration ..... 16

    4.4 Span Adjust Procedure ..... 16

    Figure 2 Altitude Digitizer Correspondence ..... 18

    4.5 Dynamic Calibration Adjustment Procedure using the ECP-100 ..... 19

    Figure 3 Dynamic Calibration Set-Up Using The ECP-100 ..... 20

    4.6 Hyper Terminal Set-Up on the IBM Compatible PC ..... 21

    4.7 Dynamic Calibration Adjustment Procedure using Hyper Terminal ..... 22

    4.8 Serial Port Software Configuration Using the ECP-100 ..... 24

    Figure 4 Serial Port Configuration Using the ECP-100 ..... 25

    4.9 Serial Port Configuration Using Hyper Terminal ..... 26

    4.10 Configuration and Calibration Command List ..... 27

    4.11 Error Correction Table ..... 27

Section 5.0 Tables I through XII Digitizer Interconnection ..... 28

    Table I Bendix/King ..... 28

    Bendix/King (Honeywell) KT 73 Transponder with Serial Altitude Data Input ..... 29

    Table II Cessna, Narco, Microair ..... 30

    Table III Garmin ..... 31

    Table IV Garmin ..... 32

    Table V Edo-Air, Genave, Collins, Radair ..... 33

    Table VI Bendix, Wilcox, UPS AT ..... 34

    Table VII Becker, Terra, Trig ..... 35

    Table VIII Honeywell ..... 36

    Tables IX and X Serial Data Connector and Protocol Selection ..... 37

    Table XI Quick Guide to Common Serial Data Interconnects ..... 38

    Table XII Parallel ICAO Altitude Data & Power Connector DA-15P ..... 38

Section 6.0 GPS/MFD & Miscellaneous Connection Data ..... 39

    6.1 UPS Aviation Technologies (IIMorrow) ..... 39

    6.2 Trimble ..... 40

    6.3 Garmin International..... 41

    6.4 ARNAV Systems, Inc. .... 42

    6.5 Century Flight Systems ..... 43

Section 7.0 Instructions for Continued Airworthiness ..... 44

Section 8.0 Adapter Plate Ordering Information ..... 44

Section 9.0 Frequently Asked Questions..... 45

Section 10.0 Known Compatibility Issues..... 48

    10.1 Honeywell KT 73 Transponder with Serial Altitude Data Input ..... 48

    10.2 Narco AT5A, AT6A, AT-50 and AT-50A Installations and SSD120-(XX)N Mod.1 ..... 48

    10.3 “Mod. 1” Installations ..... 48

    10.4 King KT-75 ..... 48

    10.5 S-Tec (Collins) TDR950 ..... 48

    10.6 Trans-Cal SSD120-(XX)N Backwards Compatibility..... 48

    10.7 SSD120-(XX)N-RS232 Compatibility to Competitor’s Products ..... 49

Wiring Harness Diagram TCI Part Number 881404 ..... 50

Span Adjust Block Diagram ..... 51

Dynamic Calibration Block Diagram ..... 52

Figure 5 Temperature vs. Warm-up Time..... 53

Outline Drawing ..... 54

Environmental Qualification Form..... 55

Part Number Builder ..... 56

Manufacturer Direct Warranty..... 57

**Abbreviations, Acronyms and Symbols**

<b>A</b>	Amperes
<b>AC</b>	Advisory Circular
<b>ARINC</b>	Aeronautical Radio Incorporated
<b>ASCII</b>	American Standard for Coded Information Interchange
<b>ATCRBS</b>	Air Traffic Control Radar Beacon System
<b>bps</b>	Bits per second.
<b>CFR</b>	Code of Federal Regulations
<b>C<sub>R</sub></b>	Carriage Return
<b>EASA</b>	European Aviation Safety Agency
<b>EEPROM</b>	Electronically Erasable Read Only Memory
<b>EIA</b>	Electronic Industries Association
<b>ETSO</b>	European Technical Standard Order
<b>FAA</b>	Federal Aviation Administration
<b>FAR</b>	Federal Aviation Regulation
<b>ft.</b>	Distance in feet.
<b>GPS</b>	Global Positioning System
<b>H/W</b>	Hardware
<b>Hz</b>	Hertz
<b>ICAO</b>	International Civil Aviation Organization
<b>I.F.F.</b>	Identification Friend or Foe
<b>In. Hg.</b>	Pressure in Inches of Mercury
<b>Kbps</b>	Kilobits per Second
<b>KHz</b>	Kilohertz
<b>L<sub>F</sub></b>	Line Feed
<b>LSB</b>	Least Significant Bit
<b>mA</b>	Milliamperes
<b>max.</b>	Maximum
<b>MB</b>	Millibar
<b>MHz</b>	Megahertz
<b>MFD</b>	Multi-Function Display
<b>MSL</b>	Mean Sea Level
<b>min.</b>	Minimum
<b>ms</b>	Time in milliseconds.
<b>MSB</b>	Most Significant Bit
<b>mW</b>	Milliwatt
<b>NIST</b>	National Institute of Standards and Technology
<b>oz</b>	Ounce
<b>P/N</b>	Part Number
<b>psi</b>	Pounds per Square Inch
<b>RAM</b>	Random Access Memory
<b>RS</b>	Recommended Standard
<b>RTCA</b>	Radio Technical Commission for Aeronautics
<b>SAE</b>	Society of Automotive Engineers
<b>sec.</b>	Time in seconds.
<b>SSR</b>	Secondary Surveillance Radar
<b>S/W</b>	Software
<b>TCI</b>	Trans-Cal Industries, Inc.
<b>TIA</b>	Telecommunication Industries Association
<b>TSO</b>	Technical Standard Order
<b>Vdc</b>	Volts Direct Current
<b>VSI</b>	Vertical Speed Indicator
<b>W</b>	Watt
<b>Ω</b>	Electrical resistance measured in Ohms.
<b>°C</b>	Temperature in degrees Celsius.
<b>±</b>	Plus or minus.
<b>§</b>	Section

**Section 1.0 Introduction**

**1.1 Scope**

This manual provides detailed installation, calibration and operating instructions for Trans-Cal Industries' Model SSD120-(XX)N-RS232 and SSD120-(XX)NE-RS232<sup>1</sup> series of altitude encoder/digitizer. This manual assumes use by competent, qualified avionics professionals utilizing installation methods in accordance with 14CFR and other industry accepted installation practices.

**1.2 Equipment Description**

Approved under FAA TSO-C88a and EASA ETSO-C88a the Model SSD120-(XX)N-RS232 and SSD120-(XX)NE-RS232 is an all solid-state electronic device which, when connected to an aircraft static and electrical system, converts pressure altitude information into parallel and serial digital data.

The parallel digital altitude data protocol is set forth in the ICAO International Standard for SSR Pressure Altitude Transmission. In accordance with U.S. National Standards for Common System Component Characteristics for the I.F.F. Mark X (SIF)/Air Traffic Control Radar Beacon System SIF/ATCRBS.

The serial altitude data is provided on (2) two asynchronous RS232 output ports. The serial data protocol is individually selectable for each port and may be used to provide pressure altitude data to GPS or other on board navigation devices. Refer to **Table IX, Table X** and **§4.8**.

**1.3 General Specifications**

This equipment has been tested and will utilize power in accordance with MIL-STD-704E for 28 Vdc systems.

Operating Voltage: Model SSD120-(XX)N-RS232 Model SSD120-(XX)NE-RS232 <sup>2</sup>	+12 to 30 Vdc +12 to 30 Vdc
Operating Current all models:	0.25 Amps at 14Vdc 0.27 Amps at 28Vdc
Operating Temperature: Model SSD120-(XX)N-RS232 Model SSD120-(XX)NE-RS232	-20° to +70°C (-4° to +158°F) -55° to +70°C (-67° to +158°F)
Storage Temperature (non-operating) all models:	-65° to +85°C (-85° to +185°F)
Warm-up time:	0 Seconds at +20°C (+68°F) and higher. See Figure 2 for low temp warm-up times.
Weight:	5.1 oz. (6 oz. with tray P/N: 103018)

<sup>1</sup> SSD120-(XX)NE-RS232 Extended operating temperature range: -55° to +70°C.

<sup>2</sup> Longer warm-up times will be experienced when operated at +12 Vdc.

**1.3.1 Limitations, Deviations and Compliance**

**NOTE:**

The conditions and tests for TSO approval of this article are minimum performance standards. Those installing this article, on or in a specific type or class of aircraft, must determine that the aircraft installation conditions are within the TSO standards. TSO articles must have separate approval for installation in an aircraft. This article is to be installed in accordance with 14 CFR part 43 or the applicable airworthiness requirements.

**NOTE:**

DO-160E lightning induced transient susceptibility tests were not conducted on this device and it is the responsibility of the installing agency to substantiate compliance with FAR25.1316. Advisory Circular AC20-136B provides guidance related to the protection of aircraft electrical systems from the effects of lightning.

**Deviation:**

TSO-C88a specifies RTCA/DO-160A for environmental testing. TCI utilized RTCA/DO-160E in testing this device. DO-160E provides an equivalent level of safety and meets or exceeds the standard environmental test condition requirements of TSO-C88a and DO-160A.

**TSO/ETSO/RTCA Compliance Table**

<b>FAA TSO</b>	C88a
<b>EASA TSO</b>	C88a
<b>RTCA DO-178 Software</b>	Non-Essential Category H/W - S/W P/N: 103022rB-700001rC
<b>RTCA DO-160E Environmental*</b>	D1BAB[(SM)(UF)]XXXXXXXXZBBB(BC)TTBXXXAX

\*See Environmental Qualification form for specific data.

**1.3.2 Operating Altitude**

Model	Operating Altitude
SSD120-30N( )-RS232	-1000 to +30,000 feet.
SSD120-35N( )-RS232	-1000 to +35,000 feet.
SSD120-42N( )-RS232	-1000 to +42,000 feet.

**1.3.3 Accuracy**

Digitizer accuracy is ±50 feet from -1000 to +30,000 feet, and ±75 feet from 30,100 to +42,000 feet, when measured from the altitude transition points of the ICAO code and referenced to 29.92 In. Hg. (1013 MB.) See **Figure 2** and **§4.0**.

**1.3.4 Mechanical Characteristics**

Model Number	Dimensions	Weight
Model SSD120-30N( )-RS232	See <i>Outline Drawing</i>	5.1 oz.
Model SSD120-35N( )-RS232	See <i>Outline Drawing</i>	5.1 oz.
Model SSD120-42N( )-RS232	See <i>Outline Drawing</i>	5.1 oz.

P/N: 103018 mounting tray adds 1 oz. to the weights listed above.

**1.3.5 Over Range**

The SSD120-(XX)N( )-RS232 series of altitude digitizers will not be damaged when operated beyond their specified maximum altitude up to 100,000 feet MSL, (0.1581psi) or over pressured to -5721 feet (18psi) maximum.

### **1.4 Parallel ICAO Altitude Data Port Specifications**

Code Format: In accordance with U.S. National Standard for Common System Component Characteristics for the IFF Mark X (SIF) Air Traffic Control Radar Beacon System, SIF/ATCRBS.

Driver Description: The parallel altitude data output is provided by the “uncommitted” collectors of a transistor array and must be “pulled-up” through a resistive load by the transponder.

Pull-Up Voltage: +3 to 40Vdc.

Maximum Sink Current: 50mA.

Maximum Cable Length: 4000 ft. (1219 meters)

Input Signal Requirement: Pin 6 (strobe or signal common) must be either grounded or connected to the transponder.

### **1.5 Serial Altitude Data Port Specifications**

Electrical Format: Conforming to the TIA/EIA RS-232C standard.

Logic Levels: “0”, +9 Vdc. Logic “1”, -9 Vdc.

Driver Output Maximum Voltage:  $\pm 25$  Vdc.

Driver Load Impedance: 3K $\Omega$  typ.

The RS232E standard recommends one receiver per serial port.

Maximum Cable Length: 50 Feet. (15.24 meters)

Code Format: ASCII

Communication System: Simplex

Transmission Method: Asynchronous. (Talk only.)

Baud Rate: Selectable, 1200 bps to 9600 bps.

Transmission Rate: 1/sec.

### **1.6 Serial Port Altitude Data Resolution**

The default resolution of the altitude digitizer serial data is 100 feet. To enable 10-foot resolution, connect pin 2 of the 9-pin D-Subminiature connector to ground (see **Table IX.**) The serial port resolution may also be configured via software, see **§4.8.**

### **1.7 Serial Communication Format**

Model SSD120-(XX)N( )-RS232 carries out serial communication asynchronously with the “Start/Stop” system. The specifics of the format, ie. the number of data bits, baud rate etc., is determined by the protocol selected. The default protocol is 1200bps, 8 data bits, 1 stop bit and no parity.

## **1.8 Serial Communication Protocol**

Refer to **Table IX & X** and **§4.8**

Serial data protocol is user selectable by grounding or leaving open pin 6 or pin 7 of the 9 pin D-Subminiature connector, or by selecting protocols via software see **§4.8**.

### **1.8.1 UPS AT/Garmin AT/IIMorrow Nav. Devices**

Leaving pin 6 and 7 of the 9 pin connector open results in a protocol compatible with UPS Aviation Technologies' (IIMorrow) Navigation devices. The Digitizer will send a seventeen byte message beginning with # AL, then a space followed by five altitude bytes; the letter "T" and the sensor temperature, two checksum bytes and a carriage return. (1200bps, 8 data bits, 1 stop bit, no parity) The following is an example of the serial message for UPS AT (Garmin AT) (IIMorrow) devices.

Message	Definition
#AL +00800T+25D9 <sup>C<sub>R</sub></sup>	Altitude 800 feet

### **1.8.2 Trimble Garmin Navigation Devices Protocol**

Grounding pin 7 of the 9 pin connector results in a protocol compatible with some navigation devices manufactured by Trimble and Garmin. The Digitizer will send a ten-byte message. The message begins with ALT followed by a space and five altitude bytes; concluding with a carriage return. (9600bps, 8 data bits, 1 stop bit, no parity) The following are examples of serial messages for Trimble or Garmin devices:

Message	Definition
ALT -9900 <sup>C<sub>R</sub></sup>	Digitizer disabled.
ALT 10500 <sup>C<sub>R</sub></sup>	Altitude 10,500 feet

### **1.8.3 Northstar Navigation Devices Protocol**

Grounding pin 6 of the 9 pin connector results in a protocol compatible with some navigation devices manufactured by Northstar and Garmin. The Digitizer will send a 10-byte message. The message begins with ALT followed by a space and five altitude bytes; concluding with a carriage return. (2400bps, 8 data bits, 1 stop bit, no parity.) The following are examples of serial messages for these devices:

Message	Definition
ALT 02500 <sup>C<sub>R</sub></sup>	Altitude 2500 feet.
ALT -2500 <sup>C<sub>R</sub></sup>	Digitizer disabled.

### **1.8.4 Magellan Navigation Devices Protocol**

Grounding both pins 6 and 7 of the 9 pin connector results in a protocol compatible with some navigation devices manufactured by Magellan. The Digitizer sends a seventeen-byte message beginning with \$MGL, followed by a +/- sign and five altitude digits, then T+25, a checksum and concludes with a carriage return. (1200bps, 7 data bits, 1 stop bit, even parity.) The following is an example of a serial message for Magellan devices:

Message	Definition
\$MGL+02500T+250C <sup>C<sub>R</sub></sup>	Altitude 2500 feet.

**1.8.5 ARNAV Systems Protocol**

Leaving pins 6 and 7 of the 9 pin connector open, the ARNAV Systems protocol *MUST* be software selected see §4.6 for protocol selection details. Once selected, the Digitizer will send a 24-byte message. Beginning with a \$PASHS followed by a comma and ALT, then a +/- sign followed by five altitude digits (in meters,) then an asterisk and a checksum followed by a carriage return and a line feed. (9600bps, 8 data bits, 1 stop bit, no parity.) The following is an example of an ARNAV serial altitude message:

Message	Definition
STX\$PASHS,ALT,+00033*1B <sub>R</sub> <sup>C</sup> <sub>F</sub> <sup>L</sup> ETX	Altitude 33 meters.

**1.8.6 UPS AT 618 Loran Devices Protocol (IIMorrow)**

Leaving pins 6 and 7 of the 9 pin connector open, the UPS AT 618 Loran devices protocol *MUST* be software selected see §4.6 for protocol selection details. Once selected, the Digitizer will send a seventeen byte message beginning with # AL, then a space followed by five altitude bytes; the letter “T” and the number “25”; two checksum bytes and a carriage return. (1200bps, 7 data bits, 1 stop bit, odd parity). The following is an example of an UPS AT 618 Loran serial altitude message:

Message	Definition
#AL +00800T+25D9 <sub>R</sub> <sup>C</sup>	Altitude 800 feet

**1.9 Figure 1 - Serial Data Offset**

When using serial data from the altitude encoder for ADS-B or other navigational instrument installations, verify that the 10' resolution data is selected to prevent data conflicts.

It is important to note that the Serial RS232 data is offset from the parallel grey code data by 50'.

The calibration requirement for altitude encoders requires the 100' resolution grey code to transition at the 50' mark with a tolerance of  $\pm 125'$ .

**Figure 1** displays the ideal case for 11,000 feet.

The ideal altitude encoder grey code output will read 11,000' when the primary flight altimeter reads from 10,950' to 11,050' with a tolerance of  $\pm 125'$ .

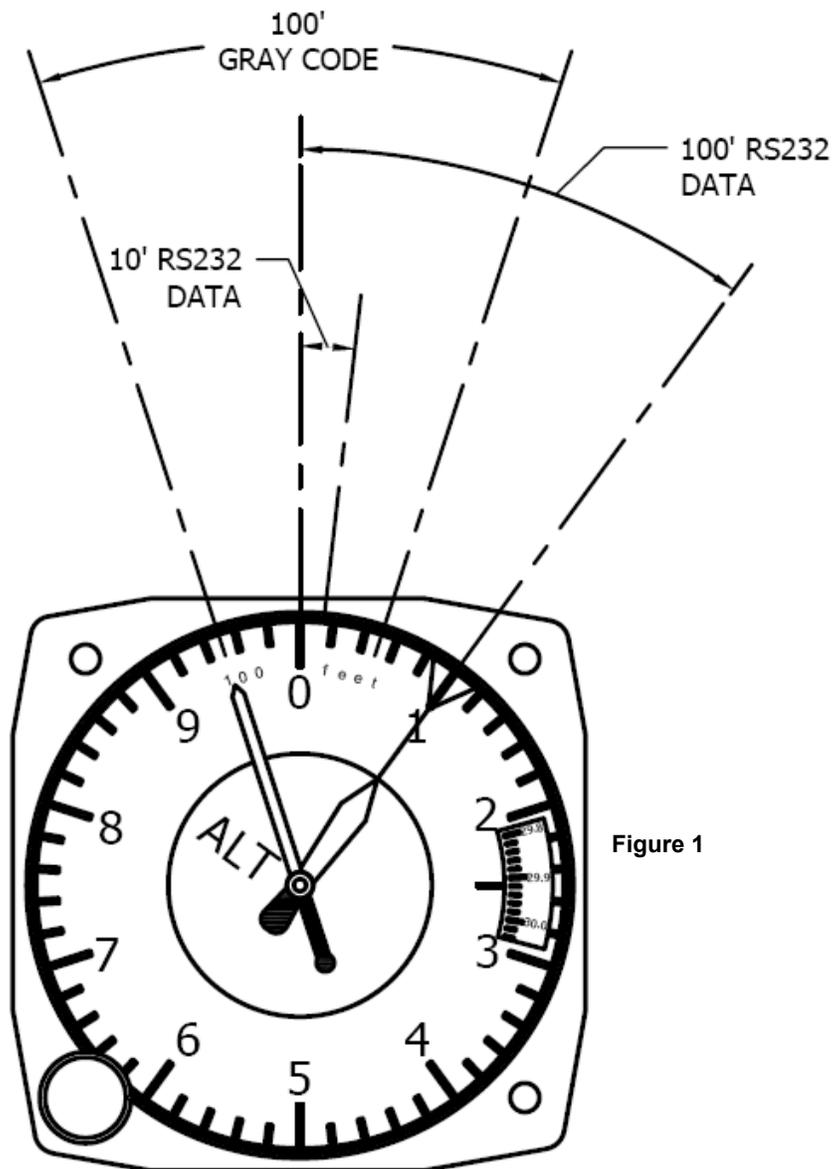


Figure 1

The encoder's 10-foot RS232 data will output 11,000' from 11,000' to 11,010' nominally.

The encoder's 100-foot RS232 data will read 11,000' from 11,000' to 11,100' nominally.

## Section 2.0 Operation

### 2.1 General

The SSD-120(XX)N( )-RS232 series of altitude digitizers are designed to be mounted within a pressurized or non-pressurized, but temperature controlled area within aircraft operating up to 42,000 feet MSL. Usually remotely located, the digitizer is fully automatic in operation. The parallel data output is controlled by the transponder while the serial altitude data is transmitted asynchronously. (Half duplex, talk only. Full duplex in calibration and configuration modes only.)

### 2.2 Operating Instructions


#### Parallel Data:

Place the transponder in mode "C", altitude-reporting mode, and apply power to the transponder and to the digitizer. In some installations the digitizer will automatically be supplied power when the transponder is energized; in others, power to the digitizer may be through a separate circuit breaker. If power to the digitizer is provided directly from the aircraft's avionics buss, follow the power-up procedures recommended by the transponder manufacturer. All parallel outputs will be pulled low for a self-test (3 seconds) at power up, then assume the value for the present input pressure. *Please note,* a short warm-up time may affect the actual data enable time. At 0°C a 30 second period is required before the data will enable.

In some installations, the transponder controls the digitizer by enabling and disabling its output. In other installations, the digitizer's output is not controlled by the transponder and is continuously enabled, (Digitizer pin 6 is grounded.)

#### Serial Data:

The serial communication is fully automatic and transmission begins after the self-test is complete. Strobing (pin 6) the parallel data output of the digitizer will not affect the serial data transmission.

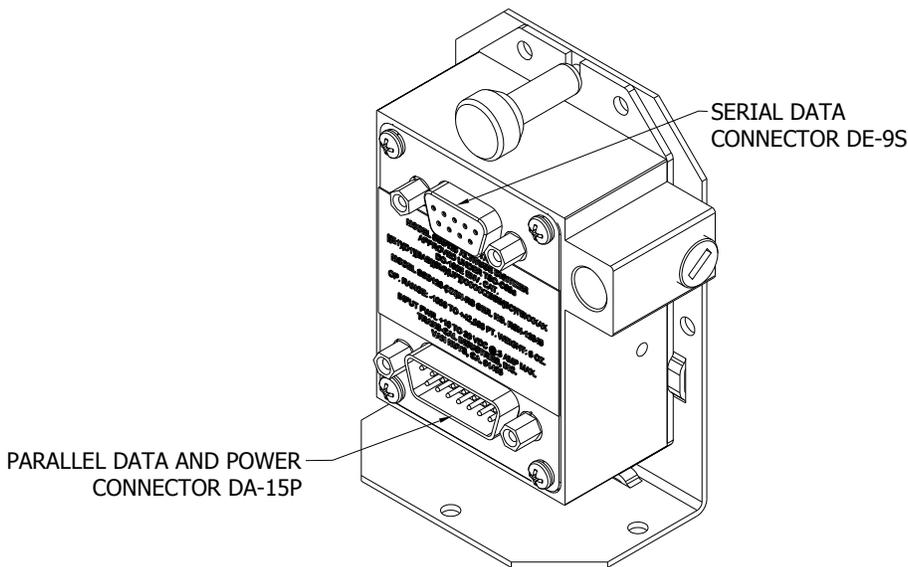

## **Section 3.0 Installation**

### **3.1 Mechanical Installation**

The SSD120-(XX)N( )-RS232 should be installed in a manner consistent with the requirements of 14 CFR part 43. Good workmanship and installation practices in accordance with the instructions given in this publication are to be observed. To verify the digitizer has been properly and safely installed, the installer should perform a visual inspection and conduct an overall operational check of the system prior to flight.

The SSD120-(XX)N( )-RS232 series of digitizer may be mounted in any attitude within the internal structure of the aircraft. DO NOT mount the digitizer in the direct air stream of either hot or cold air ducts. The mounting position should allow for a short static pressure line from the digitizer to the altimeter, access to the digitizer's adjustments, and ample room for a service loop for the interconnecting cabling. The SSD120-(XX)N-RS232 is provided with two static port inlets, either or both may be used to connect the digitizer to the aircraft static system. If only one static port inlet is used, install the 1/8-27NPT plug included with the connector kit into the unused static port. Apply an anti-seize pipe sealant (not included) or equal to the plug. Exercise care to prevent excess sealant from plugging the inlet to the pressure sensor. **Loctite RTV Clear Silicone Sealant (59530)** was used to seal static line connections during all environmental testing at Trans-Cal.

Avoid mounting the SSD120-(XX)N( )-RS232 near any equipment operating with high pulse currents or high power outputs such as strobe power supplies, radar and satellite communications equipment.

On SSD120-(XX)NE-RS232 devices operating below -20°C, use metal fittings with anti-seize sealing compound on all static line connections. The coefficient of thermal expansion for nylon is roughly three times that of aluminum. Nylon and plastic fittings will leak at low temperatures due to thermal contraction.

To prevent the accumulation of condensation in the digitizer pressure sensor, locate this device away from the lowest section of the static system, and ensure a proper condensation trap and system drain is installed and functional, reference FAR 23.1325. Verify that moisture resulting from condensation will run away from the digitizer electrical connections.

Use #4-40 or #6-32 machine screws, sheet metal screws, or pop rivets to attach the digitizer or the mounting tray to the airframe. Secure mating connectors to the digitizer housing using the #4-40 screws provided. Refer to the outline drawing for mechanical dimensions.

Adapter plates are available to convert older Trans-Cal and competing digitizer installations for use with the SSD120-(XX)N(X)-(X) series of altitude digitizers. See ordering information in §8.0.

### **3.2 Electrical Installation**

**NOTE:** Proper solder or crimp techniques should be observed when attaching wires to the mating connectors. Failure to do so could result in damage, intermittent operation or non-operation of the digitizer. Shielded cable is recommended for both serial and parallel data wiring harnesses. Wire and harnesses should be installed in such a way that the weight of the cable does not exert a force on the connector pins. Harnesses must be fully supported to prevent movement and should be protected against chaffing.

**CAUTION!**

**AFTER INSTALLING THE WIRING HARNESS AND BEFORE INSTALLATION OF THE DIGITIZER, A CONTINUITY CHECK OF ALL WIRES IN THE HARNESS SHOULD BE MADE TO VERIFY HARNESS CONSTRUCTION. A TEST SHOULD THEN BE MADE WITH THE AIRCRAFT POWER SUPPLIED TO THE DIGITIZER'S CONNECTOR TO VERIFY POWER, GROUND AND DATA ARE ROUTED TO THE CORRECT PINS AS DETAILED IN THE OUTLINE DRAWING AND TABLES IX AND XII. REMOVE POWER BEFORE INSTALLING THE DIGITIZER.**

The digitizer is designed to operate with either a +14 or 28 Vdc power source. These voltages may be A+ switched power provided by the transponder or may be provided by the avionics buss. If using the avionics buss, protect the circuit with a ½ amp fuse or circuit breaker.

Parallel Data Connection (Table XII lists the pin assignments for the ICAO parallel data.)

The outline drawing provides electrical connector pin/function information. Use this data when connecting the digitizer to the transponder. In some installations where older transponders are used, the transponder may not provide an "altitude disable" function. In this case, an instrument panel mounted switch for this function may be required.

Serial Data Connection (Table IX lists the pin assignments for the serial port connector.)

Connect the TxD1 or TxD2 (transmit data) from the 9-pin D-Subminiature connector to the RxD (receive data) port on the GPS or other navigation device. All grounds on the 9 pin D-subminiature connector are internally connected to ground and may be used to ground protocol pins, as well as provide data ground to the receiving GPS or other device. Pin 3 (RxD) of the 9-pin connector is used for calibration only.


**3.3 Serial Altitude Data Port Test Equipment**

The output of the serial port may, or may not be directly displayed by the GPS or other device receiving the serial data. There are several ways to test the output of the serial port:

- a) Use a TCI Model ATS-400 Test Set or ECP-100 Programmer to display the serial altitude data.
- b) Connect to an open serial port on a personal computer using serial data capture software such as PROCOMM™, VERSATERM™, SOFTWARE WEDGE™, TERMINAL (Windows® 3.x) or HYPERTERMINAL (Windows® 95, 98, 2000 or XP.)
- c) Use a dedicated serial data test box such as the BLACK BOX™ RS232 Monitor.
- d) Test for serial output using an oscilloscope to view the 9 Vdc square wave group transmitted about twice a second.

**3.4 Parallel ICAO Altitude Data Port Test Equipment**

The output of the parallel ICAO altitude data may be monitored by any number of transponder ramp test sets, which allow display of the ICAO altitude digitizer/encoder code. The IFR Model ATC-600A Portable Transponder Test Set is one example. Alternatively, the Trans-Cal Industries' ATS-400 or EET-200 may be used to display the parallel data directly from the digitizer.

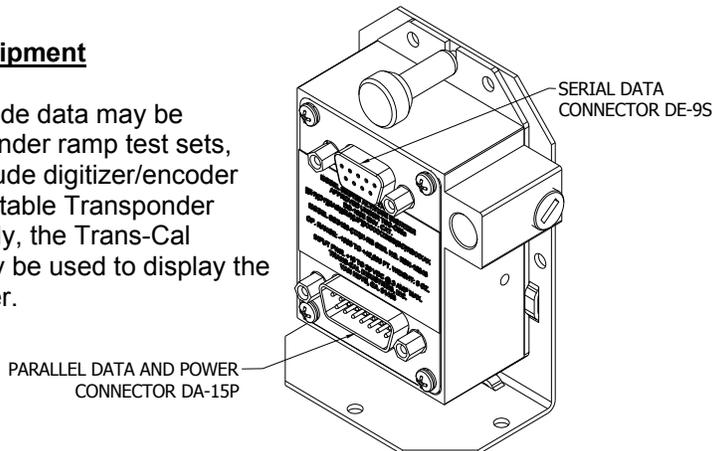

## Section 4.0 Calibration and Configuration

### 4.1 Calibration Overview

**Reference: FAR 91.217; FAA Advisory Circular AC 43-6C  
FAR 91.411; FAR 43-Appendix E and F  
FAA TSO-C88a; EASA ETSO-C88a, SAE AS8003**

**NOTE: To ensure correspondence with all on-board pressure altitude systems, altitude digitizers that are not providing information to the ATC transponder should be tested to ensure correspondence to the primary flight altimeter, as per FAA AC43-6C.**

The following procedure(s) will allow adjustment to the calibration curve of the SSD120-(XX)N-RS232 or SSD120-(XX)NE-RS232 as an aide in matching the digitizer output to a primary flight altimeter or NIST traceable pressure standard.

The maximum allowed error between the primary flight altimeter and the altitude digitizer is  $\pm 125$  feet as required by TSO-C88a and ETSO-C88a. All Trans-Cal digitizers are calibrated to within  $\pm 50$  feet of a NIST traceable pressure standard; however, the error allowed on flight altimeters at higher altitudes can lead to a combined error in excess of  $\pm 125$  feet. When the altitude digitizer is installed in an aircraft for use as the transponder's source of mode "C" information the digitizer must be recalibrated for correspondence to the aircraft's primary flight altimeter, as required by FAR 91.217 and 91.411. Model SSD120-(XX)N(X)-RS232 is designed to be field calibrated to meet this requirement, as per the procedure described in either **§4.4**, **§4.5** or **§4.7**.

The correspondence required for altitude digitizers is fully addressed in SAE Aerospace Standard AS8003 §3.11. The correspondence described by the SAE standard requires the digitizer to report altitude within  $\pm 125$  feet of the primary flight altimeter's reading when the pressure datum is set to 29.92 In. Hg., (1013 MB) absolute. The SAE standard also requires a transition accuracy of  $\pm 75$  feet of the nominal transition point for that altitude. A transition is defined as the point at which the digitizer changes from one altitude to the next, either increasing or decreasing altitude. The nominal transition point of the ICAO code occurs 50 feet prior to the altitude in question. See **Figure 2**.

There are two different methods used to change the calibration of this device. The technician need only perform the method that is best suited for the application in question. *There is no need to perform both methods.* The digitizer may be adjusted using two potentiometers, which affect the span and reference of the pressure transducer. This device may also be adjusted utilizing an externally addressable EEPROM, which is configured to accept an alternate error curve entered to the digitizer via Trans-Cal's **ECP-100** or via an IBM compatible PC.

The **Span Adjust** calibration (**§4.4**) is normally used in applications where only a slight modification is required to bring the altitude digitizer curve up or down.

The **Dynamic Calibration** procedure (**§4.5** or **§4.7**) is an alternate method used to match the altitude digitizer to the primary flight altimeter or NIST standard. It assumes the digitizer and altimeter are connected as shown in **Figure 3** or the **Dynamic Calibration Block Diagram** and the technician may adjust the input pressure to run the digitizer and primary flight altimeter to the same pressure altitude and then enter this altitude into the **ECP-100** or an IBM compatible computer, which will transmit the correction to the digitizer's EEPROM.

This calibration procedure differs from the **Span Adjust** procedure in that the adjustments are made at every 1000-foot interval and the Digitizer is adjusted at the 0 foot mark **NOT** the ICAO data nominal transition point.

#### **4.2 Required Equipment Span Adjust**

(See **Span Adjust Block Diagram**.)

1. Primary Flight Altimeter.
2. +12 or 28VDC power supply.
3. A pitot-static test set, capable of exercising the altimeter and digitizer over a range of -1000 feet to the maximum altitude of the digitizer or flight altimeter.
4. A ramp checker or test set capable of interrogating the transponder. Optional: **ATS-400** or equal device which will allow the display of the 100 foot resolution parallel altitude data.

#### **4.3 Required Equipment Dynamic Calibration**

(See **Figure 3** or **Dynamic Calibration Block Diagram**.)

1. Primary flight altimeter or NIST traceable pressure standard.
2. +12 to 28VDC power supply.
3. Trans-Cal **ECP-100 Encoder Calibration Programmer** or IBM compatible computer with an available RS232 port. See [www.trans-cal.com](http://www.trans-cal.com) for data on the **ECP-100**.
4. Software requirement for IBM PC only: **Windows 98®**, **Windows 2000®**, **Windows XP®**, **Windows Vista®** using **Hyper Terminal** Ver. 5.0 or better by Hilgraeve. (Available as a free download at <http://www.hilgraeve.com>) Or equal serial data capture software. See **§3.3b**.
5. A pitot-static test set, capable of exercising the altimeter and digitizer over a range of -1000 feet to the maximum altitude of the digitizer or flight altimeter.
6. *Optional:* Trans-Cal ATS-400 or equal device which will allow the display of the 100-foot resolution parallel altitude data.

#### **4.4 Span Adjust Procedure**

##### **CAUTION**

**ALWAYS DETERMINE THE DESIGN LIMITS OF THE INSTRUMENTS ATTACHED TO THE STATIC SYSTEM. LOCATE AND IDENTIFY ALL INSTRUMENTS ATTACHED TO THE SYSTEM AND REFER TO THE MANUFACTURER'S DATA FOR MAXIMUM RATE OF CLIMB OR DESCENT, AND ANY SPECIAL TEST CONDITIONS WHICH MUST BE COMPLIED WITH TO PREVENT DAMAGE.**

1. Connect the pitot-static test equipment to the aircraft's static line, and connect the transponder test set per the manufacturer's recommendations. The digitizer's two altitude adjustment potentiometers are identified as L and H, representing low and high altitude. The low adjustment is closest to the edge of the housing, and the high adjustment is closer to the center of the housing.

**NOTE:** Changing either potentiometer will affect the other. An adjustment made to correct the low transition point, will move the high transition point, and require an adjustment of the high potentiometer.

2. Apply power to the altitude digitizer/transponder.
3. Set the primary flight altimeter barometric pressure adjustment to 29.92 In. Hg. (1013 MB).
4. Interrogate the transponder with the ramp tester, while observing the digitizer ICAO altitude code, decrease pressure to the point where the altitude code just makes a transition to the maximum altitude encoded. Verify that the digitizer is within  $\pm 125$  feet of the primary flight


altimeter's reading. If not, adjust the high potentiometer until the digitizer transition point is within  $\pm 30$  feet of the nominal transition point. (i.e. while ascending, the digitizer should transition from 29,900 feet to 30,000 feet at 29,950 feet nominally.)

5. Increase pressure until the digitizer's output just makes the transition from 100 feet to 0 feet. Verify that the altitude digitizer reports within  $\pm 125$  feet of the primary flight altimeter. If not, adjust the low potentiometer until the transition point is within  $\pm 30$  feet of the nominal transition point. (i.e. while descending, the digitizer should transition from +100 to 0 feet at +50 feet nominally.)
6. Repeat steps (4) and (5) until the  $\pm 125$  foot tolerance is achieved for both the maximum calibration altitude and the minimum calibration altitude.
7. Exercise the aircraft's static system over the operating range of the altitude digitizer and, with increasing and decreasing pressure, verify at a minimum of ten test points that the altitude digitizer and primary flight altimeter correspond within the  $\pm 125$  foot tolerance. Lightly tap the altimeter before each reading to eliminate friction. If correspondence is not achieved at any test point, the altimeter may require calibration.
8. Verify that the digitizer's output is disabled when the transponder is not in mode "C", or when the "Altitude Disable" switch is in the off position.

**Figure 2 Altitude Digitizer Correspondence**

# Altitude Digitizer to Primary Flight Altimeter Correspondence

Reference FAA TSO-C88a, EASA ETSO-C88a  
and SAE AS8003

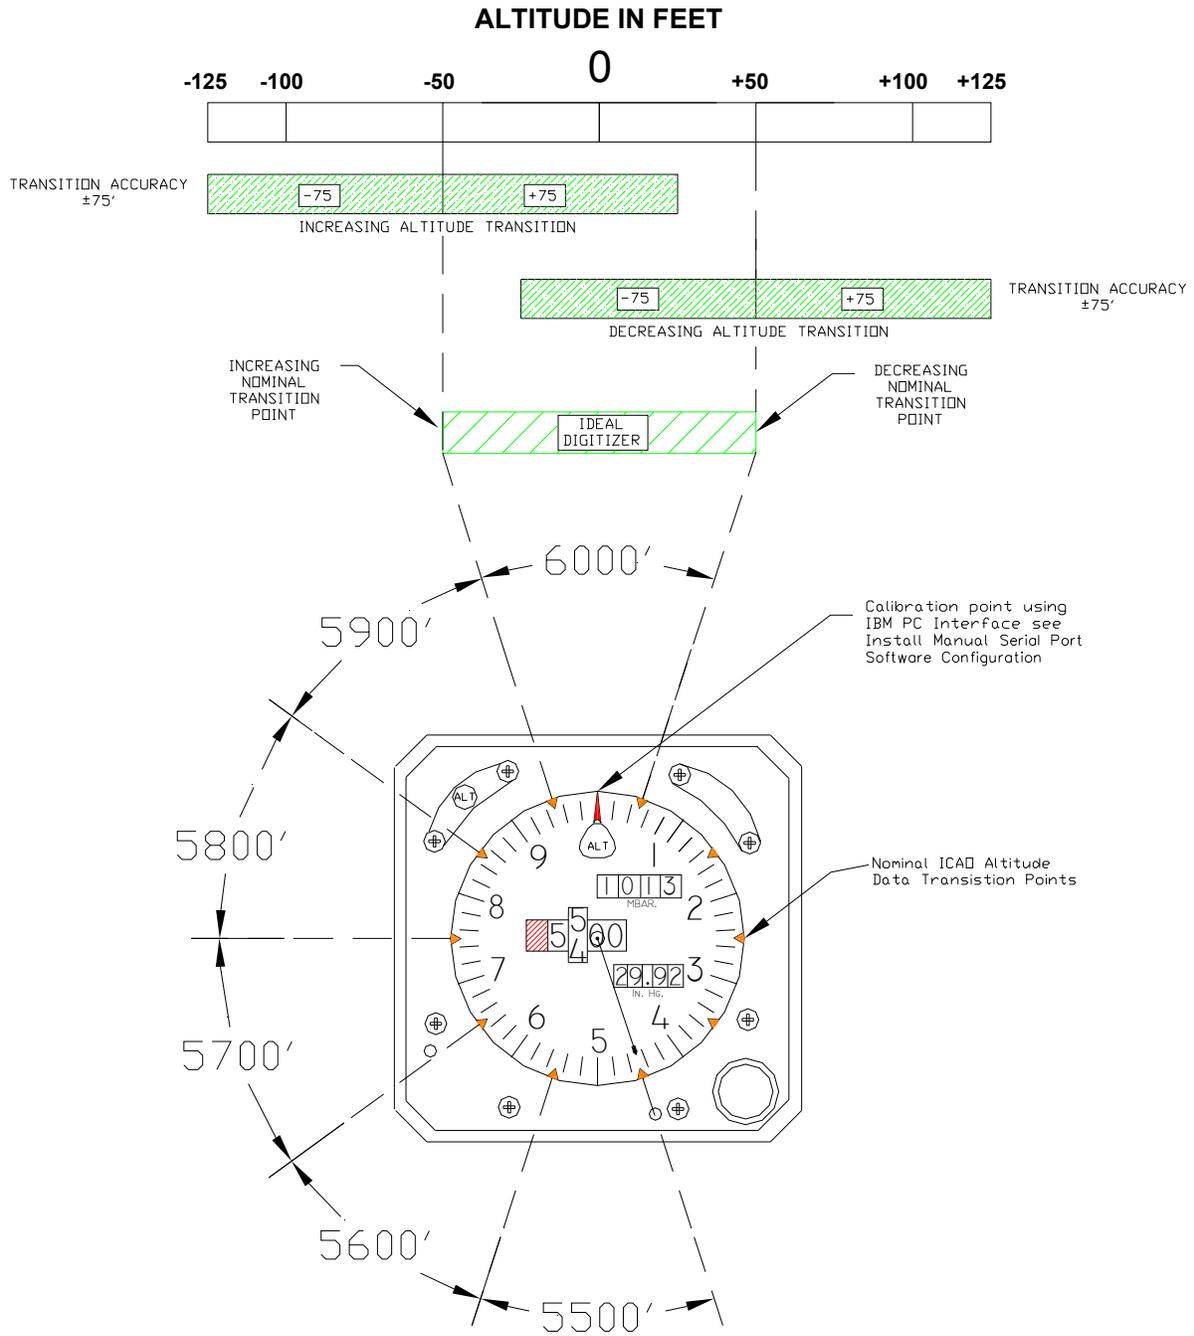

#### **4.5 Dynamic Calibration Adjustment Procedure using the ECP-100**

**Reference: FAR 91.217; FAA Advisory Circular 43-6C  
FAR 91.411; FAR 43-Appendix E and F  
FAA TSO-C88a, EASA ETSO-C88a, SAE AS8003**

**NOTE: To ensure correspondence with all on-board pressure altitude systems, altitude digitizers that are not providing information to the ATC transponder should be tested to ensure correspondence to the primary flight altimeter, as per FAA AC43-6C.**

This procedure will allow adjustment to the calibration curve of the SSD120-(XX)N-RS232 or SSD120-(XX)NE-RS232 using the ECP-100 as an aide in matching the digitizer output to a primary flight altimeter or NIST traceable pressure standard. This procedure differs significantly from the **Span Adjust Procedure** described in §4.4. The **Dynamic Calibration Procedure** makes adjustments to the altitude data stored in the digitizer's EEPROM. The technician may make adjustments to the digitizer error curve in 1000 foot increments, over the entire operating range with the single exception of the -1000 foot mark. The technician will make the adjustments at the 0 or whole altitude mark, **NOT** at the parallel data's nominal transition point. See **Figure 2**. The digitizer will automatically adjust the ICAO parallel altitude data to transition 50 feet prior to the 0 mark. (i.e. the digitizer's ICAO parallel altitude code will transition from 900 to 1000 feet while the serial altitude data is transmitting 950 feet.)



#### **CAUTION**

**ALWAYS DETERMINE THE DESIGN LIMITS OF THE INSTRUMENTS ATTACHED TO THE STATIC SYSTEM. LOCATE AND IDENTIFY ALL INSTRUMENTS ATTACHED TO THE SYSTEM AND REFER TO THE MANUFACTURER'S DATA FOR MAXIMUM RATE OF CLIMB OR DESCENT, AND ANY SPECIAL TEST CONDITIONS WHICH MUST BE COMPLIED WITH TO PREVENT DAMAGE.**

1. Connect the digitizer, ECP-100, NIST standard or flight altimeter as shown in the **Figure 3** and apply power.
2. Slide the **ECP-100 CAL. PROGRAM** selector to the leftmost **PROGRAM** position.
3. Apply power to the altitude digitizer and slide the **ECP-100** power switch to the on position.
4. Set the altimeter barometric input to 29.92In.Hg. (1013MB). Adjust the static system pressure and stabilize at the first altitude to be calibrated. The first possible correction for Trans-Cal digitizers is at 0 feet. All adjustments to the digitizer calibration curve occur at 1000-foot intervals. Use the **ALTITUDE UP** and **ALTITUDE DOWN** buttons to adjust the **ECP-100** to the current pressure altitude prior to pushing the **INITIATE PROGRAM** pushbutton.
5. Press the **INITIATE PROGRAM** pushbutton once. THE **ECP-100** will enter a digital correction into the digitizer's **EEPROM** at the current pressure altitude.
6. Adjust the input pressure to the next 1000-foot increment and adjust the **ECP-100** to the next 1000-foot increment and repeat step 5. Continue repeating throughout the operating range of the altitude digitizer.
7. Exercise the aircraft's static system over the operating range of the altitude digitizer and, with increasing and decreasing pressure, verify at a minimum of ten test points that the altitude digitizer and primary flight altimeter correspond within the  $\pm 125$  foot tolerance. Lightly tap the altimeter before each reading to eliminate friction. If correspondence is not achieved at any test point, the altimeter may require calibration.
8. Verify that the digitizer's output is disabled when the transponder is not in mode "C", or when the "Altitude Disable" switch is in the off position.

**NOTE:** If an error is entered into the digitizer, adjust the pressure to the correct altitude and re-enter the correction. To clear ALL the corrections to the digitizer error curve press the **ALTITUDE UP PROGRAM** pushbutton once. Then press and hold the **ALTITUDE DOWN** button for two seconds. If the digitizer and flight altimeter are within the  $\pm 125$ -foot requirement then no correction is required. DO NOT adjust the digitizer high and low potentiometers during this procedure.

**Figure 3 Dynamic Calibration Set-Up Using The ECP-100**

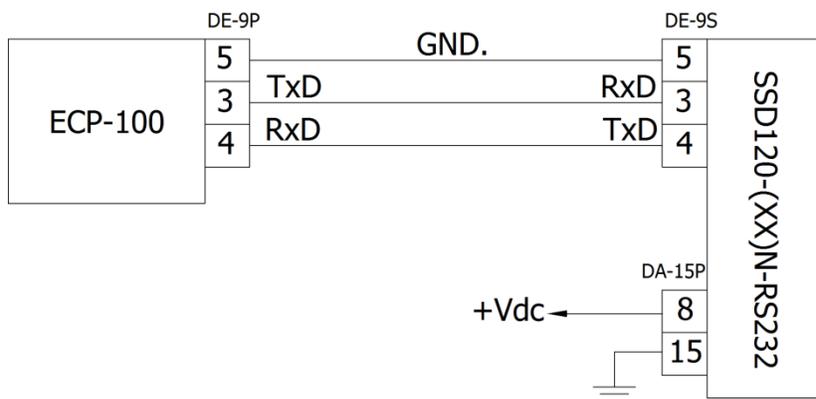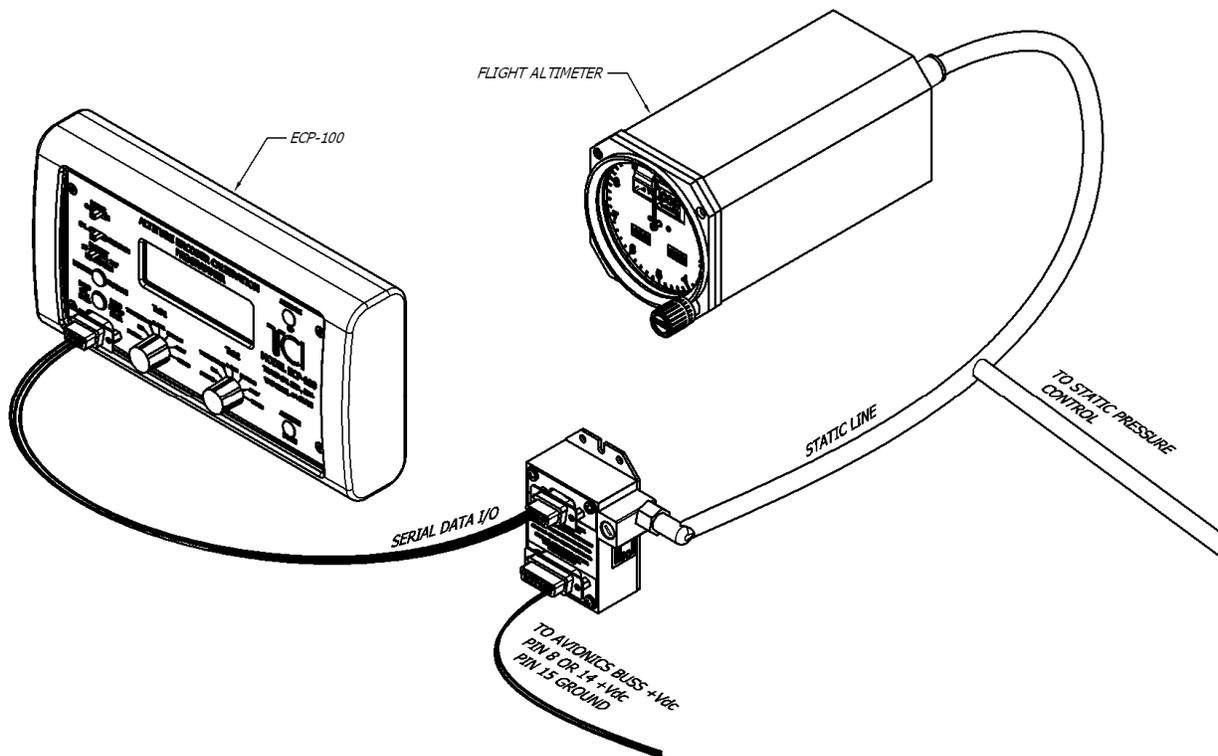

#### **4.6 Hyper Terminal Set-Up on the IBM Compatible PC**

Boot up the computer and start the serial data capture software such as the **Hyper Terminal** program. **Hyper Terminal** may be located in the **Programs** section or in the **Accessories** section under **Communications**, and Hyper Terminal will be used for the balance of the examples used in this manual.

Under the **New Connection** window:

Choose an icon then select an identifying title such as "Test."  
Select **OK** after you have made your choices.

Under the **Connect to** window:

-Choose **Connect Using Com 1** or whatever **Com** port you have chosen to use.  
After your selection click on **OK**.

Under the **Com ? Properties** window:

Select the **Port Settings** tab and set the following:

Bits per second:	<b>9600</b>
Data bits:	<b>8</b>
Parity:	<b>None</b>
Stop Bits:	<b>1</b>
Flow Control:	<b>None</b>

Select **OK**

In the **Hyper Terminal** window select **File** then click on **Properties**.

Under the **Com ? Properties** window click on the **Settings** tab.

Set the following:

Function, arrow, ctrl keys to act as **Terminal Keys**.  
Emulation to **Auto Detect**

Under **ASCII Setup**

Set the following:

**Echo off.**  
**Wrap lines that exceed terminal width.**  
Select **OK**.

The software is now configured for operation.

**NOTE:** Past versions (Ver. 5 thru 6) of HyperTerminal have a known issue when communicating with serial protocols of 7 data bits, 1 stop bit, odd parity. This Windows® program will not correctly auto detect the protocol, but will display the data when manually configured.

#### **4.7 Dynamic Calibration Adjustment Procedure using Hyper Terminal**

**Reference: FAR 91.217; FAA Advisory Circular 43-6C  
FAR 91.411; FAR 43-Appendix E and F  
FAA TSO-C88a, EASA ETSO-C88a, SAE AS8003**

This procedure will allow adjustment to the calibration curve of the SSD120-(XX)N(X)-RS232 as an aide in matching the digitizer output to a primary flight altimeter or NIST traceable pressure standard. This procedure differs significantly from the Span Adjust Procedure described in §4.4. The Dynamic Calibration Procedure makes adjustments to the altitude data stored in the digitizer's EEPROM. The technician may make adjustments to the digitizer error curve in 1000 foot increments, over the entire operating range with the single exception of the -1000 foot mark. The technician will make the adjustments at the 0 or whole altitude mark, **NOT** at the parallel data's nominal transition point. See Figure 2. The digitizer will automatically adjust the ICAO parallel altitude data to transition 50 feet prior to the 0 mark. (i.e. the digitizer's ICAO parallel altitude code will transition from 900 to 1000 feet while the serial altitude data is transmitting 950 feet.)

**NOTE: To ensure correspondence with all on-board pressure altitude systems, altitude digitizers that are not providing information to the ATC transponder should still be tested to ensure correspondence to the primary flight altimeter, as per FAA AC43-6C.**

#### **CAUTION**

**ALWAYS DETERMINE THE DESIGN LIMITS OF THE INSTRUMENTS ATTACHED TO THE STATIC SYSTEM. LOCATE AND IDENTIFY ALL INSTRUMENTS ATTACHED TO THE SYSTEM AND REFER TO THE MANUFACTURER'S DATA FOR MAXIMUM RATE OF CLIMB OR DESCENT, AND ANY SPECIAL TEST CONDITIONS WHICH MUST BE COMPLIED WITH TO PREVENT DAMAGE.**

1. Construct a wiring harness per the **Wiring Harness Diagram TCI Part Number 881404**.
2. Connect the digitizer, computer and altimeter or NIST standard as shown in the **Dynamic Calibration Block Diagram**, and energize.
3. Open the **Hyper Terminal** program as described in **§4.6**.
4. The digitizer output should now be displayed on the PC screen with 10-foot resolution.
5. (You may use the **Hyper Terminal "Clear Screen"** function to remove any extra characters that may be cluttering the screen. Click on **Edit** then click on **Clear Screen**.)

**NOTE: Backspace does not function in Hyper Terminal. If a typing error occurs, hit Q and begin again.**

6. Set the altimeter barometric input to 29.92 In. Hg. Change the input pressure to -1000 feet and begin to compare the altitude digitizer output, as displayed on the computer, to the altimeter reading at every 1000-foot mark. When the digitizer output begins to differ from the altimeter by more than  $\pm 30$  feet begin to change the digitizer error curve. (**§4.11** provides a table to for the technician to record the changes required and implemented.)

**NOTE: No digitizer correction is possible at the -1000 foot mark.**

7. Type <enter> the digitizer will respond with ?>(current altitude).
8. Type ADJ <enter> the digitizer will respond with A=.
9. Adjust the input pressure until the altimeter or NIST standard is exactly reading a 1000-foot mark. Note the difference between the digitizer and the altimeter and adjust as follows.

**Example:**

The altimeter reads 10,000 and the digitizer reports 10,080. Type "S10 <enter>" (**S10** represents **Set 10,000 feet**) The digitizer will now output 10,000 feet based on the current input pressure. The PC will display the altitude at which the digitizer will make this change. In the example referenced above, the PC would display **>10000**.

10. Proceed to the next 1000-foot mark and repeat the procedure, as in step 8 above, until the entire operating range of the digitizer is completed.

**NOTE:**

- a) If no correction is required at an altitude simply do not enter a correction.
- b) Do not adjust the high or low potentiometers during this procedure.
- c) You may quit the adjustment program at any time by typing "Q" twice; the digitizer output will then be displayed on the PC screen in normal operation mode.

11. After completing the above procedure you may examine the corrections entered into the EEPROM. Type "**D<enter>**" to display the EEPROM data and read the current error curve on the PC screen. The following table should appear:

00= 000	01= 000	02= 000	03= 000	04= 000	05= 000
06= 000	07= 000	08= 000	09= 000	10= 000	11= 000
12= 000	13= 000	14= 000	15= 000	16= 000	17= 000
18= 000	19= 000	20= 000	21= 000	22= 000	23= 000
24= 000	25= 000	26= 000	27= 000	28= 000	29= 000
30= 000	31= 000	32= 000	33= 000	34= 000	35= 000
36= 000	37= 000	38= 000	39= 000	40= 000	41= 000
42= 000	43= 000	44= 000	45= 000		
90= 000	91= 000	92= 000	93= 000	94= 000	95= 000
96= 000	97= 000	98= 000	99= 000		

>current altitude

The first two digits represent altitude x1000 feet and the last three digits after the equal sign represent the amount of error introduced at the altitude in feet.


**NOTE:** Fields **90 = 000** through **99 = 000** contain TCI calibration data and are not user accessible.

### 4.8 Serial Port Software Configuration Using the ECP-100


This procedure will allow the technician to assign separate serial data output protocols to the altitude digitizer output ports. Connect the ECP-100 to the altitude digitizer as shown in **Figure 3**.

**Step 1:** With the **ECP-100** and altitude encoder power **off**, Slide the CAL. Program switch to its rightmost **PROGRAM** position and connect the ECP-100 to the altitude encoder, as shown in **Figure 4**.

**Step 2:** With the **ECP-100** power switch in the **OFF** position, apply power to the altitude encoder, then slide the **ECP-100** power switch to the on position. The **ECP-100** will beep twice then display the current pressure altitude transmitted from the altitude digitizer.

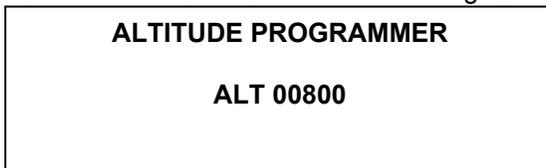

**Step 3:** Push the **READ SET-UP DATA** pushbutton once. The **ECP-100** will display the current serial port protocol settings for 15 seconds, and then return to the altitude programmer display page. The factory setting is pictured below.

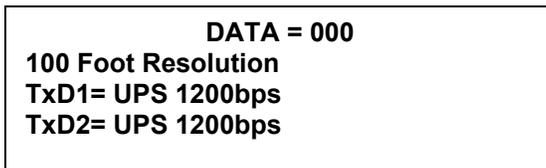


**Step 4:** Slide the **RESOLUTION** selector to the desired altitude data resolution 10' or 100'.

**Step 5:** Rotate the TxD1 and TxD2 selector knobs to the desired output protocol. For the purpose of this example we will set TxD1 to transmit the UPS protocol and TxD2 to transmit the Trimble/Garmin protocol.

**Step 6:** Press the **INITIATE PROGRAM** pushbutton once. The display will beep then flash **PROGRAMMING** and display the protocols to be programmed. Wait until the **ECP-100** emits a long beep and displays **OPERATION COMPLETED** then returns to the **ALTITUDE PROGRAMMER** display.





**Step 7:** Confirm the port programming by pressing the **READ SET-UP DATA** pushbutton. It should display the settings applied in the previous steps. In the case of our example the display would appear as below.

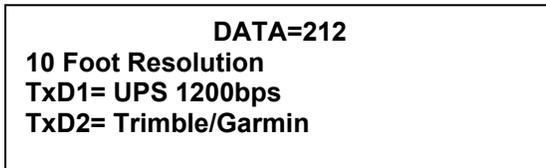

**Step 8:** Slide the **ECP-100** power switch to the off position and remove power from the altitude encoder. The encoder is now programmed and ready to operate.

**Figure 4 Serial Port Configuration Using the ECP-100**

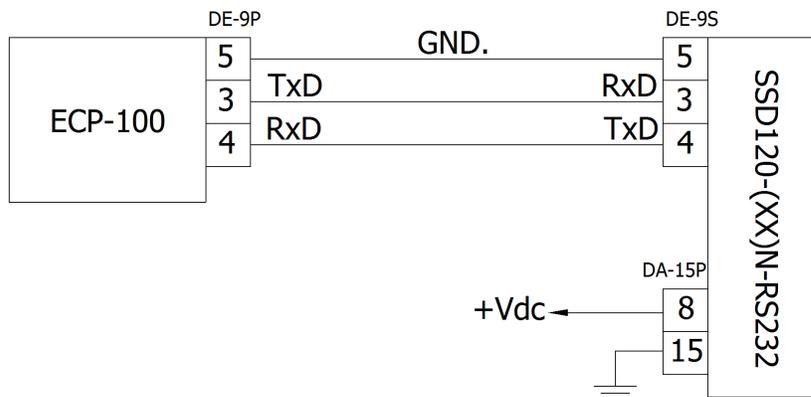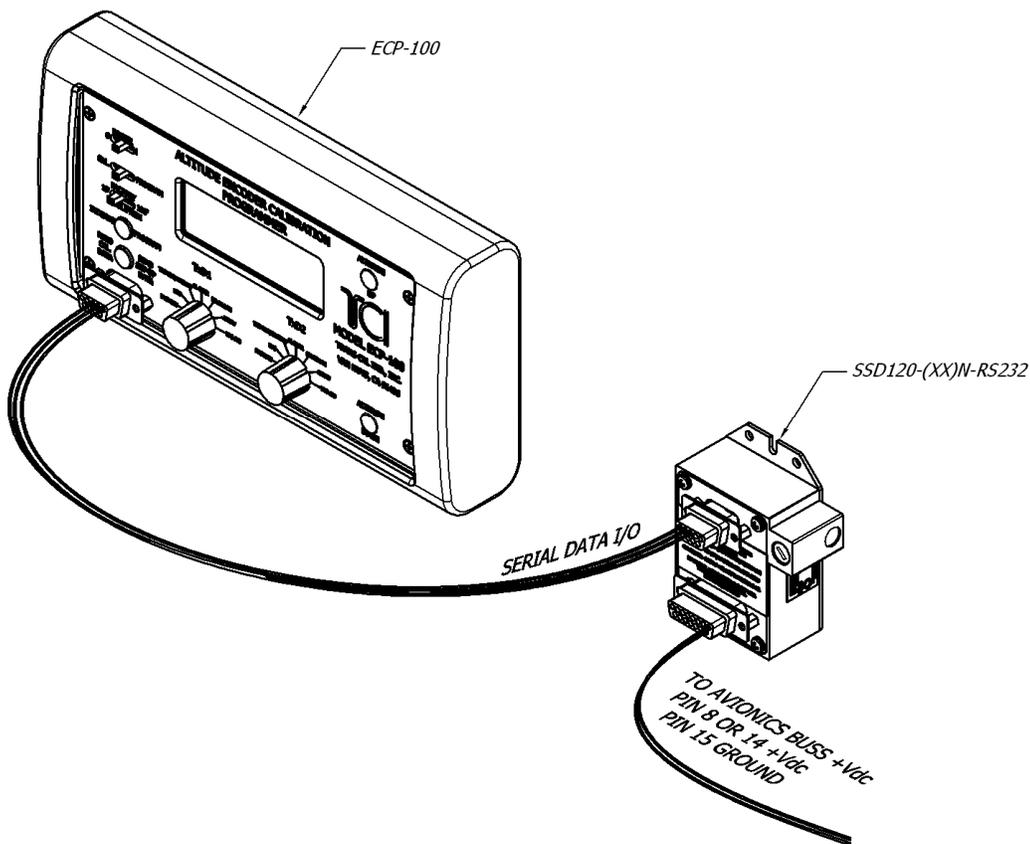

### 4.9 Serial Port Configuration Using Hyper Terminal

The SSD120-(XX)N(X)-RS232 incorporates two separate RS232 compatible outputs, which may be configured via software to transmit two (2) different altitude data protocols simultaneously.

Connect the digitizer to an IBM compatible computer running **HyperTerminal** as described in §4.6 and as shown in the **Dynamic Calibration Block Diagram**. Assign the serial port protocols as follows:

Apply power to the digitizer and after the self-test time has elapsed, altitude data will appear on the PC screen.


Type **<enter>** The digitizer will respond with **?>(current altitude)**

Type **ADJ<enter>** Accesses the digitizer adjustment program.

The Digitizer responds **A=**

Type **P<enter>** To identify the current serial port settings.

The digitizer will respond with a three-digit number as follows:

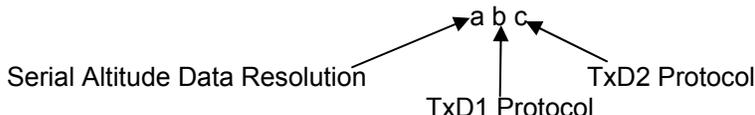

1. The first digit represents the serial altitude data resolution.
  - 0 = Use D-Sub connector protocol hardware jumpers.
  - 1 = 100 foot resolution on TxD1 and TxD2.
  - 2 = 10 foot resolution on TxD1 and TxD2.
  
2. The second digit represents the protocol selection for TxD1.
  - 0 = Use D-Sub connector protocol hardware jumpers.
  - 1 = UPS Aviation Technologies. 1200bps.
  - 2 = Trimble/Garmin. 9600bps.
  - 3 = Northstar. 2400bps.
  - 4 = Magellan, 1200bps.
  - 5 = ARNAV, 9600bps.
  - 6 = UPS AT 618 Loran 1200 bps. (IIMorrow)
  
3. The third digit represents the protocol selection for TxD2.
  - 0 = Use D-Sub connector protocol hardware jumpers.
  - 1 = UPS Aviation Technologies. 1200bps.
  - 2 = Trimble/Garmin. 9600bps.
  - 3 = Northstar. 2400bps.
  - 4 = Magellan, 1200bps.
  - 5 = ARNAV, 9600bps.
  - 6 = UPS AT 618 Loran 1200 bps. (IIMorrow)

**Software Configuration Example: Type P215<enter>**  
 Defined as **10 foot** resolution on TxD1 and TxD2.  
**UPS Aviation Technologies** protocol transmitted on TxD1.  
**ARNAV Systems** protocol transmitted on TxD2.

### 4.10 Configuration and Calibration Command List

Following is a list of commands, which will operate in the **ADJ** and **TCICAL** mode.

Top-Level Menu Commands	Action
<b>ADJ &lt;enter&gt;</b>	Enter <b>Adjustment</b> mode.
<b>Q</b>	<b>Quit</b> and resume normal operation.

Sub-Menu (ADJ) Commands	Action
<b>CLR &lt;enter&gt;</b>	<b>Clear</b> all EEPROM data.
<b>D &lt;enter&gt;</b>	<b>Display</b> to list all EEPROM error correction table data.
<b>P &lt;enter&gt;</b>	Displays current serial <b>Port</b> settings, see <b>§4.9 Serial Port Software Configuration</b> .
<b>Pabc&lt;enter&gt;</b>	<b>Port</b> protocol assign in <b>ADJ</b> mode, see <b>§4.9 Serial Port Software Configuration</b> .
<b>Q</b>	<b>Quit</b> and return to top-level commands.
<b>Saa&lt;enter&gt;</b>	<b>Set</b> digitizer to 1K altitude ( <b>aa</b> ) mark at current input pressure. See <b>§4.7 Dynamic Calibration Adjustment Procedure</b> .

#### NOTE

1. Backspace does not function. If a typing error occurs hit **Q** and begin again.
2. Altitude values 90 to 99 in EEPROM contain factory calibration data and are not customer accessible.
3. A maximum error of ±499 feet may be introduced at any one altitude.
4. **CLR** clears all error data in the EEPROM, and returns the digitizer to the original factory calibration.
5. **ERR** indicates a syntax error.

### 4.11 Error Correction Table

Altitude	Correction	Altitude	Correction	Altitude	Correction
-1000		16000		33000	
0		17000		34000	
1000		18000		35000	
2000		19000		36000	
3000		20000		37000	
4000		21000		38000	
5000		22000		39000	
6000		23000		40000	
7000		24000		41000	
8000		25000		42000	
9000		26000			
10000		27000			
11000		28000			
12000		29000			
13000		30000			
14000		31000			
15000		32000			

**Section 5.0 Tables I through XII Digitizer Interconnection**

The following digitizer interconnections are provided as a quick reference only, and though they are correct to the best of our knowledge, always consult the latest installation, operation, and service bulletins from the equipment manufacturer.

**Table I Bendix/King**

SSD120 15 Pin Conn.	Function	Bendix/King KT73 Pin Number	Bendix/King KT76/78 Pin Number	Bendix/King KT76A/C/78A Pin Number	Bendix/King KXP Pin Number	Bendix/King KXP 755 Pin Number
1	D4	8	*3	*4	V	X
2	A1	M	6	M	G	A
3	A2	K	7	K	H	D
4	A4	J	9	J	J	k
5	B1	E	4	E	K	f
9	B2	C	1	C	L	g
10	B4	B	2	B	M	Y
11	C1	D	3	D	P	U
13	C2	L	8	L	R	T
12	C4	H	10	H	S	W
6	Output Enable	Connect to aircraft ground.				
8 or 14 *4	14 to 28Vdc Input.	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.
15	Ground	Connect to aircraft ground.				

**Serial Data Connection for the Bendix/King KT 73 Transponder**

SSD120-(XX)N-RS232 9 Pin Conn.	Function	KT 73 24 Pin Conn.
4 or 9	TxD to RxD	7
1 or 5 or 8	Ground	1 or A
<b>Software select protocol. Select UPSAT 618 Protocol.</b>		

<sup>3</sup> Data for this connection is not available at this time.

<sup>4</sup> Pins 8 and 14 are connected internally.

### Bendix/King (Honeywell) KT 73 Transponder with Serial Altitude Data Input


The KT 73 must be configured to accept serial altitude data on pin 7 of the main connector, and software configured for *High Resolution M* (IIMorrow). 1200bps, 7 data bits, 1 stop bit and odd parity.

The Trans-Cal SSD120-(XX)N(X)-RS232 must be software configured to transmit the correct serial data protocol to the Bendix/King KT 73 transponder as described below.

1. Connect the SSD120 to an IBM compatible computer running **HyperTerminal** as described in §4.6 and as shown in the **Dynamic Calibration Block Diagram**. Assign the serial port protocols as follows:
2. Apply power to the digitizer and after the self-test time has elapsed, altitude data will appear on the PC screen.

Type: <enter>	The SSD120 will respond with ?>(current altitude)
Type: ADJ<enter>	Accesses the SSD120 adjustment program. The digitizer will respond with A=
Type: P<enter>	Identifies the current serial port settings. Default factory setting is 000.

The SSD120 will respond with a three-digit number as follows:

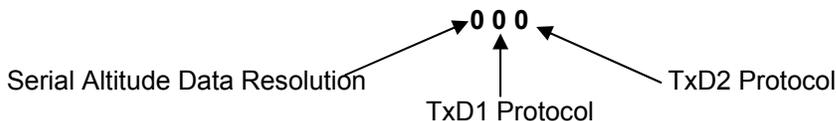

<p><i>The first digit represents the serial altitude data resolution. The second digit represents the protocol selection for TxD1. The third digit represents the protocol selection for TxD2.</i></p>
--

Type: P266<enter>	This selects 10' resolution and transmits the IIMorrow data format/message on both TxD1 and TxD2.
-------------------	---

Type: P<enter>	The digitizer should return <b>266&gt;current altitude</b> . This confirms the change has been stored in the EEPROM.
----------------	--

Type: QQ	The encoder is now configured to transmit the high resolution IIMorrow protocol on both TxD1 (pin 4) and TxD2 (Pin 9). <b>REMOVE ALL JUMPERS FROM THE SSD120-(XX)N-RS232 NINE (9) PIN D-SUB CONNECTOR!</b>
----------	---

**Table II Cessna, Narco, Microair**

SSD120 15 Pin Conn.	Function	Cessna RT359A, RT459A, RT859A Pin Number	Narco AT-150 AT-50, AT-50A Pin Number	Narco AT-6A AT-5, AT-6 Pin Number	Microair T2000
1	D4	10	*5	*6	21
2	A1	14	7	2	9
3	A2	13	6	4	10
4	A4	15	8	8	11
5	B1	19	12	9	12
9	B2	17	10	10	13
10	B4	16	9	11	17
11	C1	21	14	1	18
13	C2	18	11	3	19
12	C4	20	13	5	20
6	Output Enable	11	5	12	Connect to aircraft ground.
8 or 14 *6	14 to 28Vdc Input	9	18	13	2
15	Ground	Connect to aircraft ground.	Connect to aircraft ground.	14	Connect to aircraft ground.

**Narco AT-50 and AT-50A Installations**

The Narco AT-5A, AT-6A, AT-50 or AT-50A transponder will not accept data from the SSD120-(XX)N(X)-RS232 Altitude Digitizer. A modification to remove the output decoupling capacitors is required and the unit may be ordered from the factory with this modification. Order Model Number SSD120-(XX)N-RS232 with Mod 1.

Please note! The Narco AT-50 and earlier transponder models require a modification before they will function correctly with any altitude encoder. This modification is outlined in Narco Service Bulletin AT-50A-5.

<sup>5</sup> Data for this connection is not available at this time.

<sup>6</sup> Pins 8 and 14 are connected internally.

**Table III Garmin**

SSD120 15 Pin Conn.	Function	Garmin GTX 327 Pin Number	Garmin GTX 33 GTX330 & 330D Pin Number	Garmin GNC 300 Pin Number	This column left blank intentionally.
1	D4	18	11	N/C <sup>7</sup>	
2	A1	3	2	15	
3	A2	5	4	16	
4	A4	6	5	17	
5	B1	9	7	18	
9	B2	11	9	19	
10	B4	12	10	20	
11	C1	10	8	21	
13	C2	4	3	22	
12	C4	7	6	23	
6	Output Enable	13 or 25 or aircraft ground	50	Connect to aircraft ground	
8 or 14 * <sup>8</sup>	14 to 28Vdc Input	14 to 28Vdc Input	14 to 28Vdc Input	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.	
15	Ground	Connect to aircraft ground.	Connect to aircraft ground.	Connect to aircraft ground.	

<sup>7</sup> Data for this connection not available at this time.

<sup>8</sup> Pins 8 and 14 are connected internally.

**Table IV Garmin**

**Serial Data Connection for the Garmin GTX327 Transponder**

<b>SSD120-(XX)N(X)-RS232 9 Pin Connector</b>	<b>Function</b>	<b>GTX327 25 Pin Connector</b>
4 or 9	TxD to RxD	19
1 or 5 or 8	Data Ground	13 or 25
Protocol: connect pin 7 to ground.		

**Serial Data Connection for the Garmin GTX33, GTX330 and GTX330D Transponder**

<b>SSD120-(XX)N(X)-RS232 9 Pin Connector</b>	<b>Function</b>	<b>GTX330 62 Pin Connector</b>
4 or 9	TxD to RxD	24 (RS232 In 2)
1 or 5 or 8	Data Ground	Data Ground
Protocol: connect pin 7 to ground.		

To allow the **Garmin GTX 327, 330 and 330D** transponders to communicate with the SSD120-(XX)N(X)-RS232 go to the **Setup Page** and set the **Altitude Source (ALT SRC)** to receive data in the **Icarus RS232 format**.

**Table V Edo-Air, Genave, Collins, Radair**

SSD120 15 Pin Conn.	Function	Edo-Air RT-777 Pin Number	Genave Beta 5000 Pin Number	Collins TDR 950 Pin Number	Radair 250 Pin Number
1	D4	15	0	3	15
2	A1	7	4	12	7
3	A2	5	5	10	6
4	A4	3	6	7	13
5	B1	12	7	6	9
9	B2	13	8	5	10
10	B4	14	9	4	11
11	C1	8	10	8	14
13	C2	6	11	11	16
12	C4	4	12	9	12
6	Output Enable	2	3	Connect to aircraft ground.	19
8 or 14 *9	14 to 28Vdc Input	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.	2	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.	22
15	Ground	2	Connect to aircraft ground.	Connect to aircraft ground.	Connect to aircraft ground.

<sup>9</sup> Pins 8 and 14 are connected together internally.

**Table VI Bendix, Wilcox, UPS AT**

SSD120 15 pin Conn.	Function	Bendix TPR-2060 Pin Number	Bendix TR641A/B Pin Number	Wilcox 1014A Pin Number	UPS AT Apollo SL70 Pin Number
1	D4	*10	N	C	35
2	A1	4	A	k	13
3	A2	6	B	c	31
4	A4	8	C	W	12
5	B1	9	D	T	33
9	B2	10	E	L	14
10	B4	11	F	D	32
11	C1	3	H	P	16
13	C2	5	J	f	34
12	C4	7	K	Z	15
6	Output Enable	Connect to aircraft ground.			
8 or 14 *11	14 to 28Vdc Input	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.
15	Ground	Connect to aircraft ground.			

**Serial Altitude Data Connection for the Apollo SL70 Transponder**

SSD120-(XX)N-RS232 9 Pin Conn.	Function	UPS AT SL70
4 or 9	TxD to RxD	4
1 or 5 or 8	Ground	3

To allow the **UPS AT SL70** transponder to accept serial data from the SSD120-(XX)N(X)-RS232 go to the **Test Mode** on the **SL70 Conf** page and set the **Altitude Source (ASrc)** to receive **Serial (Ser)** data. On the **BAUD** page select **1200**.

<sup>10</sup> Data for this connection is not available at this time.

<sup>11</sup> Pins 8 and 14 are connected internally.

**Table VII Becker, Terra, Trig**

SSD120 15 pin Conn.	Function	Becker Avionic Systems ATC3401 ATC2000	Becker Avionic Systems ATC4401	Terra TRT-250 TRT-250D	Trig TT31 Mode S
1	D4	23	20	9	8
2	A1	16	1	5	M
3	A2	15	2	17	K
4	A4	14	3	16	J
5	B1	17	14	15	E
9	B2	19	15	2	C
10	B4	18	16	14	B
11	C1	22	17	3	D
13	C2	21	18	4	L
12	C4	20	19	18	H
6	Output Enable	24	25	12	Connect to aircraft ground.
8 or 14 <sup>*12</sup>	+14 to 28Vdc	6	6	20	Connect to aircraft's avionics buss protected by a fuse or circuit breaker.
15	Ground	24	25	Connect to aircraft ground.	Connect to aircraft ground.

**Serial Altitude Data Connection for the Trig TT31 Transponder**

SSD120-(XX)N(X)-RS232 9 Pin Conn.	Function	Trig TT31
4 or 9	TxD to RxD	7
1 or 5 or 8	Ground	A or 1
<i>Digitizer protocol pins 2 and 7 should be connected to ground. Unless software selected in the TCI digitizer set-up.</i>		

The TT31 will accept either parallel or serial altitude data inputs in either the Trimble/Garmin or the Shadin "RMS" data formats. The TT31 will select the parallel inputs if both are connected. Serial data inputs are recommended for better Mode S data resolution. Ground pin 2 to select 10-foot resolution.

<sup>12</sup> Pins 8 and 14 are connected internally.

**Table VIII Honeywell**

SSD120 15 pin Conn.	Function	Honeywell Bendix/King 560EGPWS & MK-XXI EGPWS	Honeywell Bendix/King KGP 860 GA-EGPWS	Honeywell Bendix/King KMH 870 IHAS Processor
1	D4	No connection	No Connection	18
2	A1	12	J1-12	11
3	A2	52	J1-52	10
4	A4	33	J1-33	9
5	B1	14	J1-14	14
9	B2	34	J1-34	13
10	B4	73	J1-73	12
11	C1	32	J1-32	17
13	C2	13	J1-13	16
12	C4	72	J1-72	15
6	Output Enable	Connect to aircraft ground	Connect to aircraft ground	Connect to aircraft ground
8 or 14 <sup>*13</sup>	+14 to 28Vdc	Connect to avionics buss via circuit breaker	Connect to avionics buss via circuit breaker	Connect to avionics buss via circuit breaker
15	Ground	Connect to aircraft ground	Connect to aircraft ground	Connect to aircraft ground

The Honeywell Bendix/King 860 EGPWS manual lists an RS232 serial altitude data input on pin J1-45 with a data common on pin J1-46. Several TCI compatible serial data protocols are listed, but at the time of this printing, Trans-Cal has not tested the 860 EGPWS data input for compatibility.

<sup>13</sup> Pins 8 and 14 are connected internally.

**Tables IX and X Serial Data Connector and Protocol Selection**

**Table IX**

SSD120-(XX)N(X)-RS232 Serial Port Connector, 9-Pin D-Subminiature DE-9S

Pin	Function
1	Ground <sup>14</sup>
2	Ground for 10' resolution.
3	RxD (Calibration Only)
4	TxD1 <sup>15</sup>
5	Ground <sup>15</sup>
6	Protocol select, see function Table X below.
7	Protocol select, see function Table X below.
8	Ground <sup>15</sup>
9	TxD2 <sup>16</sup>

**Table X**

SSD120-(XX)N(X)-RS232 Protocol Selection: DE-9S D-Subminiature Connector Function Table

Protocol Selection	Pin 2	Pin 6	Pin 7
<b>UPS AT 100' resolution, 1200bps. UPS AT 10' resolution, 1200bps.</b>	Open Gnd.	Open Open	Open Open
<b>Trimble/Garmin, 100' resolution, 9600bps. Trimble/Garmin, 10' resolution, 9600bps.</b>	Open Gnd.	Open Open	Gnd. Gnd.
<b>Northstar/Garmin, 100' resolution, 2400bps. Northstar/Garmin, 10' resolution, 2400bps.</b>	Open Gnd.	Gnd. Gnd.	Open Open
<b>Magellan, 100' resolution, 1200bps. Magellan, 10' resolution, 1200bps.</b>	Open Gnd.	Gnd. Gnd.	Gnd. Gnd.
<b>ARNAV Systems (Software selectable ONLY)</b>	Open	Open	Open
<b>UPS AT 618 Loran Systems (Software selectable ONLY)</b>	Open	Open	Open

<sup>14</sup> Pins 1 and 5 and 8 are internal grounds provided for protocol selection and serial data ground.

<sup>15</sup> TxD1 and TxD2 are two (2) separate RS232 outputs which will transmit the protocol selected by grounding the pins above, or will transmit separate protocols as assigned via software, see **§4.8** or **§4.9 Serial Port Software Configuration**.


**Table XI Quick Guide to Common Serial Data Interconnects**

For ALL applications, connecting the DE-9S pin 2 to pin 1 enables 10' data resolution.

Device	Baud Rate/Data Bits/Stop Bits/Parity	TCI SSD120-(XX)N(X)-RS232 9-Pin D-Sub Connector Jumper to Ground.
ARNAV (data in meters) 5000 MFD 505/506/512 DR-100 Wx Link	9600/8/1/None	None - Software Set-up Only
Bendix/King KT-73	1200/7/1/Odd	Software Set-up Only
Garmin 400 & 500 series GPS GNC300, GTX327, GTX330	9600/8/1/None	7
Trig TT31	1200/8/1/None	None
Trimble 2101	9600/8/1/None	7
UPS AT GX50, GX60, GX65 MX20, SL70	1200/8/1/None	None
UPS AT 618 Loran	1200/7/1/Odd	None - Software Set-up Only

**Table XII Parallel ICAO Altitude Data & Power Connector DA-15P**

SSD120 15 pin DA-15P Connector	Function
1	D4
2	A1
3	A2
4	A4
5	B1
7	Do Not Connect
9	B2
10	B4
11	C1
13	C2
12	C4
6	Output Enable
8 or 14* <sup>16</sup>	+14 to 28Vdc
15	Ground

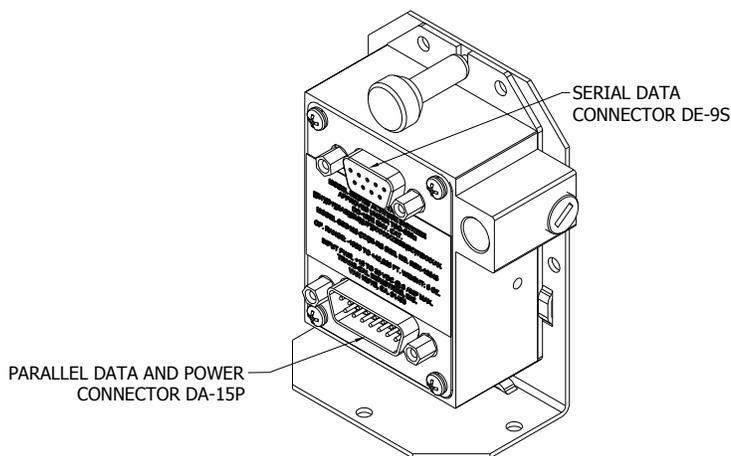

<sup>16</sup> Pins 8 and 14 are connected internally.  
882189 Rev. G  
Page 38  
May 2015

**Section 6.0 GPS/MFD & Miscellaneous Connection Data**

Given the speed with which new GPS and MFD units are entering the market, it is impossible to provide data on every device. The following digitizer/GPS interconnections are provided as a quick reference only, and though they are correct to the best of our knowledge, always consult the latest installation, operation, and service bulletins from the GPS or MFD manufacturer.

**6.1 UPS Aviation Technologies (IIMorrow)**

**Apollo Model GX50, GX60, GX65**

Apollo GX50, GX60, GX65 Signal	Apollo 37 Pin D-Sub Connector	SSD120-(XX)N(X)-RS232 9 Pin D-Sub Connector
RxD2	21	4 or 9
Ground	20	1 or 5 or 8
<i>Jumper pin 2 to ground for 10' resolution.</i>		

**Apollo GX50, GX60, GX65 Software Configuration**

In test mode, rotate the **Large** knob to select serial port configuration **RX**. Press **SEL**, rotate the large knob to select the **RxD2** port, rotate the small knob to select **AltEnc** input.

**Apollo Model MX20 Multi Function Display**

Apollo MX20 Signal	Apollo 37 Pin D-Sub Connector	SSD120-(XX)N(X)-RS232 9 Pin D-Sub Connector
RxD2	21	4 or 9
Ground	3	1 or 5 or 8
<i>Jumper pin 2 to ground for 10' resolution.</i>		

**Apollo MX20 Software Configuration**

Under External Data Source set altitude source to **Port 2**.

**6.2 Trimble**

**Trimble 2101 Approach Plus GPS Receiver**

Trimble Signal	Trimble 2101 Port 1	Trimble 2101 Port 2	SSD120-(XX)N(X)-RS232 9 Pin D-Sub Connector Pin
RxD+	7	24	1 or 5 or 8
RxD-	8	36	4 or 9
Ground	3 or 20	3 or 20	1 or 5 or 8
			Protocol assignment, jumper pin 7 to ground on pins 1 or 5 or 8
			<i>Jumper pin 2 to ground for 10' resolution.</i>

**Trimble 2101 Approach Plus GPS Receiver Software Configuration - Installation Setup**

Access the 2101 installation setup submenu and go to the SERIAL I/O SETUP. Select the GPS serial port which is to receive the pressure altitude data, SERIAL-1 IN or SERIAL-2 IN. Set data format to **ENCODER**.

**2101 I/O Approach Plus GPS Receiver**

Trimble Signal	Trimble 2101 I/O Serial Port 1	Trimble 2101 I/O Serial Port 2	SSD120-(XX)N(X)-RS232 9 Pin D-Sub Connector Pin
RxD+	J1-7	J1-24	1 or 5 or 8
RxD-	J1-8	J1-36	4 or 9
Ground	J1 - 3 or 20	J1 - 3 or 20	1 or 5 or 8
			Protocol assignment, jumper pin 7 to ground on pins 1 or 5 or 8
			<i>Jumper pin 2 to ground for 10' resolution.</i>

**2101 I/O Approach Plus GPS Receiver Software Configuration - Installation Setup**

Access the 2101 installation setup submenu and go to the SERIAL I/O SETUP. Select the GPS serial port, which is to receive the pressure altitude data, **SERIAL-1 IN** or **SERIAL-2 IN**. Set data format to **ENCODER**.

**6.3 Garmin International**

**Garmin 400 and 500 Series GPS Devices (Includes 430W and 530W)**

<b>Garmin 78 Pin Conn. (P4001)</b>	<b>SSD120-(XX)N(X)-RS232 9 Pin Conn.</b>
<b>57</b>	4 or 9
<b>77 or 78</b>	1 or 5 or 8
Protocol, jumper pin 7 to ground. <i>Jumper pin 2 to ground for 10' resolution.</i>	

**Garmin 400 series GPS software configuration**

To allow the **Garmin 400 series GPS** to communicate with the SSD120-(XX)N-RS232 go to the **Main RS232 Config** page and set channel 1 input to **Icarus-alt**.

**Garmin GNC 300 GPS/Comm**

<b>GNC 300 37 Pin Connector J101</b>	<b>Function</b>	<b>SSD120-(XX)N(X)-RS232 9 Pin Connector</b>
17 26 or 22	RxD to TxD Data Ground	4 or 9 1 or 5 or 8
		Protocol: connect pin 7 to ground. <i>Jumper pin 2 to ground for 10' resolution.</i>

To allow the **Garmin 300 series GPS/Comm** to communicate with the SSD120-(XX)N-RS232 go to the **I/O Test Page** and set channel 1 input to **Icarus-alt**.

**6.4 ARNAV Systems, Inc.**

**ARNAV Systems 5000 Series Multi-Function Display**

<b>ARNAV 5000 25 Pin Connector</b>	<b>SSD120-(XX)N(X)-RS232 9 Pin Conn.</b>
<b>15</b>	4 or 9
<b>13 or 25</b>	1 or 5 or 8
Protocol, Software select ARNAV protocol see <b>§4.6.</b>	

**ARNAV Systems GPS-505/506/512 GPS Sensor**

<b>ARNAV GPS-505/506/512 DB-25 Connector</b>	<b>SSD120-(XX)N(X)-RS232 9 Pin Conn.</b>
<b>8</b>	4 or 9
<b>9</b>	1 or 5 or 8
Protocol, Software select ARNAV protocol see <b>§4.6.</b>	

**ARNAV Systems DR-100 WxLink Receiver/ Multiplexer**

<b>ARNAV DR-100 25 Pin Connector</b>	<b>SSD120-(XX)N(X)-RS232 9 Pin Conn.</b>
<b>10</b>	4 or 9
<b>13 or 25</b>	1 or 5 or 8
Protocol, Software select ARNAV protocol see <b>§4.6.</b>	

**SSD120-(XX)N-RS232 Software Configuration Note for Use with ARNAV Devices**

The SSD120-(XX)N-RS232 *must* be software configured per **§4.8** or **§4.9** to operate with ARNAV system devices. Ensure that all hardware jumpers are removed from the 9-pin connector. Hardware jumpers on the 9-pin D-Subminiature Connector (DE-9S) *will override* any software settings.

## 6.5 Century Flight Systems

Digital Altitude Preselect/Alerter 1D960 ICAO Parallel Input		
SSD120 Pin	Function	1D960 Pin
1	D4	9
2	A1	25
3	A2	40
4	A4	10
5	B1	26
6	STROBE	Connect to Ground
7	D2	39
8	PWR	--
9	B2	22
10	B4	7
11	C1	23
12	C4	8
13	C2	38
14	PWR	--
15	GROUND	--

Digital Altitude Preselect/Alerter 1D960 ICAO Serial Altitude Data Input	
1D960 Connector CD-245	SSD120-(XX)N(X)- RS232
30	9
33	1 or 5 or 8
<i>TxD2 must be programmed for 1' resolution.</i>	

## Section 7.0 Instructions for Continued Airworthiness


The SSD120-(XX)N(X)-RS232 is an all solid-state device and requires no periodic maintenance to maintain its airworthiness. The altitude encoder is to be tested during the aircraft biennial transponder and pitot-static system test as required by current Federal Aviation Regulations. If the altitude encoder reports an error in excess of  $\pm 125$  feet when compared to the primary flight altimeter, then recalibration as per §4.0 of this manual is required. If the error cannot be corrected through this procedure, then the unit is to be repaired or replaced. Contact Trans-Cal Industries for further information.

## Section 8.0 Adapter Plate Ordering Information

The adapter plates listed below will allow the use of competing digitizer manufacturer's and older Trans-Cal quick release mounting trays with the SSD120-(XX)N(X)-RS232. These adapter plates are designed to allow for quick replacement of altitude encoders.

Manufacturer Model	TCI Adapter Plate Part Number
ACK Model A-30	103059
Ameri-King Model AK350 Series	103061
Narco Model AR-850	No adapter required.
Shadin Model 8800-X Series	103060
Sandia Model SAE5-35	103035
Trans-Cal Model D120-P2-T	103036
Trans-Cal Model SSD120-(XX)A	103038

Pictured below is the SSD120-(XX)N-RS232 mounted on adapter plates and quick release mounting trays for several competing devices. Quick release mounting trays are NOT included with the adapter plates.

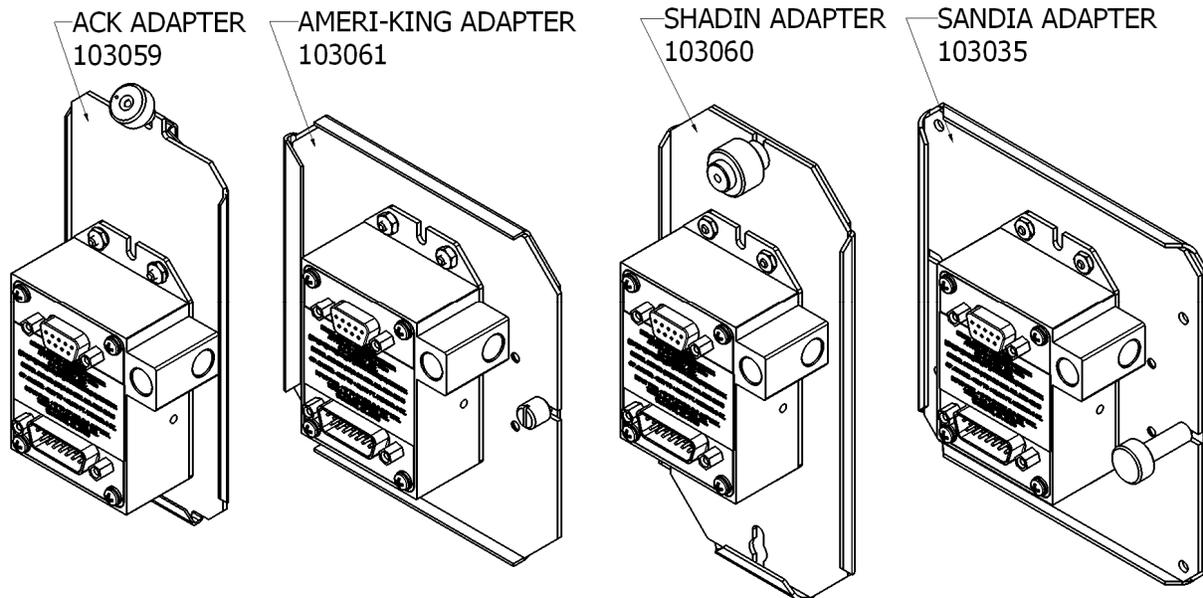

**Section 9.0 Frequently Asked Questions**

1. How often must the Altitude Digitizer be calibrated; is there periodic maintenance required?

There is no periodic maintenance required. The Digitizer is tested and calibrated, if required, during the aircraft's biennial certification of the transponder and static system.


2. How many devices may be driven off of the parallel ICAO Altitude data port?

The number of devices that may be connected to the Digitizer ICAO altitude output is a function of the current and power required. The Digitizer parallel data outputs are "uncommitted" collectors of a transistor array which are "pulled-up" through a resistive load by the transponder (or other device) to some positive voltage. This voltage may range from about +3 to +40Vdc. Each Digitizer data output line (i.e. D4, A1, A2, A4 etc.) is capable of providing 35 mA (0.035 Amperes) with a "not to exceed" power rating of 100mW (0.1 Watts), when it is "sinking" current in the "on" position. Typical modern applications require about 1 milliampere or less per data line, per device.

In the circuit illustrated below, the current is calculated as 0.9mA at 8.1mW. At this current and power rating, a total of 12 identical devices could be connected to the digitizer. *Given the wide variety of input circuits capable of interfacing with the Digitizer and the possibility of cross-talk, careful planning of the electrical loads acting upon the Digitizer output is advised.*


$$V/R = I \quad 9Vdc / 10000 \text{ Ohms} = 0.0009 \text{ Amps}$$

$$V(I) = P \quad 9Vdc \times 0.0009 \text{ Amps} = 0.0081 \text{ Watts}$$

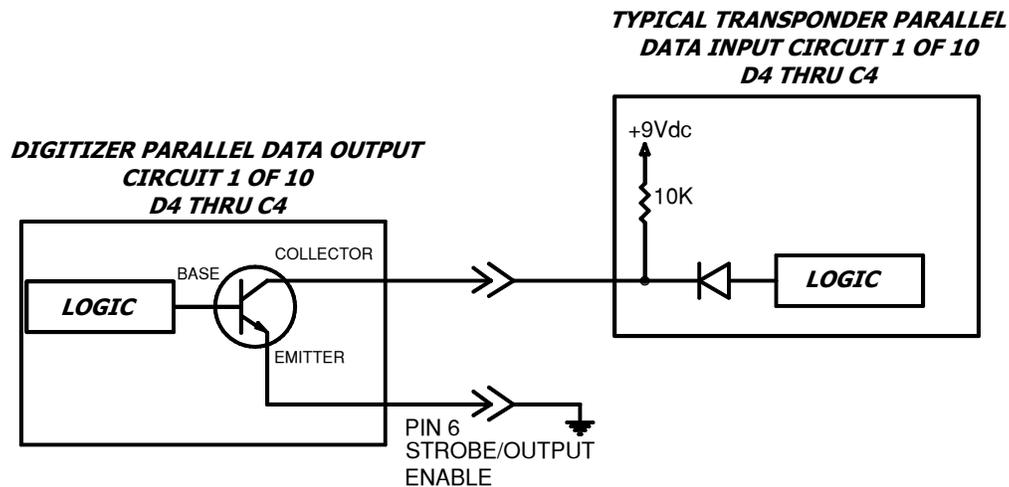

3. *Why do altitude encoding errors occur when connecting a second or third device to the altitude encoder, but not when only one device is connected?*

This is a symptom of "Cross-Talk." This condition typically occurs when the devices connected to the altitude encoder are "pulling-up" to different voltages without diode isolation. When the altitude encoder is in the "off" state the data line electrical current may flow in undesired directions due to this pull-up voltage imbalance. Most modern avionics devices are diode isolated, but in applications where older equipment is mixed with new devices, blocking diodes may be required to isolate the older device. Germanium or Schottky blocking diodes are the preferred devices to install due to the low forward voltage drop across the device. Connect as detailed in the illustration below. Use of general purpose silicon diodes are *NOT* recommended, as the larger voltage drop may interfere with the logic threshold detection in the equipment.

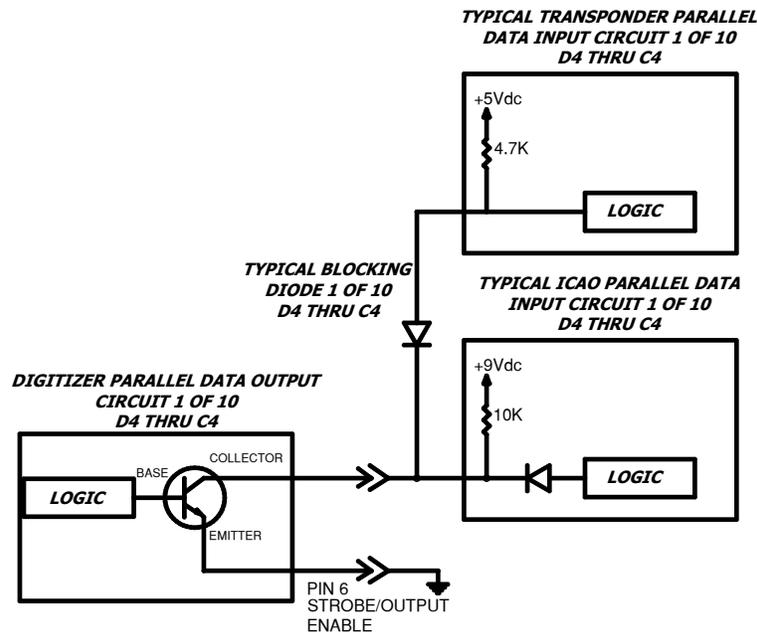

4. *My transponder does not have a D2 or D4 input. What do I do with these signals from the Digitizer?*

Leave unused data bits unconnected.

5. *What is the **Strobe** or **Signal Common** or **Output Enable** function on the ICAO altitude data port?*

This is a control signal for the ICAO parallel altitude data. On devices manufactured by Trans-Cal this function is always on pin 6 of the ICAO altitude port. A "high" or "open" on this pin will disable the ICAO altitude data. A "low" or "ground" on this line will enable the altitude data. Some interconnecting devices may use this signal to control the flow of data from the Digitizer. Be aware that when using this signal and connecting multiple devices to the Digitizer, interruptions of the ICAO data will occur when the controlling device "strokes" the Digitizer.

6. *On Altitude Digitizers with serial ports, does the strobe function control the serial data?*

No, the serial data is independent of the parallel ICAO altitude data. Transmission of the serial data is asynchronous. Enabling or disabling the parallel data will not affect the serial data transmission.

*7. Must the parallel ICAO altitude data be connected to use the serial data?*

No, the serial data output is completely independent of the parallel data output. However, power must be supplied to the Digitizer through the ICAO altitude data connector.

*8. How many devices may be driven off of the RS232 port?*

One device may be driven off each serial port. Trans-Cal Digitizers provide two RS232 ports on each Digitizer, so two RS232 receiving devices may be driven off of each Digitizer.

*9. Can the Digitizer transmit two different serial data protocol messages at the same time?*

Yes. The Digitizer may be configured via the serial port and an IBM compatible PC to specify the data protocol to be transmitted on each serial port. **See §4.8 or §4.9.**

*10. What is the maximum length of an RS232C wiring harness?*

50 feet in most applications, 25 feet during calibration only.

*11. I have connected the serial data from the digitizer to my GPS device, why does the GPS display a "No Pressure Altitude" message?*

There are several possible problem sources.

Electrical Ground Imbalance

RS232 operates in an "unbalanced" (single-ended) transmission method; where the receiving device monitors the difference between the signal voltage and a common ground. If a significant difference in electrical ground potential between the Digitizer and the receiving device exists, then the RS232 signal levels may be adversely affected. Verify the digitizer and receiving device electrical grounds are referenced together by connecting one of the ground pins on the Digitizer RS232 connector to the receiving device's ground.

Receiving Device Configuration

The receiving device is looking for a specific message at a specific baud rate and parity. These messages, baud rates and parity vary from manufacturer to manufacturer. A mismatch on any one of these items will cause a communication failure. In addition, many devices are capable of software configuration to accept RS232 data on different connector pins. Verify the following:

- a. Digitizer data is routed to the correct connector pin on the receiving device.
- b. The receiving device is software configured to accept data on that connector pin.
- c. The receiving device is software configured to accept the correct message protocol at the correct baud rate and parity.
- d. The Digitizer is transmitting the same message, baud rate and parity as configured in item c above.

*12. How can I verify the RS232 data message, baud rate and parity transmitted from the Digitizer?*

- a. Use the Trans-Cal ATS-400 Test Set to display the RS232 data.
- b. Use a PC with an open RS232 port and serial data capture software. Some possible software solutions include: HYPER TERMINAL (Windows® 95 & 98 & XP), SOFTWARE WEDGE™, PROCOMM™, VERSATERM™.
- c. Use a dedicated serial data test box such as the BLACK BOX™ RS232 MONITOR.
- d. An oscilloscope may be used to view the 9Vdc square wave transmitted about 1/second.

## **Section 10.0 Known Compatibility Issues**

### **10.1 Honeywell KT 73 Transponder with Serial Altitude Data Input**

The **KT 73** must be configured to accept serial altitude data on pin 7 of the main connector, and software configured for *High Resolution M* (IIMorrow). 1200bps, 7 data bits, 1 stop bit and odd parity. The Trans-Cal **SSD120-(XX)N(X)-RS232** must be software configured to transmit the correct serial data protocol to the Bendix/King KT 73 transponder as described in §5.0 of this manual.

### **10.2 Narco AT5A, AT6A, AT-50 and AT-50A Installations and SSD120-(XX)N Mod.1**

The Narco AT-5A, AT-6A, AT-50 or AT-50A transponder will not accept data from the SSD120-(XX)N-RS232 Altitude Digitizer. A modification to remove the output decoupling capacitors is required and the unit may be ordered from the factory with this modification. Order Model Number SSD120-(XX)N with Mod. 1. **Please note! This modification may NOT be performed in the field. Please also note!** The Narco AT-50 and earlier transponder models require a modification before they will function correctly with any altitude encoder. This modification is outlined in Narco Service Bulletin AT-50A-5.

### **10.3 “Mod. 1” Installations**


SSD120-(XX)N-RS232 Mod.1 Altitude digitizers lack decoupling capacitors on the ICAO altitude data line outputs to enable operation with older Narco transponders. When installing a Mod. 1 unit in an aircraft, and **particularly when installing in composite structured aircraft**, great care should be taken to insure that the digitizer is located away from RF emitting devices and fields. The interconnecting data harness must be shielded and properly grounded. Additional shielding around the digitizer may be required to prevent stray RFI from disrupting the digitizer’s analog signal sensing electronics.

### **10.4 King KT-75**

The King KT-75/75R uses the old RTL (resistor transistor logic) pulling up to about 3 volts; consequently the open collectors of the SSD120-(XX)N(X)-RS232 will not pull the signal past the KT-75 logic threshold.

### **10.5 S-Tec (Collins) TDR950**

The TDR950 must be powered-up first, or the SSD120-(XX)N(X)-RS232 must be diode isolated to prevent the TDR 950 from invalidating the encoder data. All diodes are type 1N4454 (CPN 353-3741-010).

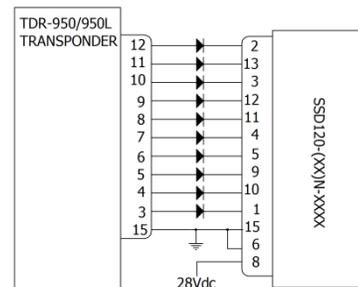

### **10.6 Trans-Cal SSD120-(XX)N Backwards Compatibility**



All Model SSD120-(XX)N-XXXX are pin-for-pin replacements for all Model SSD120-(XX) and D120-P2 T, with ONE exception. The older SSD120-(XX) utilized a 28V heater ground on pin 1 of the D-Subminiature connector. Pin 1 is the D4 data bit on the SSD120-(XX)N models. Rewire the harness appropriately, if D4 is an active bit. No action is required if D4 is unused. All Model SSD120-(XX)N-XXXX are pin-for-pin replacements for all Model SSD120-(XX)A-XXXX.

**10.7 SSD120-(XX)N-RS232 Compatibility to Competitor's Products**


<b>Manufacturer</b>	<b>Compatibility with Model SSD120-(XX)N(X)-RS232</b>
ACK Technologies	Model A-30 Pin-for-pin compatible.
Ameri-King Corp.	Model AK-350 Pin-for-pin compatible.
Becker Avionic Systems	BE6400-01-(XX) Utilizes an RS422 interface and is not compatible with Trans-Cal encoders.
Narco	Model AR-850 Pin-for-pin compatible.
Narco	Model AR-500 Uses a 25 Pin D-Sub connector and must be rewired to use SSD120-(XX)N(X)-RS232.
Rocky Mountain Instrument	Model $\mu$ Encoder no display function and requires rewiring the harness to use SSD120-(XX)N(X)-RS232.
Shadin	See chart below.
Sandia	Model SAE5-35 ICAO data is pin-for-pin compatible, RS232 data must be rewired to use SSD120-(XX)N(X)-RS232.
Terra	Model AT3000 is pin-for-pin compatible.

<b>Manufacturer</b>	<b>Compatibility with Model SSD120-(XX)N-RS232</b>
Shadin Model 8800M	ICAO data is pin-for-pin compatible, RS232 data is output on pin 7. Rewire to use TCI 9 pin D-Sub connector. Configure for UPS AT serial data message §1.8.1 of this manual.
Shadin Model 8800G	ICAO data is pin-for-pin compatible, RS232 data is output on pin 7. Rewire to use TCI 9 pin D-Sub connector. Configure for Magellan serial data message §1.8.4 of this manual.
Shadin Model 8800T	ICAO data is pin-for-pin compatible, RS232 data is output on pin 7. Rewire to use TCI 9 pin D-Sub connector. Configure for Trimble serial data message §1.8.2 of this manual.
Shadin Model 8800A	ICAO data is pin-for-pin compatible, RS232 data is output on pin 7. Rewire to use TCI 9 pin D-Sub connector. Configure for ARNAV serial data message §1.8.5 of this manual.
Shadin Model 9200T	ICAO data is pin-for-pin compatible, RS232 data is output on pin 7. Rewire to use the 9 pin D-Sub connector. Configure for Trimble serial data message §1.8.2 of this manual.

**Wiring Harness Diagram TCI Part Number 881404**

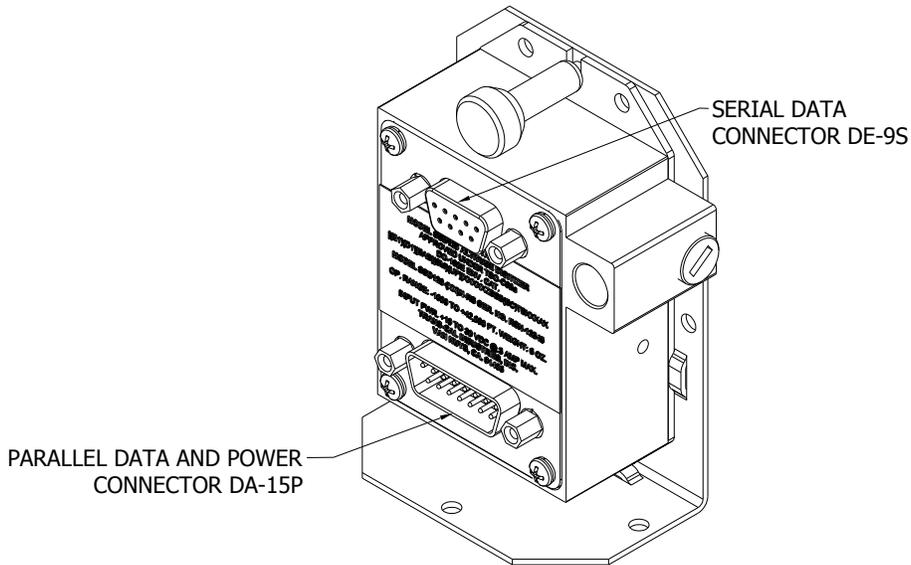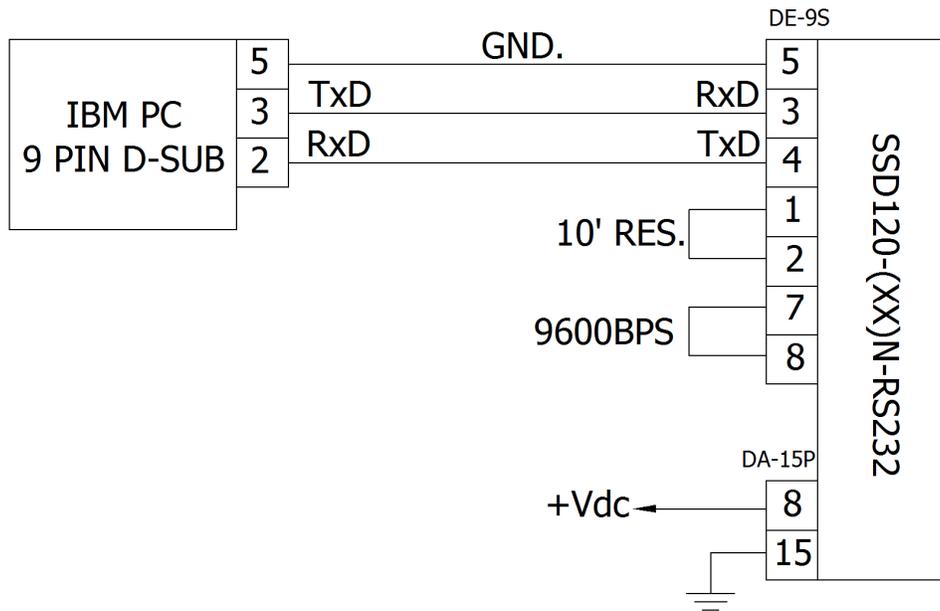


**Span Adjust Block Diagram**

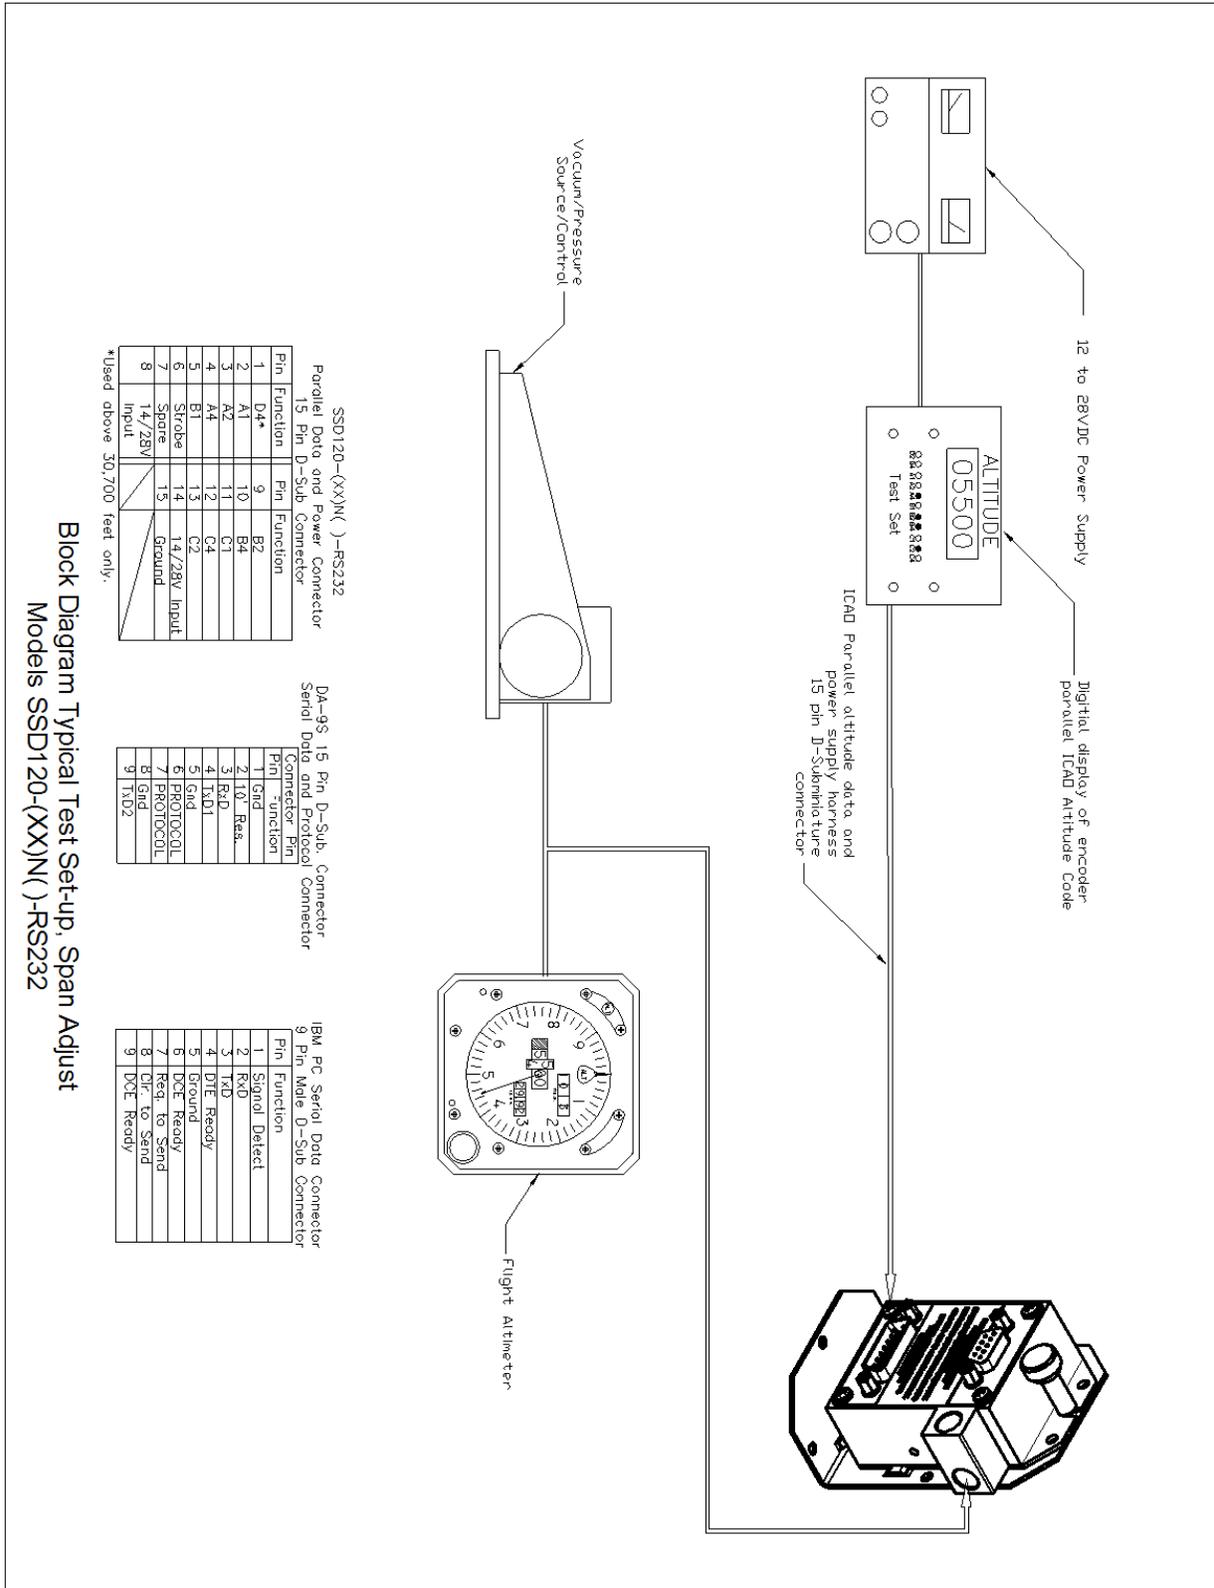


Block Diagram Typical Test Set-up, Span Adjust  
Models SSD120-(XX)N()-RS232


### Dynamic Calibration Block Diagram

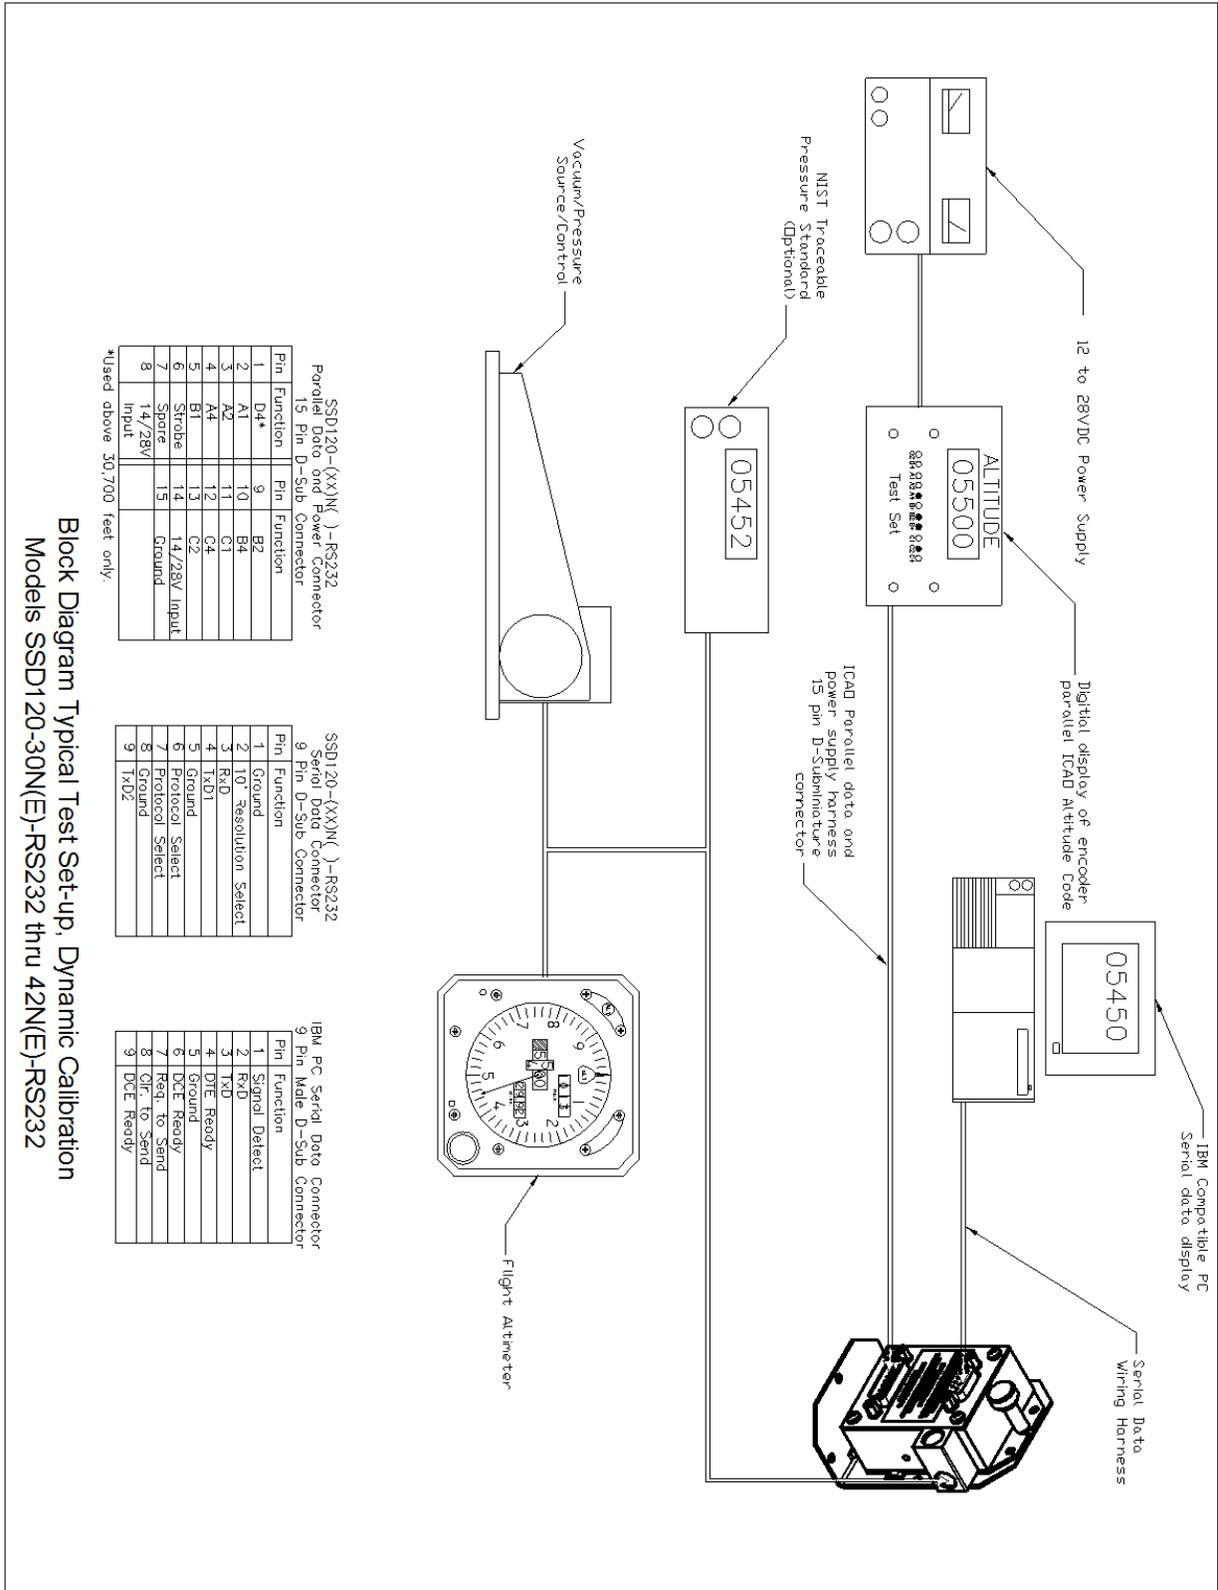

**Figure 5 Temperature vs. Warm-up Time**

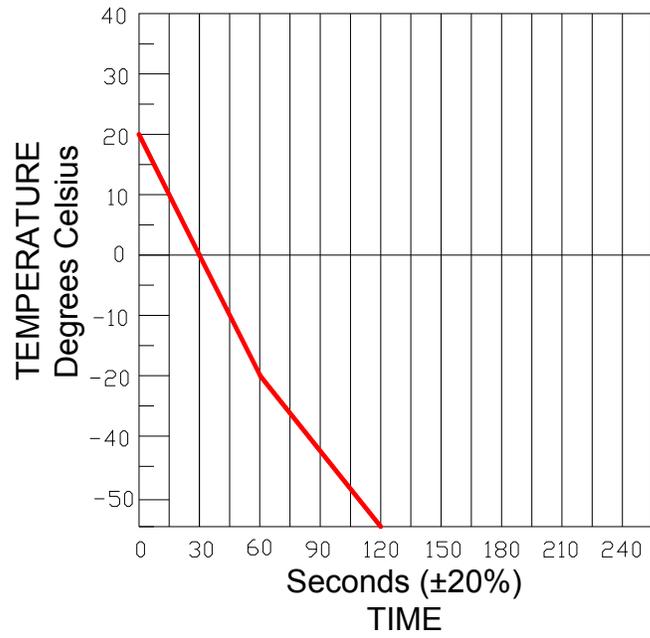

Outline Drawing

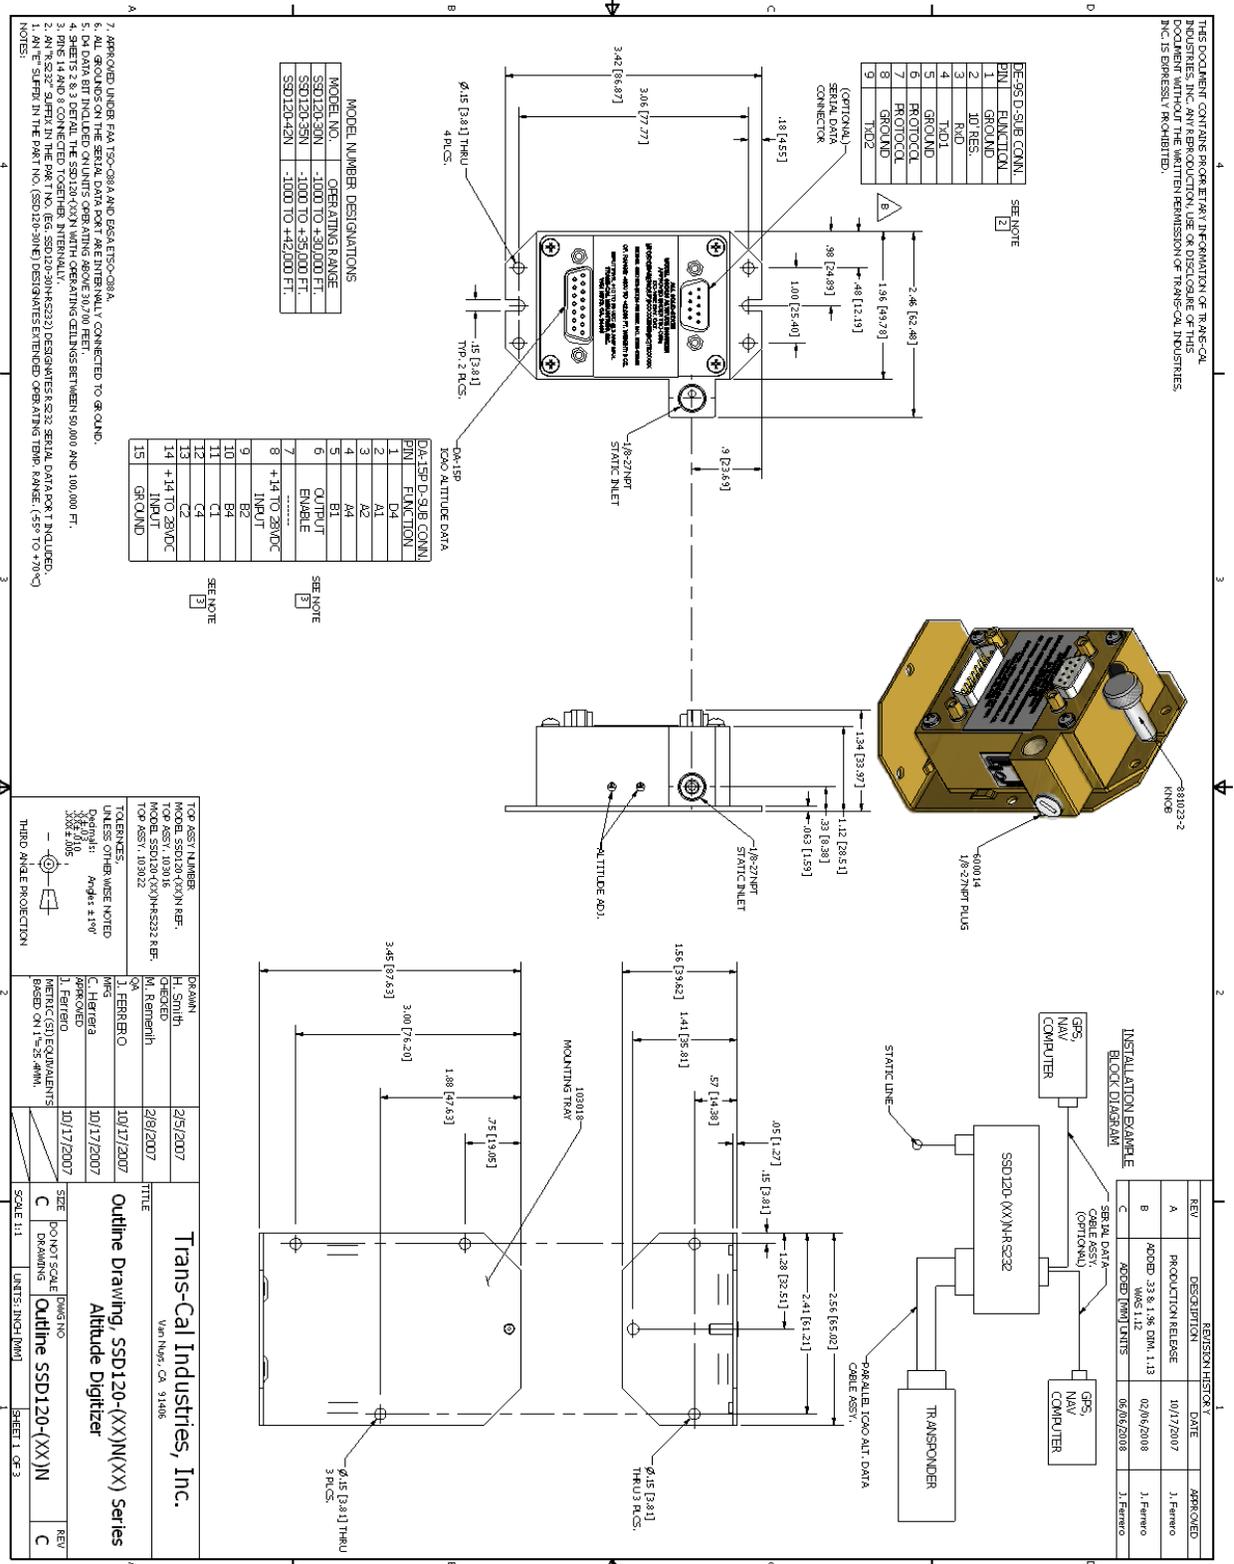

**Environmental Qualification Form****Nomenclature:** Altitude Digitizer**Model No.:** SSD120-42NE-RS232

FAA TSO-C88a and EASA ETSO-C88a

**Manufacturer:** Trans-Cal Industries, Inc., 16141 Cohasset St. Van Nuys, CA 91406**DO-160E Tested:** October 2007

Conditions	Section	Description of Tests Conducted
Temp. and Altitude	§4.0	Tested to Category D1.
Low Temperature High Temperature In-Flight Loss of Cooling	§4.5.1 §4.5.2 & 4.5.3 §4.5.4	No cooling required.
Altitude Decompression Overpressure	§4.6.1 §4.6.2 §4.6.3	
Temp. Variation	§5.0	Tested to Category B.
Humidity	§6.0	Tested to Category A.
Operational Shock and Crash Safety	§7.0	Tested to Category B.
Vibration	§8.0	Tested to Category S Fixed Wing Zone 1, 2, 3 & 5 Curve M and Tested to Category U Helicopter Zone 1 & 2 Curve F & F1.
Explosive Atmosphere	§9.0	Identified as Category X, no test performed.
Waterproofness	§10.0	Identified as Category X, no test performed.
Fluids Susceptibility	§11.0	Identified as Category X, no test performed.
Sand and Dust	§12.0	Identified as Category X, no test performed.
Fungus Resistance	§13.0	Identified as Category X, no test performed.
Salt Spray	§14.0	Identified as Category X, no test performed.
Magnetic Effect	§15.0	Tested to Category Z.
Power Input	§16.0	Tested to Category B.
Voltage Spike	§17.0	Tested to Category B.
Audio Frequency Conducted Susceptibility – Power Inputs	§18.0	Tested to Category B.
Induced Signal Susceptibility	§19.0	Tested to Category BC.
RF Susceptibility (Radiated and Conducted)	§20.0	Tested to Category T for Radiated Susceptibility, and Category T for Conducted Susceptibility.
Emission of RF	§21.0	Tested to Category B.
Lightning Induced Transient Susceptibility	§22.0	Identified as Category X, no test performed.
Lightning Direct Effects	§23.0	Identified as Category X, no test performed.
Icing	§24.0	Identified as Category X, no test performed.
Electrostatic Discharge	§25.0	Tested to Category A.
Fire, Flammability	§26.0	Identified as Category X, no test performed.

Remarks:

During power input tests, the device was subjected to subparagraph 16.6.1.4b, requirement for devices with digital circuits.

**Part Number Builder**

**SSD120-XX X X X-XXXX**

<b>Max. Operating Altitude (ft.) Dash Number</b>	
30,000	<b>-30</b>
35,000	<b>-35</b>
42,000	<b>-42</b>
50,000	<b>-50</b>
62,000	<b>-62</b>
65,000	<b>-65</b>
80,000	<b>-80</b>
85,000	<b>-85</b>
100,000	<b>-100</b>

<b>Model Nomenclature</b>	
Encoder/Digitizer	<b>A</b>
2" Dia. Module	<b>M</b>
Servo Module	<b>SM</b>
Nano Encoder Series	<b>N</b>

<b>Operating Environment</b>	
Standard -20° to +70°C	<b>Blank</b>
Extended -55° to +70°C	<b>E</b>
Extended Hermetic -55° to +70°C	<b>EH</b>

<b>Static Port Connection</b>	
Female 1/8-27NPT	<b>Blank</b>
.125" Dia Swivel	<b>1</b>

<b>Additional Ports/Features</b>	
Dual RS232 Ports	<b>-RS232</b>
Dual RS232 Ports and One RS485 Port	<b>-RS</b>
Dual RS232 Ports with 1' resolution data on TxD2 and one RS485 Port	<b>-RS1</b>

Model Number Example: SSD120-30NE-RS232  
 Solid State Altitude Digitizer -1000 to +30,000 ft., Nano Style, Extended Temperature Range, 1/8-27NPT Female Static Port, Dual RS232 Ports.

**Manufacturer Direct Warranty  
Do Not Return to Place of Purchase**

Trans-Cal Industries warrants each Model SSD120-(XX)N( )-RS232 solid state altitude digitizer to be free of defects in workmanship and materials for a period of 42 months after the original date of purchase *from an authorized dealer*, not to exceed 60 months from the date of manufacture. **Do NOT send this unit to a distributor or retailer for repair.** Contact the factory directly if you experience problems (818) 787-1221.

This warranty applies to the original purchaser of the instrument and is NOT transferrable. Trans-Cal's obligation under this warranty is limited to repairing or replacing any unit returned to Trans-Cal during the life of this warranty provided:

- (1) The defective unit is returned to Trans-Cal, **transportation pre-paid.**
- (2) Prior approval is obtained from Trans-Cal.
- (3) The unit has not been damaged by misuse, neglect, improper operation, accident, alteration or improper installation.
- (4) The unit is returned with a copy of the purchase receipt from the authorized dealer. (*Online auction sites are not authorized dealers.*)

Trans-Cal **DOES NOT** reimburse labor or shipping costs on warranty repairs. Trans-Cal Industries will be the sole judge as to the cause of the malfunction and wherein the responsibility lies. No other obligation or liability is expressed or implied.

For the above warranty to become effective, the attached registration card **must** be completed and returned to Trans-Cal Industries, properly filled out and signed by the dealer selling or installing this equipment.

Mail to: Trans-Cal Ind., Inc., 16141 Cohasset St., Van Nuys, CA 91406

✂----- cut here -----

**MODEL:** SSD120-(    )N( )-RS232    **SERIAL NO:** SRN-\_\_\_\_\_

**AIRCRAFT:**\_\_\_\_\_ **NUMBER:**\_\_\_\_\_

**OWNER:**\_\_\_\_\_

**ADDRESS:**\_\_\_\_\_

**CITY:**\_\_\_\_\_ **STATE:**\_\_\_\_\_ **ZIP:**\_\_\_\_\_

**DEALER:**\_\_\_\_\_

**INSTALLED BY:**\_\_\_\_\_

**LICENSE NO:**\_\_\_\_\_

**INSTALLATION DATE:**\_\_\_\_\_

I hereby certify the above instrument was installed in accordance with the instructions of Trans-Cal Industries, and the installation was done to industry standards. I further certify the instrument was properly working on the above date.

**SIGNED:**\_\_\_\_\_

**PRINT NAME:**\_\_\_\_\_