


INSTALLATION INSTRUCTIONS
UNIVAIR P/N U2151A-000
UNIVERSAL ADJUSTABLE SPRING CONNECTOR ASSEMBLY

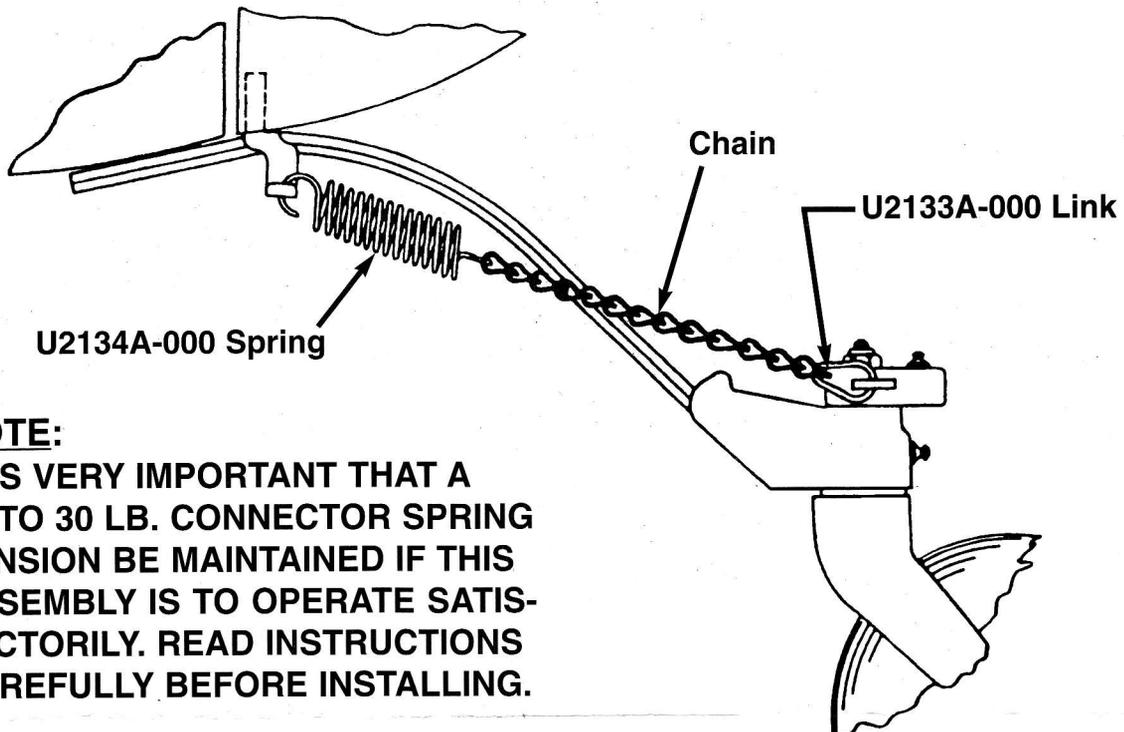

NOTE:

IT IS VERY IMPORTANT THAT A 25 TO 30 LB. CONNECTOR SPRING TENSION BE MAINTAINED IF THIS ASSEMBLY IS TO OPERATE SATISFACTORILY. READ INSTRUCTIONS CAREFULLY BEFORE INSTALLING.

PROCEDURE

1. Attach chain to P/N U2134A-000 Springs (round end of link to closed spring hook as shown).
2. Attach P/N U2133A-000 Links to tail wheel steering arms by inserting end of link wire through steering arm hole and rotating until link is attached as shown.
3. Hook springs into rudder steering horns and draw chains back over P/N U2133A-000 Links.
4. Carefully even steering horn arms with rudder horn arms so that connectors will be equal in length.
5. Cut off enough links from each connector chain to stretch spring approximately one inch when installed, (this will produce a tension of approximately 25 to 30 lbs.).
6. Attach flat end of chain to P/N U2133A-000, Links as shown; this is accomplished by inserting one end of P/N U2133A-000 link wire through chain link and sliding chain link back until other wire end of hook will also enter chain link.

NOTE: Count chain links used to make sure connector lengths are equal.

UNIVAIR AIRCRAFT CORPORATION, AURORA, CO