




RTX

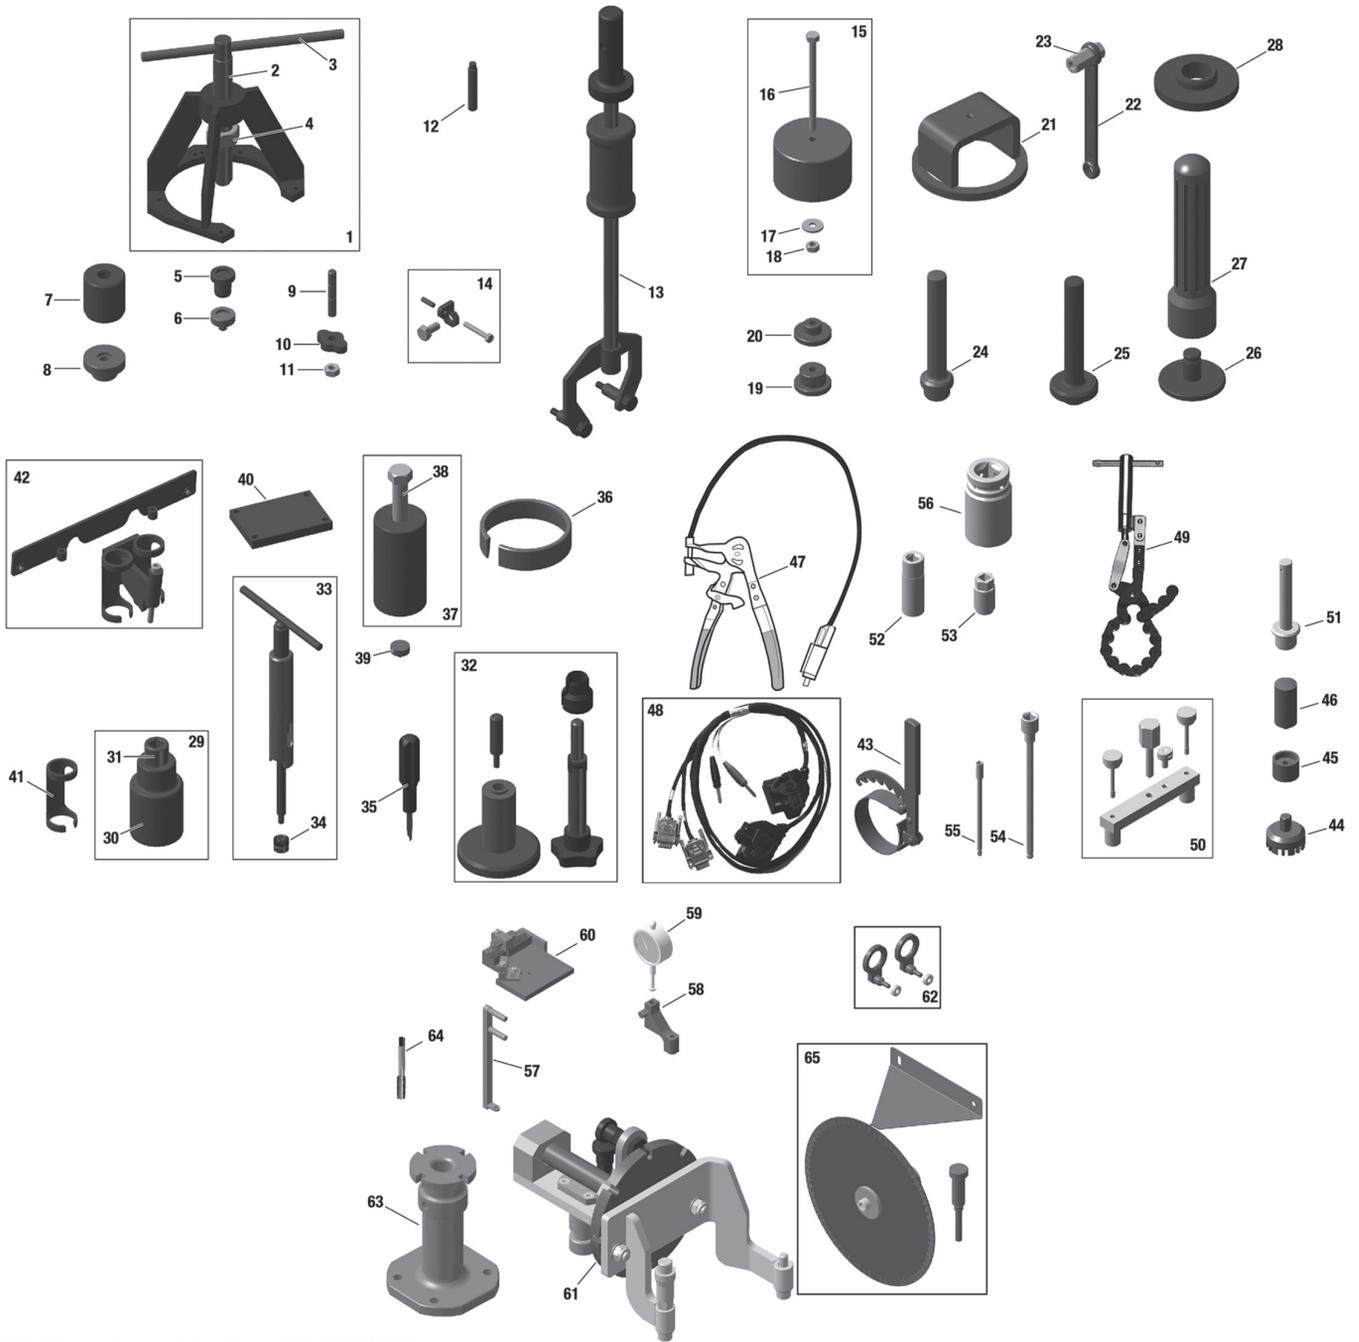

## REPAIR TOOLS (NON CERTIFIED)

Item No.	Application	Item No.	Application	Item No.	Application
1-4	Roller bearing 25x25x15, oil seal 30x52x7	26	Oil seal 40x55x7 gear box cover	48	Engine Control Unit (ECU)
5	Prop shaft version 2	27	Stamp	49	Oil filter
6	Prop shaft version 3	28	Ball bearing 35-72-17, propeller shaft	50	Ignition housing
7	Roller bearing 25x52x15, oil seal 30x52x7, version 2	29-31	Drive gear, gearbox, gear set	51	Oil Seal 28x38x7 Ignition housing
8	Roller bearing 25x52x15, oil inlet flange version 3	32	Fitting of piston pin circlips	52	Pressure sensor Oil and Airbox
9	Roller bearing 25x52x15, oil seal 30x52x7	33-34	Fitting and removal of piston pin	53	Temperature sensor Oil and Water
10-11	Roller bearing 25x52x15, oil seal 30x52x7, oil inlet cover	35	Monohook clips puller	54	Engine mount
12	Crankshaft locking screw M8x50	36	Piston diameter 84 mm/33 in.	55	Intake manifold
13-14	Gearbox	37-38	Puller Magneto hub	56	Nut for sprag clutch housing
15-18	Ball bearing 15x32x8, Oil inlet flange, oil inlet cover	39	Crankshaft magneto side	57	Crankcase
19	Needle bearing 22x28x12-vacuum pump	40	To align cylinders	58-59	Dial gauge
20	Ball bearing 15x32x8-vacuum pump	41-42	Installation/Removal of valve spring	60	Dial gauge adapter for valve seat inspect
21	Mounting yoke, gearbox components	43	Oil filter removal	61	Crankcase
22	Ring wrench 10/13	44	Waterpump impeller	62	Engine removal
23	Fixture for vacuum pump drive	45	Rotary seal ignition housing	63	Trestle support
24	Ball bearing 15x32x8, needle sleeve vacuum pump	46	Oil Seal 12x30x7 water pump shaft	64	Thread bent socket
25	Oil seal 22x32x7 vacuum pump	47	Spring type hose clip 28	65	Twist of crankshaft