

PIPER SUPERCUB PARTS

PA-18 SUPERCUB PARTS



FRONT LOWER WINDOW CHANNEL

Left Side FAA-PMA P/N 05-00491 ---

AFT LOWER WINDOW CHANNEL

Left Side FAA-PMA P/N 05-00492 ---

FRONT WINDOW CHANNEL

Left Side FAA-PMA P/N 05-00493 ---

UPPER WINDOW FORMER

Left Side FAA-PMA P/N 05-00494 ---


FORWARD VERTICAL WINDOW CHANNEL

Left Side FAA-PMA P/N 05-00495 ---

AFT VERTICAL WINDOW CHANNEL

Left Side FAA-PMA P/N 05-00496 ---

PIPER PA-18 FAIRINGS

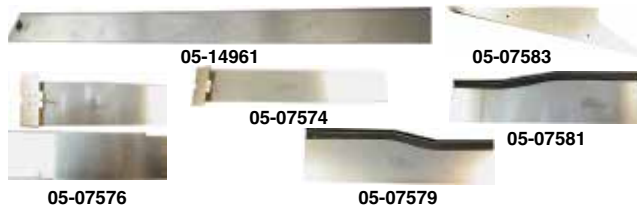

Examples of Fairings are for Reference Only!

Description	A/C Model	Part No.	Price
Upper Wing Root Fairing	Piper PA-14, PA-15, PA-16, PA-17, PA-18, PA-20, PA-22	05-14961	---
Bottom Front Wing Root Fairing - Left	Piper PA-18	05-07572	---
Bottom Front Wing Root Fairing - Right	Piper PA-18	05-07573	---
Rear Bottom Fairing - Left	Piper PA-18	05-07574	---
Rear Bottom Fairing - Right	Piper PA-18	05-07576	---
Wing Root Fairing - Left	Piper PA-18	05-07579	---
Wing Root Fairing - Right	Piper PA-18	05-07581	---
Fairing Attachment Plate - Left	Piper PA-18	05-07582	---
Fairing Attachment Plate - Right	Piper PA-18	05-07583	---

ADDITIONAL FAA-PMA PARTS FOR PA18 SUPERCUB

Description	Part No.	Price
Piper hinge - half	05-00510	---
Interior tab	05-00511	---
Pulley bracket	05-00512	---
Pulley bracket	05-00513	---
Forward elevator pulley half	05-00514	---
Flap lever hinge - weld on fuselage or seat	05-00516	---
Shock strut	05-00518	---
Fuel selector bracket	05-00520	---
Tailspring bracket	05-00521	---
Tailspring mount pad - forward	05-00522	---
Aileron pulley bracket	05-00523	---
Floorboard tabs	05-00525	---
Cabane Vee	05-00526	---
Elevator horn	05-00530	---
Rudder horn blank	05-00531	---
RH Rudder Pedal Assembly	05-00532	---
LH Rudder Pedal Assembly	05-00533	---
RH Brake Pedal Assembly	05-00534	---
LH Brake Pedal Assembly	05-00535	---
3/8" U Channel - 6' Lengths	05-04564	---
Exhaust stack rear - PA18 150 HP	05-07605	---
Muffler Assembly - PA18 150 hp	05-00544	---

PA18 LANDING GEAR



Specify right or left side.

11/4 axle, heavy duty; FAA-PMA

P/N 05-00489 ---

11/2 axle, heavy duty; FAA-PMA

LEFT P/N 05-00490 ---

1-1/2 Axle, Heavy Duty, FAA/PMA

RIGHT P/N 05-11813



REAR TORQUE TUBE SUPPORT & BEARING

Weld on; FAA-PMA P/N 05-00497 ---



FRONT TORQUE TUBE SUPPORT & BEARING

 
Weld on; FAA-PMA P/N 05-00498 ---



HEAVY DUTY 5/8 LIFT STRUT FORK

Rolled threads, stainless, heat treated.

P/N 05-00501 ---



TOP DECK SUPERSTRUCTURE

Top Deck P/N 05-00502 ---

\$30 CRATE FEE



JACK SCREW TOWER

P/N 05-00503 ---

\$20 CRATE FEE



MUFFLER BAIL U452-093

Muffler Bail Welded inside muffler outlet to guard against Flame Tube failure and obstruction of exhaust outlet.

P/N 05-02150 ---



TAIL REPAIR SECTION - 4'

Without Jack screw tower.

P/N 05-00504 ---

With Jack screw tower

P/N 05-00505 ---

Crate fee applies.



FUEL QUANTITY TRANSMITTER FOR PIPER AIRCRAFT

McFarlane fuel quantity transmitters are a direct replacements for originally installed Stewart Warner type fuel quantity transmitters. Eliminates the need for expensive transmitter conversion kits that require replacement of fuel gauges and wiring. These transmitters are engineered to be compatible with the original fuel quantity gauge and wiring which uses time proven technology and reliability.

Each transmitter is manufactured using the new Stewart Warner "thick film ceramic" resistor technology. The benefits are longer life and increased accuracy. All components are thoroughly tested to ensure reliable operation.

Note: Does NOT include screw/seal assembly or gasket (see accessories to order separately).

MC68101-02 kit P/N 05-04874 ---

Accessories - See our website for application information.

Transmitter MC68101-02 P/N 05-04870 ---

Gasket MC461-931 P/N 05-04871 ---

GA Gasket SKET MC462-021 P/N 05-04872 ---

Pack of 5 - Screw Seal Assy. MC1802 P/N 05-04873-5 ---