

BERINGER WHEEL & BRAKE PARTS



BERINGER WHEEL SERVICE PARTS

Description	Beringer P/N	Part Number	Price
Outer bearing - Individual	B-BE-001	06-04287	.
Inner bearing - Individual	B-BE-002	06-04286	.
Bearing - Individual	B-BE-003	06-04285	.
Bearing - Individual	B-BE-007	06-04284	.
Bearing - Individual	B-BE-008	06-04283	.
Bearing - Individual	B-BE-013	06-04282	.
Bearing - Individual	B-BE-014	06-04281	.
Circlip - Individual	C-AL-001	06-04278	.
Circlip - Individual	C-AL-002	06-04277	.
Circlip - Individual	C-AL-003	06-04276	.
Circlip - Individual	C-AL-006	06-04275	.
Circlip - Individual	C-AL-008	06-04274	.
Circlip - Individual	C-AL-009	06-04273	.
Circlip - Individual	C-AL-011	06-04272	.
Wheel clip - Individual	CLP-001(B)	06-04182	.
Wheel clip - Individual	CLP-002(C)	06-04271	.
Wheel clip - Individual	CLP-002(D)	06-04270	.
Wheel clip - Individual	CLP-004(A)	06-01654	.
Wheel clip - Individual	CLP-006(A)	06-04269	.
Wheel O-ring - Individual - 5" Wheel	J-JTR-006N	06-01994	.
Wheel O-ring - Individual - 6" Wheel	J-JTR-007N	06-01995	.
Wheel O-ring - Individual	J-JTR-009N	06-04253	.
O-ring - Individual	J-JTR-015N	06-04252	.
Wheel O-ring - Individual	J-JTR-016N	06-04251	.
Valve O-ring - Individual	J-JTR-017N	06-01996	.
Wheel O-ring - Individual	J-JTR-019N	06-01992	.
O-ring - Individual	J-JTR-023N	06-04250	.
O-ring - Individual	J-JTR-024N	06-04249	.
Lip seal - Individual	J-JBE-002N	06-04256	.
Lip seal - Individual	J-JBE-004N	06-04255	.
Lip seal - Individual	J-JBE-005N	06-04254	.
Screw M5x20/Vis M5x20	V-CHC-052	06-04213	.
Screw CHC M6x35	V-CHC-030	06-04214	.
Wheel assy screw - Individual	V-CHC-020	06-04215	.
Wheel assy screw - Individual	V-CHC-015	06-04216	.
Clip screw - Individual	V-CHC-010	06-04217	.
Wheel assy screw - Individual	V-CHC-009	06-04218	.
Wheel assy screw - Individual	V-CHC-008	06-04219	.
Clip screw - Individual	V-CHC-005	06-04220	.
Wheel assy screw - Individual	V-CHC-004	06-04221	.
Wheel assy screw - Individual	V-CHC-003	06-04222	.

BERINGER SENSAR WHEEL TIRE PRESSURE MONITORING SYSTEM

Description	Beringer P/N	Part Number	Price
5" - Experimental Use Only	TP-005	06-04226	.
6" - Experimental Use Only	TP-006	06-04224	.
5" - Certified - For use with STC	TP-005 Certified	06-04225	.
6" - Certified - For use with STC	TP-006 Certified	06-04223	.



BERINGER BRAKE SERVICE PARTS

Description	Beringer P/N	Part Number	Price
Back stop - Individual	BTR-001(C)	06-04280	.
Back stop - Individual	BTR-002(C)	06-04279	.
Brake disc - (Package as Pair)	DSC-006(B)	06-01119	.
Brake disc - (Package as Pair)	DSC-008(A)	06-01649	.
Brake disc - (Package as Pair)	DSC-008.2(A)	06-01651	.
Brake disc - (Package as Pair)	DSC-009.3(A)	06-01653	.
Brake disc - (Package as Pair)	DSC-009.4(A)	06-04268	.
Brake disc - (Package as Pair)	DSC-009.5(A)	06-04267	.
Brake disc - (Package as Pair)	DSC-011(B)	06-04266	.
Brake disc - (Package as Pair)	DSC-012(A)	06-04265	.
Brake disc - (Package as Pair)	DSC-014(A)	06-04264	.
Brake disc - (Package as Pair)	DSC-015(A)	06-04263	.
Fixation Pin	PIO-006(A)	06-04241	.
Fixation Pin	PIO-007(A)	06-04240	.
Brake Pad - (Package as Pair)	PQT-003/004(A)	06-01103	.
Brake disc - (Package as Pair)	PQT-008(B)	06-04237	.
Brake disc - (Package as Pair)	PQT-009(A)	06-03027	.
Brake disc - (Package as Pair)	PQT-010(A)	06-01991	.
Brake disc - (Package as Pair)	PQT-012(C)	06-04236	.
Brake disc - (Package as Pair)	PQT-013(C)	06-04235	.
Brake disc - (Package as Pair)	PQT-014(C)	06-04234	.
Piston - Individual	PSE-002(A)	06-04233	.
Piston - Individual	PSE-003(A)	06-04232	.
Piston - Individual	PSE-004(A)	06-04231	.
Piston - Individual	PSE-005(A)	06-04230	.
Piston seal - Individual	JNT-002N(A)	06-04248	.
Piston seal - Individual	JNT-003E(A)	06-04247	.
Piston seal - Individual	JNT-004N(A)	06-04246	.
Piston seal - Individual	JNT-006E(A)	06-04245	.
Piston seal - Individual	JNT-006N(A)	06-04244	.
SCREW M8X30 TORX HEAD	VIS-029(A)	06-04205	.
Screw	VIS-022(A)	06-04206	.
Screw - Individual	VIS-015(A)	06-04207	.
Screw - Individual	VIS-010(A)	06-04208	.
Screw	VIS-008(A)	06-04209	.
Brake assy screw - Individual	VIS-006(A)	06-04210	.
Brake assy screw - Individual	VIS-003(A)	06-04211	.
Screw CHC M8x41	VIS-002(B)	06-04212	.

BERINGER TOOLS FOR TIRES & BRAKES

Description	Beringer P/N	Part Number	Price
Tire mounting tool for 6 Inch SL-HL-LE Wheels	OT-001.1	06-04289	.
Tire mounting tool for 5 Inch Wheel	OT-002	06-01109	.
Tire mounting tool for 8 Inch Wheel	OT-012	06-04290	.
Brake Bleeding Kit	ONC01	06-04291	.
Extended socket for RV14 Axle Nut	OPA08	06-04292	.