


Installation Instructions

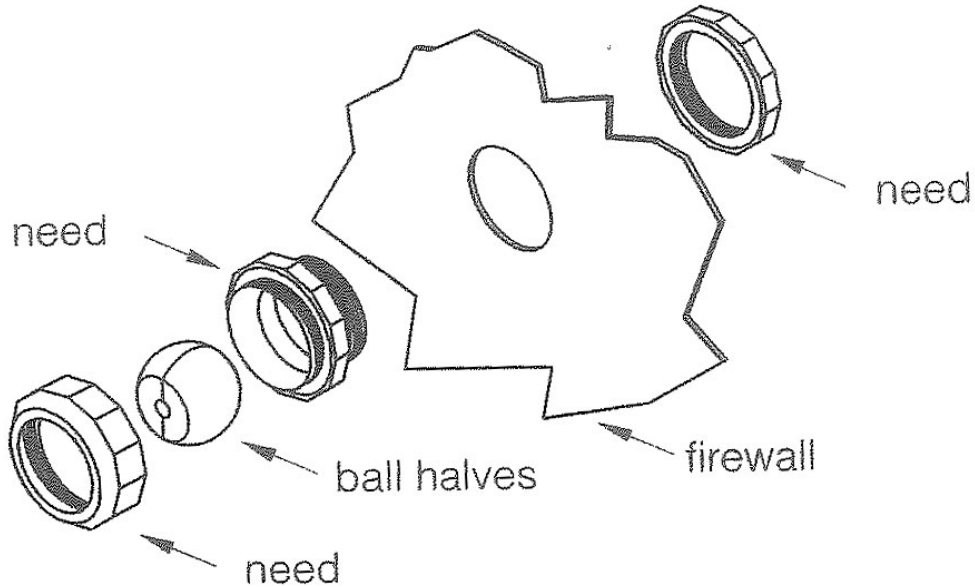

1. Determine hole location.
2. Punch hole with a 3/4" electrical thinwall conduit punch (1.079) or drill hole with a step drill.
3. Install unit through bulkhead and secure with retaining nut.
4. Pass cable or line through body and ball retaining nut.

NOTE: If a larger hole is necessary in the ball halves, assemble the product, making sure the two halves are properly aligned. Place the assembly in a drill vice and clamp on the sides. Enlarge the hole by drilling in no larger than 1/16" increments until the desired diameter is reached. Generally the hole should be approximately .002" - .005" smaller than the cable or tube to be clamped.

Doubletee Products, Inc. • Dayton, Ohio, U.S.A. • 937.233.7257

www.doubleteeproducts.com