



Part Index

*not to scale

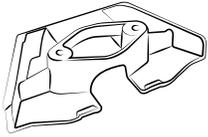

A

(1) Adapter

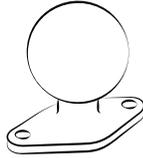

B

(1) Ball Plate



C

(2) #8-32 x 5/8" Screws



D


(2) #8-32 Nylock Nuts




SCAN OR CLICK TO WATCH VIDEO INSTRUCTIONS

How to Assemble


- 1 Connect (A) Adapter to (B) Ball Plate using (C) Screws and (D) Nylock Nuts to assemble the Ball Adapter.

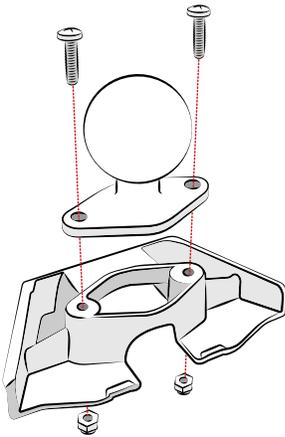

- 2 Connect the power cable to the Starlink Mini.

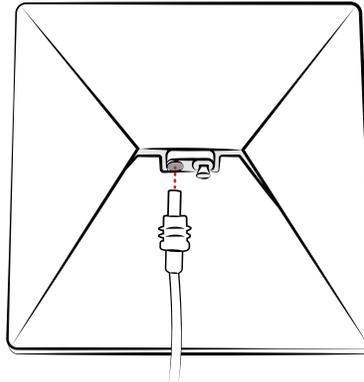


- 3 Insert the Ball Adapter into the Starlink Mini until it 'clicks' into place.

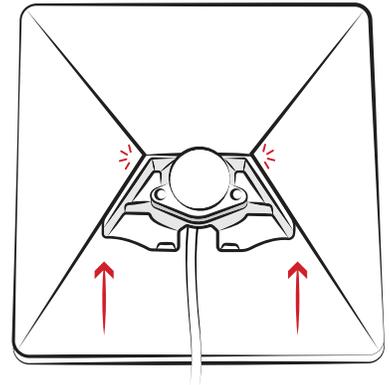


How to Disassemble

- 1 Using the end of a flathead screwdriver, insert into one of the tabs of the Ball Adapter. While inserted, gently twist screwdriver to lift tab from notch. Slide this side of the adapter outward slightly while twisting to dislodge the tab.

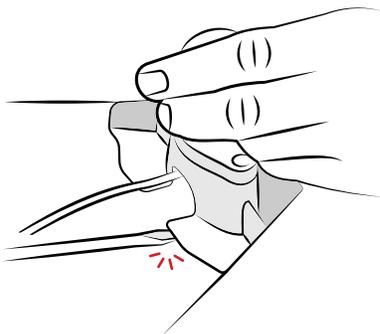

- 2 Repeat on opposite tab of the Ball Adapter. While sliding outward, the Ball Adapter should become disconnected completely from the Starlink Mini.

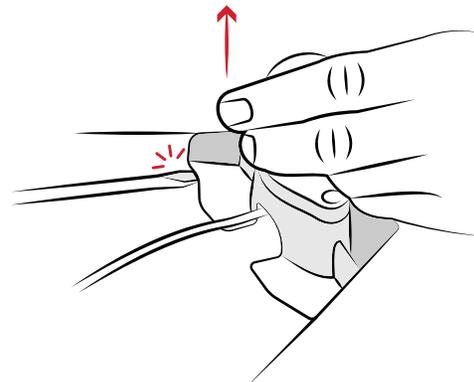

RMR-INS-STA1



Safety Precaution

Do not install this product near or over an airbag deployment area or in a location that obstructs the driver's vision or interferes with vehicle operation. National Products, Inc does not assume responsibility or liability for any such personal injury, death or property damage.