


Figure 4

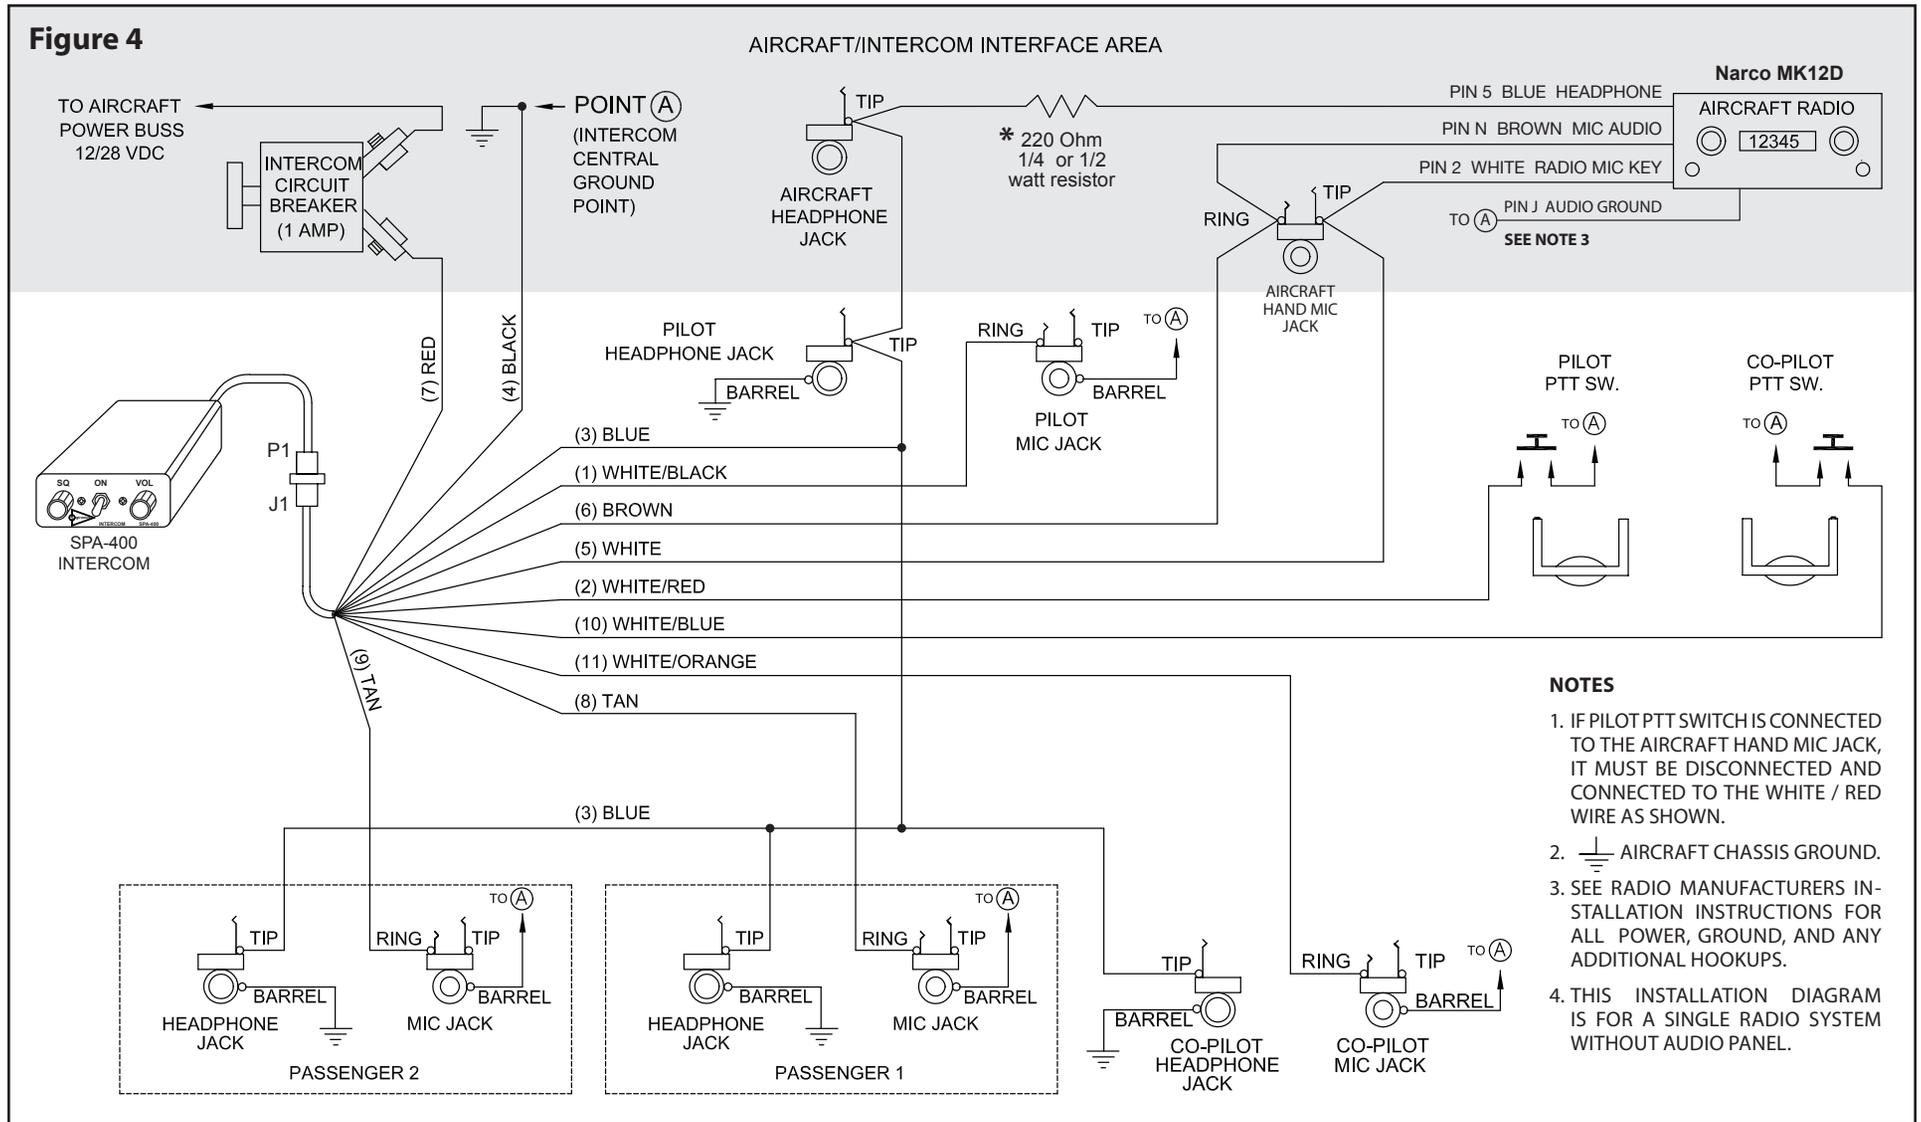

- NOTES**
1. IF PILOT PTT SWITCH IS CONNECTED TO THE AIRCRAFT HAND MIC JACK, IT MUST BE DISCONNECTED AND CONNECTED TO THE WHITE / RED WIRE AS SHOWN.
 2. AIRCRAFT CHASSIS GROUND.
 3. SEE RADIO MANUFACTURERS INSTALLATION INSTRUCTIONS FOR ALL POWER, GROUND, AND ANY ADDITIONAL HOOKUPS.
 4. THIS INSTALLATION DIAGRAM IS FOR A SINGLE RADIO SYSTEM WITHOUT AUDIO PANEL.

SPA-400 – Narco MK-12D Radio Installation Wiring Diagram

*** ICS Load Modification**
 For more information about this resistor mod see the ICS Load Modification instructions.
 File Name: **ICS-Load_1440_Mod.pdf**

