Figure 4

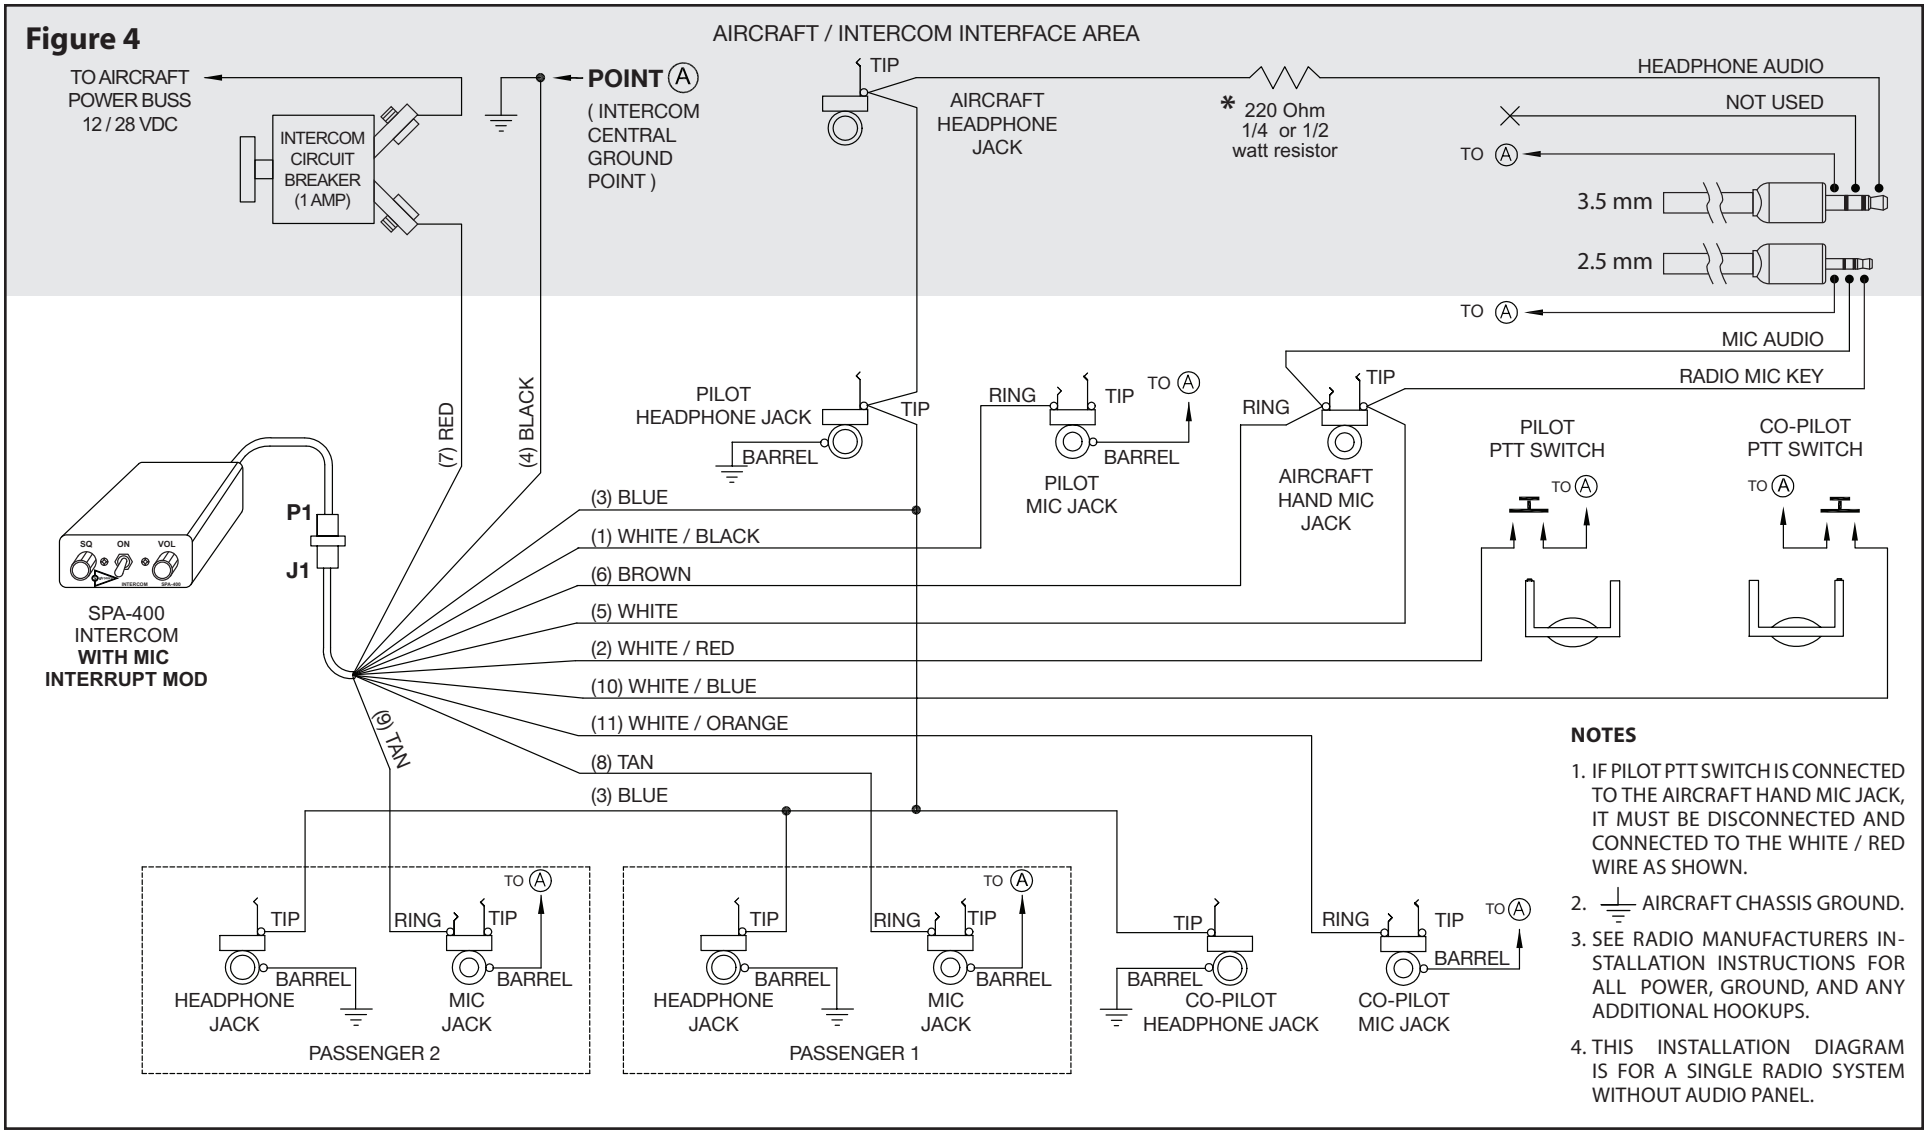

NOTES

1. IF PILOT PTT SWITCH IS CONNECTED TO THE AIRCRAFT HAND MIC JACK, IT MUST BE DISCONNECTED AND CONNECTED TO THE WHITE / RED WIRE AS SHOWN.
2. ⏚ AIRCRAFT CHASSIS GROUND.
3. SEE RADIO MANUFACTURERS INSTALLATION INSTRUCTIONS FOR ALL POWER, GROUND, AND ANY ADDITIONAL HOOKUPS.
4. THIS INSTALLATION DIAGRAM IS FOR A SINGLE RADIO SYSTEM WITHOUT AUDIO PANEL.

SPA-400 – ICOM A3, A6, A22, A24 Radio Installation Wiring Diagram

*** ICS Load Modification**
For more information about this resistor mod see the ICS Load Modification instructions.
File Name: **ICS-Load_1440_Mod.pdf**

Sigtronics Corporation
178 East Arrow Highway
San Dimas, CA 91773

Telephone: (909) 305-9399
E-mail: info@sigtronics.com
Web: www.sigtronics.com