


*AV-200 ELT Antenna*

This antenna is intended for use with an ELT (Emergency Locator Transmitter) for general aviation. It is a passive two frequency wire whip, designed for low speed aircraft (up to 250 knots.).

**Specifications:**

- Application: Airborne ELT
- Frequency: 121.5 & 406 MHz
- Impedance: 50 ohms nominal
- VSWR: 2.0:1 Max. at 121.5 MHz
- 1.5:1 Max. at 406 MHz
- Polarization: Vertical
- Pattern: Omni-Directional
- RF Power Capacity: 10 Watts CW
- Connector: BNC Female
- Max Weight: 3 Oz. Max.
- Max. Height: 24.00 Inches Max.

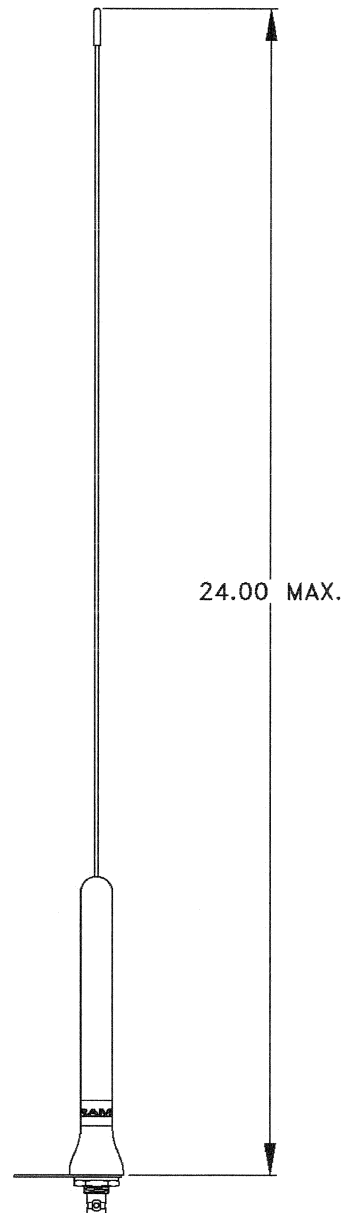



RAMI, Inc.  
P.O. Box 858  
Grand Haven, MI 49417-0858  
(616) 842-9450  
www.rami.com

AV-200  
ELT Antenna for General Aviation  
Frequency Range: 121.5/406 MHz

Installation Instructions

- 1.) Mounting location should be on the top of the aircraft at least 24" from any other metal protrusions. Typically mounted aft of passenger/baggage area and forward of vertical stabilizer.
- 2.) Drill mounting hole (see options below) through the aircraft skin at desired location. Remove all burrs from around edge to allow proper seating of moisture seal.
- 3.) Disassemble antenna by removing the hex nut, lock washer and nameplate as show in the illustration.
- 4.) Insert the antenna through the mounting hole from the outside of the aircraft.
- 5.) Slide nameplate and lock washer over the BNC connector of the antenna from the inside of the aircraft. Thread the hex nut onto the BNC connector and tighten securely.
- 6.) Connect the antenna to the ELT using a cable with a BNC type connector attached (not supplied).

The conditions and tests for TSO approval of this article are minimum performance standards. Those installing this article, on or in a specific type or class of aircraft, must determine that the aircraft installation conditions are within the TSO standards. TSO articles must have separate approval for installation in an aircraft. The article may be installed only according to 14 CFR part 43 or the applicable airworthiness requirement.

